

Rotronic Product Catalogue



Rotronic measuring instruments: precision at the highest level

Based in Switzerland and established in 1965, Rotronic offers a wide range of handheld instruments, transmitters, (industrial) probes, data loggers, OEM products and monitoring systems. A world leader in relative humidity and temperature measurement, our portfolio also includes solutions for water activity, CO₂ and differential pressure. We thus cover a wide range of applications from the pharmaceutical and food industries to HVAC and meteorology.



Rotronic Monitoring System: modular, flexible and reliable

The Rotronic Monitoring System is a modular IoT system of interconnected hardware elements and software (on-premises or cloud options). It enables maximum flexibility in installation and guarantees excellent availability of the data during operation. The data loggers record all measurements by Rotronic and third-party sensors and transmit them to the database, which stores all the information reliably. Authorized users can access their data at any time via the browser/Internet from a PC, Mac, tablet or smartphone and set alarms according to defined events



Rotronic – a PST company

Within the Process Sensing Technologies (PST) Group, Rotronic is the competence center for relative humidity and cloud-based monitoring systems. PST unites leading manufacturers who together offer a comprehensive and complementary suite of instruments, analyzers and sensors unmatched by other suppliers. PST opens up new areas of application for Rotronic and our customers benefit from a broader product range and sales network within the PST Group.



Guarantee and services

Rotronic products guarantee reliability: we offer validated software and products that comply with international regulations such as GAMP and FDA.

- Highest accuracy at ± 0.5 %RH
- ISO 9001 quality with factory adjustment certificate
- ISO 17025 accredited calibration laboratories in CH, DE (SCS0065)
- ISO 17025 accredited laboratories in UK, USA
- Validated software
- Products compliant to current industry standards
- 24 months product warranty (12 months for HG2 calibration system and AwTherm water activity measuring instrument)
- More than 50 years of experience in humidity measurement
- Eco-friendly, professional and free disposal of old devices and accessories



Humidity and Temperature



| | |
|----------------------|----|
| Probes & Filters | 5 |
| Transmitters | 22 |
| Data loggers | 42 |
| Handheld instruments | 46 |
| Calibration | 50 |
| Accessories | 55 |

Temperature



| | |
|--------------|----|
| Probes | 63 |
| Transmitters | 65 |
| Data loggers | 68 |

Differential pressure



| | |
|--------------|----|
| Transmitters | 71 |
|--------------|----|

CO₂



| | |
|---------------------|----|
| Data Loggers | 75 |
| Handheld instrument | 77 |
| Technical data | 78 |

Applications



| | |
|----------------|----|
| Water activity | 80 |
| Meteorology | 87 |
| Cleanrooms | 95 |
| ATEX | 98 |

Rotronic Monitoring System – RMS



| | |
|--------------|-----|
| Introduction | 102 |
| Software | 104 |
| Hardware | 106 |
| Accessories | 123 |

Software



| | |
|-----|-----|
| HW5 | 127 |
|-----|-----|

EcoLine – Humidity & Temperature



| | |
|--------------------------------------|-----|
| Humidity and Temperature probes | 130 |
| Humidity and temperature transmitter | 134 |
| Humidity calibrator | 137 |

Services



| | |
|---------------------------------------|-----|
| Consultation, Validation, Calibration | 141 |
| Mapping | 143 |
| Seminar, Repair | 144 |
| Equipment hire | 145 |

Theory



| | |
|--------------------------------------|-----|
| Measurement parameters: fundamentals | 147 |
|--------------------------------------|-----|

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Video Humidity

Interested? Then scan the QR code!



Standard and high precision probes

HC2A-S / HC2A-S-HH / HC2A-S3 and HC2A-SH/HC2A-S3H

The HC2A-S / HC2A-S-HH / HC2A-S3 is the most versatile probe from Rotronic and forms the basis of the product portfolio. It measures humidity and temperature and calculates the dew/frost point. The HC2A-SH/HC2A-S3H fulfills the highest demands for measuring accuracy.

APPLICATIONS

HVAC, food industry, building services equipment, paper, textile and pharmaceutical industries.

FEATURES

- Accuracy: standard probe (HC2A-S / HC2A-S-HH): ± 0.8 %rh, ± 0.1 K, at 10...30 °C
- Accuracy: high precision probe (HC2A-SH): ± 0.5 %rh, ± 0.1 K, at 10...30 °C
- Range of application: -50...100 °C / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V or Default analog scaling/
outputStandard: adjusted at 23 °C and 10, 35, 80 %rh
- High precision: adjusted at 23 °C and 10, 20, 30, 40, 50, 60, 70, 80, 90 %rh, then calibrated at 20, 50, 80 %rh
- Standard analog output scaling: 0...1 V = -40...60 °C / 0...100 %rh


| Order code | HC2A-S / HC2A-S-HH / HC2A-S3 | HC2A-SH / HC2A-S3H |
|------------------------|---|---|
| Probe type | S: black, S3: white | SH: black, S3H: white |
| Dimensions | Ø 15x108 mm | |
| Range of application | -50...100 °C, 0...100 %rh | |
| Accuracy | HC2A-S-HH: ± 1.0 %rh, ± 0.1 K at 10...30 °C (10...90 %rh) | ± 0.5 %rh, ± 0.1 K at 10...30 °C (10...90 %rh) |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC | |
| Current consumption | ~4.5 mA | |
| Long-term stability | <1 %rh / year | |
| Sensor type | ROTRONIC HYGROMER® HT-1 (HC2A-S-HH: HH-1), PT100 1/3 Class B | |
| Filter type | S: polyethylene white, 40 µm S3: polyethylene white, 40 µm | SH: polyethylene white, 40 µm S3H: polyethylene white, 40 µm |
| Response time | <15 s, without filter | |
| Max. wind velocity | 3 m/s, without filter 20 m/s with polyethylene filter | |
| Housing material | Polycarbonate | |
| Weight / IP protection | 10 g / IP65 | |

The HC2A-S-HH is especially suitable for environments with hydrogen peroxide (H₂O₂) using the Hygromer®HH-1 sensor, without any filter.



HC2A-S
HC2A-SH

HC2A-S3
HC2A-S3H

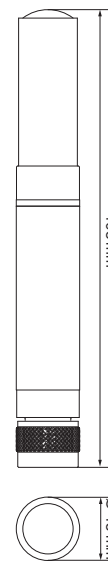

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5
- Meteorology transmitters MP102H, MP402H

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Polyethylene filter

Recommended accessories

- Mounting flange AC5005
- Filters
- Extension cable 2 m, black E2-02A
- Adapter cable, open ends, 2 m E2-02XX-ACT/01
- Calibration device ER-15
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

Meteorological Probe

HC2A-S3A

The HC2A-S3A probe is the meteorological probe with a white housing but with a different filter (Wire-mesh filter with 10 µm filter pore size suitable for meteorological applications). It measures relative humidity and temperature and calculates the dew/frost point and is designed for the use in Rotronic meteorological applications.

APPLICATIONS

Meteorology, weather stations, snow cannon

FEATURES

- Accuracy: ±0.8 %rh, ±0.1 K, at 10...30 °C
- Range of application: -50...80 °C¹ / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard analog output scaling: 0...1 V = -40...60 °C / 0...100 %rh


| Order code | HC2A-S3A |
|------------------------|---|
| Probe type | white |
| Dimensions | Ø 15 x 108 mm |
| Range of application | -50...80 °C ¹ , 0...100 %rh |
| Accuracy | ±0.8 %rh, ±0.1 K at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC |
| Current consumption | ~4.5 mA |
| Long-term stability | <1 %rh / year ² |
| Sensor type | ROTRONIC HYGROMER® HM1-SK PT100 1/3 Class B |
| Filter type | wire mesh 1.4401, 10 µm |
| Response time | <15 s, without filter |
| Max. wind velocity | 3 m/s, without filter |
| Housing material | Polycarbonate |
| Weight / IP protection | 10 g / IP65 |

*1: The sensor withstands only 60 °Cdp

*2: Drift < 1%rh per year with clean air or ismilar (see also pollutant table in the catalogue)



HC2A-S3A

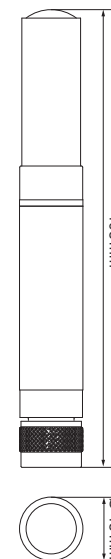

Compatible

- | | |
|--------------------------------|------------------|
| • Handheld instruments | HP32 |
| • Transmitters | HF5, PF4, PF5 |
| • Meteorology transmitters | MP102H, MP402H |
| • Naturally Ventilated Shields | AC1000 |
| • Actively Ventilated Shields | RS12-T or RS24-T |

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Wire-mesh filter

Recommended accessories

- | | |
|--|----------|
| • Mounting flange | AC5005 |
| • Filters | |
| • Extension cable 5 m, white | E3-05A |
| • Calibration device | ER-15 |
| • Humidity standard for calibration 10 %rh | EA10-SCS |
| • Humidity standard for calibration 35 %rh | EA35-SCS |
| • Humidity standard for calibration 80 %rh | EA80-SCS |

Industrial probes, steel

The HC2A-SM is the robust probe from Rotronic for harsh environments and adds to the wide product portfolio. It measures humidity and temperature and calculates the dew/frost point.

APPLICATIONS

Food, paper, textile, pharmaceutical and cosmetic industries.


FEATURES

- Accuracy: ± 0.8 %rh, ± 0.1 K, at 10...30 °C
- Range of application: -50...100 °C / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard analog output scaling: 0...1 V = -40...60 °C / 0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh

| Order code | HC2A-SM |
|------------------------|---|
| Probe type | Chrome steel standard |
| Dimensions | Ø 15 x 109 mm |
| Range of application | -50...100 °C, 0...100 %rh |
| Accuracy | ± 0.8 %rh, ± 0.1 K, at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC |
| Current consumption | ~4.5 mA |
| Long-term stability | <1 %rh / year |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B |
| Filter type | Wire mesh filter |
| Response time | <15 s, without filter |
| Max. wind velocity | 3 m/s, without filter 25 m/s with wire mesh filter |
| Housing material | Stainless steel 1.4301 |
| Weight / IP protection | 47 g / IP65 |



HC2A-SM

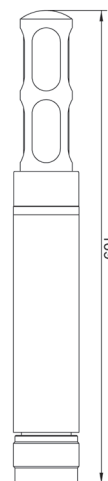

Available with ATEX certificate

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Wire mesh filter

Recommended accessories

- Mounting gland AC1303-M
- Filters
- Extension cable 2 m, metal connector E2-02A-M
- Calibration device ER-15
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

Industrial cable probes

The Rotronic industrial probe is especially suitable for high temperatures and demanding industrial environments. It measures humidity and temperature and calculates the dew/frost point.

APPLICATIONS

Production environments, high temperatures, industrial manufacturing, drying processes, climate chambers.

FEATURES

- Accuracy: $\pm 0.8\%$ rh, ± 0.1 K, at 10...30 °C
- Range of application: -100...200 °C¹ (HC2-HK40)/0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard analog output scaling: 0...1 V = -40...60 °C/0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh

Industrial probes


Ø 15 mm

| Order code | HC2A-IC1xx* | HC2A-IC302 |
|--|--|--------------|
| Dimensions | Ø15 x 144 mm | Ø15 x 294 mm |
| Accuracy | $\pm 0.8\%$ rh, ± 0.1 K, at 10...30 °C | |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA | |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B | |
| Response time | <15 s, without filter | |
| Material | PPS, stainless steel 1.4301 | |
| Weight | 230 g | 260 g |
| * xx = cable length in meters (02, 05), 80 g per meter cable | | |

Industrial probes

Ø 15/25 mm

| Order code | HC2A-IC402-A | HC2A-IC702-A |
|---------------|--|-----------------|
| Dimensions | Ø15/25 x 428 mm | Ø15/25 x 728 mm |
| Accuracy | $\pm 0.8\%$ rh, ± 0.1 K, at 10...30 °C | |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA | |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B | |
| Response time | <15 s, without filter | |
| Material | PPS, stainless steel 1.4301 | |
| Weight | 320 g | 380 g |

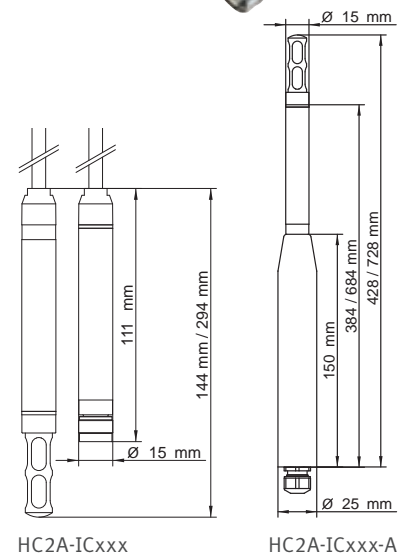

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5

Delivery package

- Factory adjustment certificate

Recommended accessories

- Filters
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

¹ Peak load: 100 h
Permissible continuous load: 190 °C

Industrial cable probes, steel

The metal industrial probe is especially suitable for high temperatures, demanding industrial environments and applications where hygiene plays an important role. The probe measures humidity and temperature and calculates the dew/frost point.

APPLICATIONS

Food and pharmaceutical production, drying processes, industrial manufacturing.

FEATURES

- Accuracy: $\pm 0.8\%rh$, $\pm 0.1\text{ K}$, at $10...30\text{ }^\circ\text{C}$
- Range of application: $-100...200\text{ }^\circ\text{C}^1$, (screw-in probe; $-100...200\text{ }^\circ\text{C}^1$) / $0...100\%rh$
- Digital interface (UART) and scalable analog outputs, $0...1\text{ V}$
- Standard output scaling: $0...1\text{ V} = -40...60\text{ }^\circ\text{C}$ / $0...100\%rh$
- Adjusted at $23\text{ }^\circ\text{C}$ and 10, 35, 80 %rh

Steel industrial probes


Ø 15/25 mm

| Order code | HC2A-IM102-M | HC2A-IM3xx-M* |
|--|---|---------------|
| Dimensions | Ø15 x 130 mm | Ø15 x 280 mm |
| Accuracy | $\pm 0.8\%rh$, $\pm 0.1\text{ K}$, at $10...30\text{ }^\circ\text{C}$ | |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: $\sim 4.5\text{ mA}$ | |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B | |
| Response time | <15 s, without filter | |
| Housing material | Stainless steel, DIN 1.4301 | |
| Weight | 260 g | 400 g |
| * xx = cable length in meters (02, 05), 80 g per meter cable | | |

Screw-in probes

Ø 15 mm

| Order code | HC2A-IE02-G | HC2A-IE02-NPT |
|------------------|---|--------------------------------|
| Probe type | ½" G with Rotronic connector | ½" NPT with Rotronic connector |
| Accuracy | $\pm 0.8\%rh$, $\pm 0.1\text{ K}$, at $10...30\text{ }^\circ\text{C}$ | |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: $\sim 4.5\text{ mA}$ | |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B | |
| Pressure | Pressure resistant to 100 bar / 1450 PSI | |
| Response time | <15 s, without filter | |
| Housing material | Stainless steel, DIN 1.4301 | |
| Weight | 290 g | |

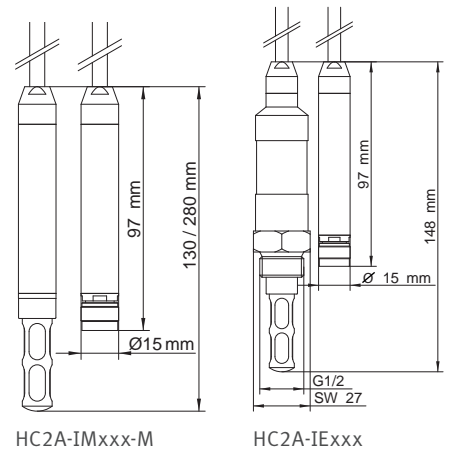

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5

Delivery package

- Factory adjustment certificate

Recommended accessories

- Filters
 - Calibration device (HC2A-IM) ER-15
 - Humidity standard for calibration 10 %rh EA10-SCS
 - Humidity standard for calibration 35 %rh EA35-SCS
 - Humidity standard for calibration 80 %rh EA80-SCS
- ¹ Peak load: 100 h
Permissible continuous load: 190 °C

High temperature handheld probes

The handheld probe is especially suitable for portable measurements of high temperatures. It measures humidity and temperature and calculates the dew/frost point.


APPLICATIONS

Climate and temperature chambers, dryers, air ducts.

FEATURES

- Accuracy: ± 0.8 %rh, ± 0.1 K, at 10...30 °C
- Range of application: -100...170 °C/200 °C¹ / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard output scaling: 0...1 V = -40...60 °C / 0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh

| Order code | HC2-HK25 | HC2-HK40 |
|------------------|--|---------------|
| Probe type | Handheld probe | |
| Dimensions | Ø 15 x 250 mm | Ø 15 x 400 mm |
| Accuracy | ± 0.8 %rh, ± 0.1 K, at 10...30 °C | |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA | |
| Sensor type | ROTRONIC HYGROMER® IN-1, PT100 1/3 Class B | |
| Response time | <15 s, without filter | |
| Housing material | PEEK, brass, chemically nickel-plated | |
| Weight | 210 g | 240 g |
| Filter | Wire mesh filter | |
| Cable length | 2 m | |

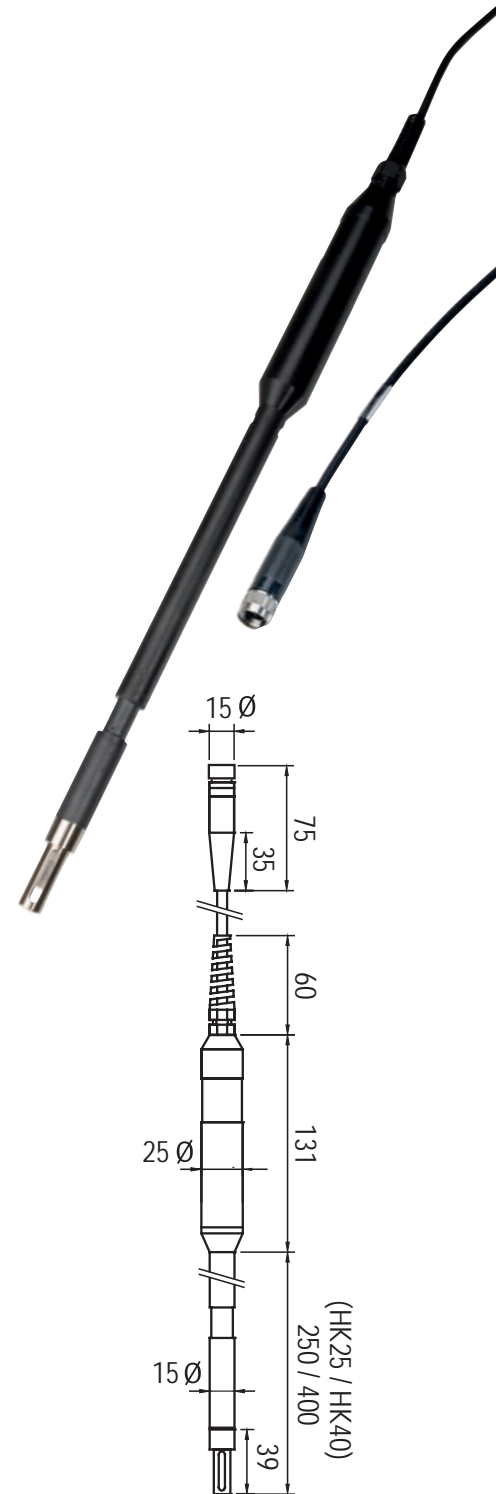

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5

Delivery package

- Factory adjustment certificate
- Wire mesh filter

Recommended accessories

- Filters ER-15
- Calibration device EA10-SCS
- Humidity standard for calibration 10 %rh EA35-SCS
- Humidity standard for calibration 35 %rh EA80-SCS
- Humidity standard for calibration 80 %rh

¹ Short-term peak load (3 x 5 min)

HygroWin USB probe

The USB probe measures humidity and temperature.

APPLICATIONS

Residential and office

FEATURES

- Connects directly to a PC on a USB port
- Range of application: -50...100 °C / 0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh

| Order code | HC2A-WIN-USB-1 |
|------------------|--|
| Probe type | HC2A probe with direct USB connection |
| Accuracy | ±0.8 %rh, ±0.1 K, at 10...30 °C |
| Power supply | Via USB cable |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B |
| Filter type | Polyethylene standard filter, 20 µm, gray |
| Response time | <15 s, without filter |
| Weight | 110 g |
| Housing material | Polycarbonate |
| Cable length | 3 m |



Delivery package

- Factory adjustment certificate
- HW5 (free software)
- Service and adapter cable AC3001

Recommended accessories

- Calibration device ER-15
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

Miniature probes

The miniature probe is used for humidity and temperature measurement in confined spaces. It also calculates the dew/frost point and can be installed discretely. The 4 mm probe has a spike tip for insertion in walls.


APPLICATIONS

Museums, glass cabinets, building material tests, automotive and aviation industries, testing laboratories, paper, textile and pharmaceutical industries.


FEATURES

- Accuracy: $\pm 1.5\%rh$, $\pm 0.3\text{ K}$, at $10...30\text{ }^\circ\text{C}$
- Range of application: $-40...85\text{ }^\circ\text{C}/0...100\%rh$
- Digital interface (UART) and scalable analog outputs, $0...1\text{ V}$
- Standard output scaling: $0...1\text{ V} = -40...60\text{ }^\circ\text{C}/0...100\%rh$
- Adjusted at $23\text{ }^\circ\text{C}$ and 10, 35, 80 %rh

| Order code | HC2-C04 | HC2-C05 |
|------------------|---|--|
| Probe type | Cable probe, $\varnothing 4\text{ mm}$ | Cable probe, $\varnothing 5\text{ mm}$ |
| Accuracy | $\pm 1.5\%rh$, $\pm 0.3\text{ K}$, at $10...30\text{ }^\circ\text{C}$ | |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: $\sim 4.5\text{ mA}$ | |
| Sensor type | ROTRONIC HYGROMER [®] IN-1, PT100 1/3 Class B | |
| Response time | <15 s, without filter | |
| Housing material | Stainless steel, DIN 1.4305 | Brass, nickel-plated |
| Weight | 85 g | 85 g |
| Cable length | 2 m | |

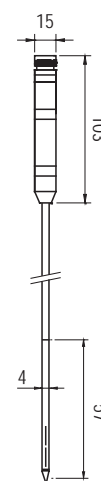

HC2-C04

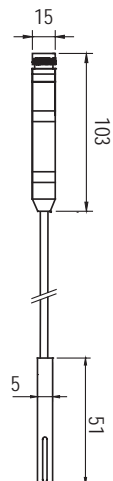

HC2-C05

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5

Delivery package

- Factory adjustment certificate

Recommended accessories

- Extension cable 2 m, black E2-02A
- Teflon filter for HC2-C05 SP-T05
- Calibration device ER-05
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

Insertion probes

Ø 5 mm / 10 mm

The insertion probe is suitable for measurement in dust-free (P05) or dusty (HP28/50) bulk materials, bricks, concrete, etc. It measures humidity and temperature and calculates the dew/frost point.

APPLICATIONS


Water activity measurement
 Portable measuring units with handheld instruments

FEATURES

- Accuracy: ±0.8/1.5 %rh, ±0.1/0.3 K, at 10...30 °C
- Range of application: -40...85 °C / 0...100 %rh
- Digital interface (UART)
- Standard output scaling: 0...1 V = -40...60 °C / 0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh

| Order code | HC2-P05 |
|---------------|--|
| Probe type | Ø 5 x 200 mm, insertion probe with laser cut slots |
| Accuracy | ±1.5 %rh, ±0.3 K, at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA |
| Filter type | No filter available |
| Sensor type | ROTRONIC HYGROMER® IN-1, PT100 1/3 Class B |
| Response time | <15 s |
| Material | Stainless steel DIN 1.4305 (probe), POM (handle) |
| Weight | 160 g |
| Cable length | 2 m |

| Order code | HC2-HP28 |
|---------------|--|
| Probe length | Ø10 x 280 mm |
| Accuracy | ±0.8 %rh, ±0.1 K, at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA |
| Filter type | Sintered steel |
| Sensor type | ROTRONIC HYGROMER® IN-1, PT100 1/3 Class B |
| Response time | <20 s, with filter |
| Material | Stainless steel DIN 1.4305 (probe), POM (handle) |
| Weight | 200 g |
| Cable length | 2 m |

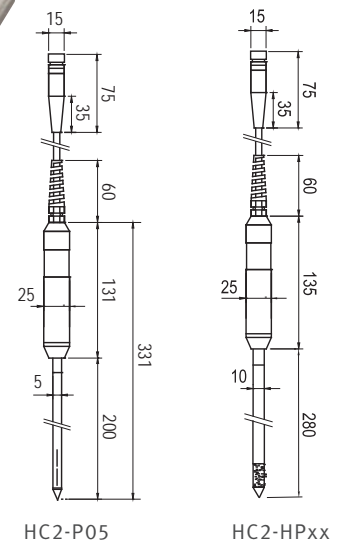

HC2-P05

HC2-HPxx

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5
- Laboratory analyzer HygroLab

Delivery package

- Factory adjustment certificate

Recommended accessories

- Replacement filter (HC2-HP28 / 50 sintered steel) ET-Z10
- Calibration device HC2-P05 ER-05
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

Sword probes


APPLICATIONS

Paper, printing and textile industries with handheld instruments.

FEATURES

- Accuracy: $\pm 0.8\%$ rh, ± 0.1 K, at 10...30 °C
- Range of application: -40...85 °C / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard output scaling: 0...1 V = -40...60 °C / 0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh

| Order code | HC2-HS28 |
|---------------|--|
| Probe length | 280 mm |
| Accuracy | $\pm 0.8\%$ rh, ± 0.1 K, at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA |
| Filter type | No filter |
| Sensor type | ROTRONIC HYGROMER® IN-1, PT100 1/3 Class B |
| Response time | <15 s |
| Material | Aluminum (probe), POM (handle) |
| Weight | 220 g |
| Cable length | 2 m |

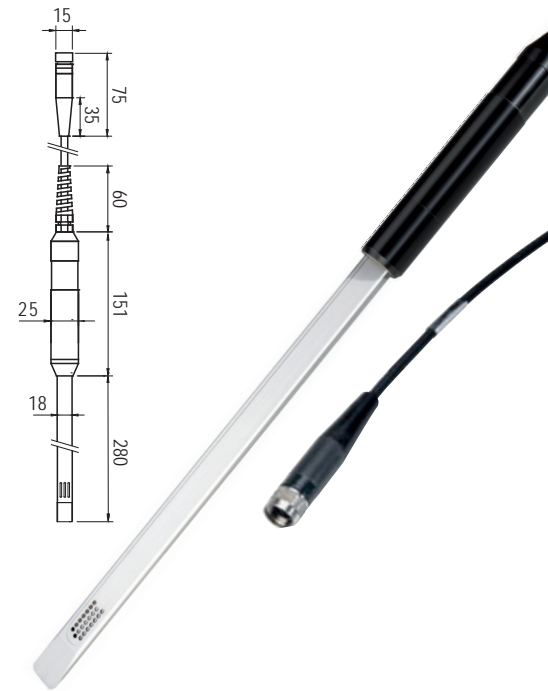

Compatible

- Handheld instruments HP32
- Transmitters HF5, PF4, PF5

Delivery package

- Factory adjustment certificate

Recommended accessories

- Calibration device (sword probe) EGS
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

XD OEM probes

Thanks to its wide power supply range and freely selectable output signals, the XD OEM probe is suitable for a wide variety of applications.

APPLICATIONS

HVAC, climate chambers, snow guns and meteorology.

FEATURES

- Accuracy: ± 0.8 %rh, ± 0.2 K, at 10...30 °C
- Housing colors: black
- Range of application: -40...85 °C / 0...100 %rh
- UART digital interface
- Various voltage outputs available
- Adjusted at 23 °C and 10, 35, 80 %rh
- Freely scalable output signals: 0...1/5/10 VDC*

| Order code | XD3xA-S3X* |
|--|--|
| Housing color | Black |
| Range of application | -40...85 °C |
| Accuracy | ± 0.8 %rh, ± 0.2 K, at 10...30 °C |
| Power supply | 5...24 VDC / 5...16 VAC (0...1 V) 16...24 VDC / 12...16 VAC (all output versions) |
| Current consumption | <12 mA |
| Long-term stability | <1 %rh / year |
| Sensor type | ROTRONIC HYGROMER® HT-1, PT100 1/3 Class B |
| Filter type | Polyethylene standard filter, 20 µm, white |
| Response time | <15 s, without filter |
| Housing material | Polycarbonate |
| Weight | 20 g |
| * x = Output (3: 0...1 V, 4: 0...5 V, 5: 0...10 V) | |

Note: Not compatible with Rotronic data loggers, transmitters or handheld instruments.



Delivery package

- Factory adjustment certificate
- Polyethylene filter
- Short instruction manual

* Requires optional HW5 software and service cable

Recommended accessories

- Mounting flange AC5005
- Filters
- Extension cable 2 m, with open ends, black E2-02XX
- Calibration device ER-15
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS
- Service cable to PC XD-AC3001

Filter / Carrier HC2A advanced probes

DESCRIPTION

Filter carriers protect the humidity and temperature sensors against mechanical damage. Filters act as a protective barrier against contaminants/pollutants that can influence the sensor. When choosing the correct combination of filter carrier and filter there are many factors to consider. Specific conditions such as high air velocities, pollutants in the air, disinfection and cleaning routines, mechanical impacts, high bioactivity, condensation, airborne chemical contaminants and required response time are some of the many considerations.




| Plastic filter carrier | Metal filter carrier |
|---|---|
| <ul style="list-style-type: none"> • Maximum temperature 100 °C • Mechanical protection  | <ul style="list-style-type: none"> • Maximum temperature 200 °C • Mechanical protection  |

| Overview filters | Teflon filters | Polyethylene filters | Sintered steel filters (stainless steel) | Wire mesh filters (metal) |
|---|----------------|----------------------|--|---------------------------|
| Maximum temperature (consider range of application of filter carrier) | 200 °C | 100 °C | 200 °C | 200 °C |
| Protection against particulates | ✓✓ | ✓✓ | ✓ | ✓ |
| Protection against abrasives in the air | | | ✓✓✓ | ✓ |
| Pore size | 10 µm | 40 µm | 25 µm | 10 µm |
| Max. air velocity [m/s] (continuous load) | 50 | 50 | 70 | 50 |


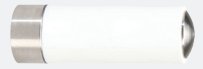

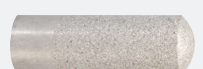

✓ = low ✓✓ = medium ✓✓✓ = high

| Range of application (temp.) | | Overview probes | | | | | | | | | | |
|------------------------------|--------------|-----------------|---------|---------|----------|-----------|---------|------------|--------------|--------------|--------------|------------|
| | | -50...100 °C | | | | | | -40...85°C | -100...200°C | | | |
| Filters & carriers | Probe | HC2A-S | HC2A-S3 | HC2A-SH | HC2A-S3H | HC2A-S-HH | HC2A-SM | XD33A-S3X | HC2A-ICxxx | HC2A-ICxxx-A | HC2A-IMxxx-M | HC2A-IExxx |
| | | -50...100 °C | SPA-PCB | | ✓ | | | | ✓ | | | |
| | | SPA-PCW | | ✓ | | | | ✓ | | | | |
| | -100...200°C | SPA-SS | | ✓ | | | ✓ | ✓ | | ✓ | | |
| | -50...100 °C | SPA-PCB-PE | | | ✓ | | | | ✓ | | | |
| SPA-PCB-PTFE | | | | ✓ | | | | ✓ | | | | |
| SPA-PCB-WM | | | | ✓ | | | | ✓ | | | | |
| SPA-PCW-PE | | | | ✓ | | | | ✓ | | | | |
| SPA-PCW-PTFE | | | | ✓ | | | | ✓ | | | | |
| SPA-PCW-WM | | | | ✓ | | | | ✓ | | | | |
| -100...200°C | SPA-SS-PE | | | ✓ | | | ✓ | ✓ | | | | |
| | SPA-PE | | | ✓ | | | ✓ | ✓ | | | | |
| | SPA-SS-PTFE | | | ✓ | | | ✓ | ✓ | | ✓ | | |
| | SPA-SS-WM | | | ✓ | | | ✓ | ✓ | | ✓ | | |
| | SPA-SSS | | | ✓ | | | ✓ | ✓ | | ✓ | | |
| | SPA-WM | | | ✓ | | | ✓ | ✓ | | ✓ | | |
| | SPA-PTFE | | | ✓ | | | ✓ | ✓ | | ✓ | | |
| | | | | | | | | | | | | |


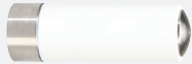



HC2A-S / HC2A-S3 / HC2A-SH / HC2A-S3H / HC2A-S-HH / HC2A-SM

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|--|--------------------------------|--------------------------------|-----------|----------------------|---|
| SPA-PCB | Polycarbonate, black | No filter, only filter carrier | | -50...100 °C |  |
| SPA-PCB-PE | | Polyethylene, white | 40-50 µm | |  |
| SPA-PCB-PTFE | | PTFE, white | 10 µm | |  |
| SPA-PCB-WM | | Wire mesh 1.4401 | 10 µm | |  |
| SPA-PCW | Polycarbonate, white | No filter, only filter carrier | | -50...100 °C |  |
| SPA-PCW-PE | | Polyethylene, white | 40-50 µm | |  |
| SPA-PCW-PTFE | | PTFE, white | 10 µm | |  |
| SPA-PCW-WM | | Wire mesh 1.4401 | 10 µm | |  |
| SPA-PE | No filter carrier, only filter | Polyethylene, white | 40-50 µm | -100...200 °C |  |
| SPA-PTFE | No filter carrier, only filter | PTFE, white | 10 µm | |  |
| Particulate filter / Waterproof | | | | | |
| SPA-POM-FD2 | POM white | Teflon | 2 µm | -50...100 °C |  |
| SPA-PE-FD2 | POM white | Polyethylene | 2 µm | |  |

HC2A-IC / HC2A-IM / HC2A-IE

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|-------------|--------------------------------|--------------------------------|-----------|----------------------|---|
| SPA-SS | 1.4301 | No filter, only filter carrier | | -100...200 °C |  |
| SPA-SS-PTFE | | PTFE, white | 10 µm | |  |
| SPA-SS-WM | | Wire mesh 1.4401 | 10 µm | |  |
| SPA-SSS | Filter carrier incl. filter | Sintered steel 1.4404 | 25 µm | -100...200 °C |  |
| SPA-WM | No filter carrier, only filter | Wire mesh 1.4401 | 10 µm | |  |

HC2A-SM

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|-------------|--------------------------------|--------------------------------|-----------|----------------------|---|
| SPA-SS | 1.4301 | No filter, only filter carrier | | -50...100 °C |  |
| SPA-SS-PTFE | | PTFE, white | 10 µm | |  |
| SPA-SS-WM | | Wire mesh 1.4401 | 10 µm | |  |
| SPA-SSS | Filter carrier incl. filter | Sintered steel 1.4404 | 25 µm | -100...200 °C |  |
| SPA-WM | No filter carrier, only filter | Wire mesh 1.4401 | 10 µm | |  |

Note

The range of application depends on the component with the smallest temperature range.

Filter / Carrier HC2 probes

DESCRIPTION





Filter carriers protect the humidity and temperature sensors against mechanical damage. Filters act as a protective barrier against contaminants/pollutants that can influence the sensor. When choosing the correct combination of filter carrier and filter there are many factors to consider. Specific conditions such as high air velocities, pollutants in the air, disinfection and cleaning routines, mechanical impacts, high bioactivity, condensation, airborne chemical contaminants and required response time are some of the many considerations.

| Plastic filter carrier | Metal filter carrier |
|---|---|
| <ul style="list-style-type: none"> • Maximum temperature 120 °C • Mechanical protection | <ul style="list-style-type: none"> • Maximum temperature 200 °C • Mechanical protection |
|  |  |





| Overview filters | Teflon filters | Polyethylene filters | MFD filters (membrane) | Polypropylene filters (screen) | Sintered steel filters (stainless steel) | Wire mesh filters (metal) |
|---|----------------|----------------------|------------------------|--------------------------------|--|---------------------------|
| Maximum temperature (consider range of application of filter carrier) | 200 °C | 100 °C | 120 °C | 120 °C | 200 °C | 200 °C |
| Protection against particulates | ✓✓ | ✓✓ | ✓ | | ✓ | ✓ |
| Protection against abrasives in the air | | | | | ✓✓✓ | ✓ |
| Fast response time (low damping) | | | ✓ | ✓✓ | | |
| Pore size | 10 µm | 40 µm | - | 150 µm | 25 µm | 10 µm |
| Max. air velocity [m/s] (continuous load) | 50 | 50 | 15 | 10 | 70 | 50 |

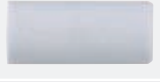✓ = low ✓✓ = medium ✓✓✓ = high


Suitable for standard probes HC2-S / HC2-S3 / Thread: Rotronic round thread

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|--|-------------------------|---------------------------------|------------|----------------------|---|
| NSP-PCB-PE | Polycarbonate, black | Polyethylene, gray | 20 µm | -50...100 °C |  |
| NSP-PCB-PE40 | | Polyethylene, white | 40 µm | | |
| NSP-PCB-WM | | Wire mesh | 20...25 µm | | |
| NSP-PCB-TF | | Teflon | 10 µm | | |
| NSP-PCB-MFD | | MFD | - | | |
| NSP-PCB-PP100 | | Polypropylene | 150 µm | | |
| NSP-PCB | | No filter element, only carrier | | | |
| NSP-PCW-PE | Polycarbonate, white | Polyethylene, gray | 20 µm | -50...100 °C |  |
| NSP-PCW-PE40 | | Polyethylene, white | 40 µm | | |
| NSP-PCW-WM | | Wire mesh | 20...25 µm | | |
| NSP-PCW-TF | | Teflon | 10 µm | | |
| NSP-PCW | | No filter element, only carrier | | | |
| NSP-PE | No carrier, only filter | | 20 µm | -50...100 °C |  |
| Particulate filter / Waterproof | | | | | |
| NSP-POM-FD2 | POM, white | Teflon | 2 µm | -50...100 °C |  |


Suitable for industrial probes HC2-IC / HC2-HK
Thread: Rotronic round thread

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|--------------------|-----------------------------------|------------------------------|------------|----------------------|---|
| NSP-ME-WM | Brass, nickel-plated | Wire mesh DIN 1.4401 | 20...25 µm | -100...200 °C |  |
| NSP-ME-SS | | Sintered steel DIN 1.4401 | 5 µm | -100...200 °C |  |
| NSP-ME-TF | | Teflon | 10 µm | -80...200 °C |  |
| Spare parts | | | | | |
| SP-M15 | No filter carrier, only filter | Wire mesh DIN 1.4401 | 20...25 µm | -100...200 °C |  |
| SP-S15 | No filter carrier, only filter | Sintered steel DIN 1.4401 | 5 µm | -100...200 °C |  |
| SP-T15 | No filter carrier, only filter | Teflon | 10 µm | -80...200 °C |  |


Suitable for industrial probes HC2-IM / HC2-IE
Thread: M12 x 1.5
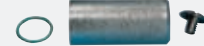
| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|--------------------|-----------------------------------|---------------------------------|------------|----------------------|---|
| SP-MC15 | Brass, nickel-plated | Wire mesh DIN 1.4401 | 20...25 µm | -100...200 °C |  |
| SP-SC15 | | Sintered steel DIN 1.4401 | 5 µm | -100...200 °C |  |
| SP-TC15 | | Teflon | 10 µm | -80...200 °C |  |
| Spare parts | | | | | |
| SP-MSB15 | Brass, nickel-plated | No filter element, only carrier | | -100...200 °C |  |
| SP-M15 | No filter carrier, only filter | Wire mesh DIN 1.4401 | 20...25 µm | -100...200 °C |  |
| SP-S15 | No filter carrier, only filter | Sintered steel DIN 1.4401 | 5 µm | -100...200 °C |  |
| SP-T15 | No filter carrier, only filter | Teflon | 10 µm | -80...200 °C |  |


Suitable for handheld probes HC2-HP28/HP50

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|------------|--------------------------------|------------------------------|-----------|----------------------|---|
| ET-Z10 | No filter carrier, only filter | Sintered steel DIN 1.4401 | 15 µm | -40...85 °C |  |

Suitable for HF3 type R & S

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|------------|---------------------|--------------------|-----------|----------------------|---|
| NSP-PCG-PE | Polycarbonate, gray | Polyethylene, gray | 20 µm | -40...85 °C |  |


Suitable for HF3 type D & W

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|------------|----------------------|---------------------|-----------|----------------------|---|
| SPA-PCW-PE | Polycarbonate, white | Polyethylene, white | 40-50 µm | -50...100 °C |  |


Suitable for MP100A/400A

| Order code | Filter carrier | Filter element | Pore size | Range of application | |
|------------|----------------------|----------------|-----------|----------------------|---|
| SP-W3-25 | Polycarbonate, white | Wire mesh | 20 µm | -40...85 °C |  |

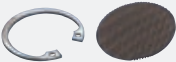


Suitable for web and water activity probes AwEasy, HC2A-AW-USB, HC2A-AW, HC2-AW-USB, HC2-AW

| Order code | Description | |
|------------|--|---|
| ET-W24-Set | Flat wire mesh filter with circlip, Ø 24 mm for HC2-AW (-USB) Pore size: 20...25 µm |  |


Suitable for HF1, CP11, CL11

| Order code | Description | |
|---------------|---|---|
| NSP-PCB-PE-AZ | Polycarbonate filter for HF1, CP11, CL11, CF1 |  |

The HygroFlex series

| |  |  |  |
|--|--|--|---|
| Transmitters | HF1 | HF3 | HF4 |
| Range of application electronics with display option | -20...60 °C -20...60 °C | -40...60 °C -10...60 °C | -40...60 °C -10...60 °C |
| Temperature limits at probe | -20...60 °C | -40...60 °C | -50...100 °C |
| Accuracy at 23 °C | Type W & D & F: <± 2 %rh (10...90 %rh) at ±0.3 K Type S: <± 3 %rh (10...90 %rh) at ±1 K | ±2 %rh ±0.3 K | ±1 %rh ±0.2 K |
| Probes | | | |
| Probe connection | Not interchangeable | Not interchangeable | Not interchangeable |
| Housing | | | |
| Space mount version | ✓ | ✓ | |
| Wall version | ✓ | ✓ | ✓ |
| Duct version, 15 mm probe | ✓ | ✓ | ✓ |
| Duct version, 25/15 mm probe | | | |
| Cable version | | | |
| Display | ✓ | ✓ | ✓ |
| Keypad | | | ✓ |
| IP protection | IP65 (space mount version IP20) | IP65 (space mount version IP20) | IP65 |
| Power supply | | | |
| 15...40 VDC / 12...28 VAC | ✓ | ✓ | ✓ |
| 15...40 VDC / 12...28 VAC galvanically isolated | | | |
| 85...240 VAC galvanically isolated | | | |
| Power over Ethernet (POE) | | | |
| Output | | | |
| 2 or 2 x 2-wire: current output | 2x | 2x | 2x |
| 3/4-wire: current or voltage output | 2x | 2x | 2x |
| RS-485 | | | ✓ |
| Ethernet | | | |
| Wireless | | | |
| Analog and digital signals | | | |
| Functions | | | |
| Data logging | | | |
| Relay | | | |
| Hygostat / Thermostat | | | |
| Beep tone | | | |
| Analog input | | | |
| Psychrometric parameters | | Dew/Frost point | Dew/Frost point |

The HygroFlex series

| | | |
|--|--|----------------------------|
| |  | |
| Transmitters | HF5 / HS5 | HF732A |
| Range of application electronics with display option | -40...60 °C -10...60 °C | -40...85 °C -10...60 °C |
| Temperature limits at probe | Probe dependent | -100...200 °C (type D) |
| Accuracy at 23 °C | Probe dependent | ±1 %rh ±0.2 K |
| Probes | | |
| Probe connection | 1x interchangeable HC2 probe | Not interchangeable |
| Housing | | |
| Space mount version | | |
| Wall version | ✓ | |
| Duct version, 15 mm probe | ✓ | |
| Duct version, 25/15 mm probe | | ✓ |
| Cable version | | |
| Display | ✓ | |
| Keypad | ✓ | |
| IP protection | IP65 | IP65 |
| Power supply | | |
| 15...40 VDC / 12...28 VAC | ✓ | ✓ |
| 15...40 VDC / 12...28 VAC galvanically isolated | ✓ | |
| 85...240 VAC galvanically isolated | ✓ | |
| Power over Ethernet (POE) | | |
| Output | | |
| 2 or 2 x 2-wire: current output | 2x | |
| 3/4-wire: current or voltage output | 2x | 2x |
| RS-485 | ✓ | |
| Ethernet | ✓ | |
| Wireless | | |
| Analog and digital signals | ✓ | |
| Functions | | |
| Data logging | | |
| Relay | | |
| Hygostat / Thermostat | | |
| Beep tone | | |
| Analog input | | |
| Psychrometric parameters | All | Dew/Frost point |

HF1 series

HygroFlex1 is the low-cost series of HVAC transmitters for relative humidity and temperature. The devices are equipped with the tried-and-tested Hygromer® IN-1 sensor and boast unbeatable value for money. The freely available Rotronic HW5 software enables you to change the output scaling, calibrate the transmitter and adjust the humidity sensor.

FEATURES

- Accuracy: ± 2 %rh, ± 0.3 K, at 23 °C ± 5 K
- Range of application: -20...60 °C / 0...100 %rh
- Small size
- Easy mechanical installation
- USB service interface
- Adjusted at 35 %rh / 80 %rh

Power supply

- Low voltage: 2 x 2- or 3-wire

Signal outputs

- Current output
- Voltage output

Versions

- Space mount version with integrated probe
- Duct version (D & F)
- Wall version (W)

Output parameters

- Humidity & temperature

Output scaling

- Relative humidity: range selectable, standard 0...100 %rh
- Temperature: range selectable, standard: 0...50 °C

Display

- Display with or without backlight
- Without display



HF1 wall and duct versions

APPLICATIONS

Measures relative humidity and temperature in HVAC applications.

2 or 2x2-wire


| Order code | HF120 |
|-------------------|---|
| Output signal | 4...20 mA |
| Supply voltage | 10...28 VDC |
| Display | Optional (without backlight) |
| Temperature range | Scalable |
| Probes | Not interchangeable Standard, duct probe 100 mm (optional, duct probe 300 mm) |
| Filter type | Polyethylene |

3-wire


| Order code | HF13x |
|-------------------|---|
| Output signal | 0...10 V 4...20 mA Only voltage output can be changed |
| Supply voltage | 15...40 VDC / 12...28 VAC |
| Display | Optional (without backlight) |
| Temperature range | Scalable |
| Probes | Not interchangeable Standard, duct probe 100 mm (optional, duct probe 300 mm) |
| Filter type | Polyethylene |



Wall version

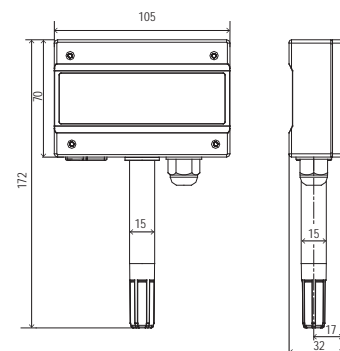

Duct version

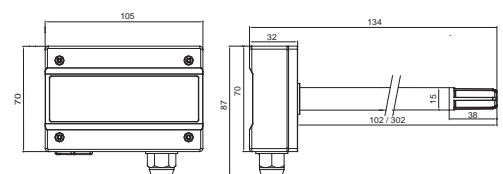

Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual

Recommended accessories

- USB service cable AC0003
- Calibration device ER-15
- Mounting flange AC5005

HF1 space mount version

APPLICATIONS


Offices or rooms where good looks are important.

2 or 2x2-wire

| | |
|-------------------|------------------------------|
| Order code | HF120 |
| Output signal | 4...20 mA |
| Supply voltage | 10...28 VDC |
| Display | Optional (without backlight) |

3-wire

| | |
|-------------------|--|
| Order code | HF13x |
| Output signal | 0...1 V / 0...5 V / 0...10 V / 4...20 mA Only voltage output can be changed |
| Supply voltage | 15...40 VDC / 12...28 VAC |
| Display | Optional (with backlight) |

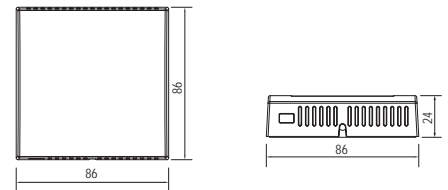

| Technical data | HF1 Analog 2-wire | HF1 Analog 3-wire |
|----------------------------------|---|--|
| General | | |
| Parameters | Humidity and temperature | |
| Housing material / IP protection | ABS / IP65, except type S IP20 | |
| Dimensions | 105 x 172 x 32 mm (type W), 105 x 87 x 134(334) mm (type D), 86 x 86 x 24 mm (type S) | |
| Weight | 140 g | |
| Probe connection | Fixed | |
| Filter material | Polyethylene | |
| Display | LCD, 1 or 2 decimals, without backlight | LCD, 1 or 2 decimals, with backlight |
| Electrical connections | Connections: screw terminals inside (type D/W) Cable gland: M12 | |
| Power supply | 10...28 VDC | 15...40 VDC / 12...28 VAC |
| Current consumption | 2x20 mA max. | <55 mA (current output) <15 mA (voltage output) |
| Range of application | -20...50 °C / 0...100 %rh (non-condensing) | |
| Service interface | USB-Mini | |
| CE / EMC compatibility | EMC Directive 2014/30/EU | |
| Humidity measurement | | |
| Sensor | ROTRONIC HYGROMER® IN-1 | |
| Measurement range | 0...100 %rh | |
| Accuracy at 23°C ±5 K | ±3.0 %rh (10...90 %rh) | |
| Long-term stability | <1.5 %rh/year | |
| Response time | <30 s τ63 (63 % increase 35...80 %rh) without filter | |
| Maximum wind velocity | 20 m/s with filter | |
| Temperature measurement | | |
| Sensor | NTC | |
| Measurement range | -20...50 °C / 0...100 °F | |
| Accuracy at 23°C ±5 K | ±0.3 K (type W, type D), ±1 K (type S) | |
| Response time | 4 s | |
| Analog output | | |
| Number | 2 | |
| Current | 4...20 mA | 4...20 mA |
| Voltage | N/A | 0...1/5/10 V |

HF3 series

The HygroFlex3 series is ideal for rooms where exact measurement of humidity and temperature is important. The transmitters can be used in a wide range of industries for HVAC applications, greenhouses, museums, storage rooms, libraries, swimming pools or for climate control in office buildings.

FEATURES

- Accuracy: $\pm 2\%rh$, $\pm 0.3\text{ K}$ at $23\text{ °C} \pm 5\text{ K}$
- Temperature limit at probe: $-40\text{...}60\text{ °C}$ / $0\text{...}100\%rh$
- Range of application electronics: $-40\text{...}60\text{ °C}$ / $0\text{...}100\%rh$
- $-10\text{...}60\text{ °C}$ with display
- Service interface
- Adjusted at 23 °C and 35, 80 %rh

Power supply

- Low voltage: 2x2- or 3-wire

Signal outputs

- Current output
- Voltage output

Versions

- Space mount version with integrated probe
- Space mount version with fixed probe, retractable
- Wall mount (W)
- Duct mount (D)

Output parameters

- Humidity & temperature *

Output scaling

- Relative humidity: range selectable, standard $0\text{...}100\%rh$
- Temperature: range selectable, standard: $0\text{...}50\text{ °C}$
- Dew point: range selectable

Display

- Display with or without backlight
- Without display

* Only scalable together with HW5 Software



HF3 space mount version

APPLICATIONS

Offices or rooms where good looks are important.

2 or 2x2-wire


| Order code | HF320 Type S | HF320 Type R |
|-------------------|---------------------------------|--------------|
| Output signal | 4...20 mA | |
| Supply voltage | 10...28 VDC | |
| Display | Optional (without backlight) | |
| Temperature range | Scalable* | |
| Probes | Fixed internal | Retractable |

3-wire


| Order code | HF33x Type S | HF33x Type R |
|-------------------|--|--------------|
| Output signal | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* | |
| Supply voltage | 18...40 VDC / 13...28 VAC | |
| Display | Optional (with backlight) | |
| Temperature range | Scalable* | |
| Probes | Fixed internal | Retractable |



Type R

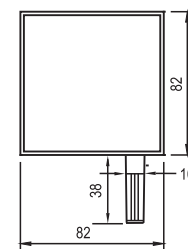

Type S

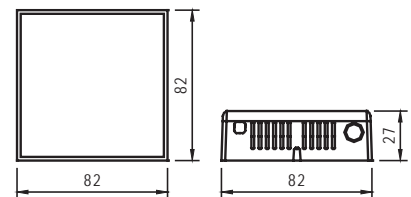

Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual

Recommended accessories

- Service cable AC3006 / AC3009*

* Requires optional HW5 software and service cable

HF3 wall and duct versions

APPLICATIONS

Heating, ventilation, air-conditioning.

2 or 2x2-wire

| | |
|-------------------|---------------------|
| Order code | HF320 Type S |
| Output signal | 4...20 mA |
| Supply voltage | 10...28 VDC |


3/4-wire

| | |
|-------------------|--|
| Order code | HF33x Type W/D |
| Output signal | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* |
| Supply voltage | 18...40 VDC / 13...28 VAC |


| | |
|-------------------|--------------|
| Temperature range | Scalable* |
| Probes | Fixed |
| Filter type | Polyethylene |



Duct version
Type D

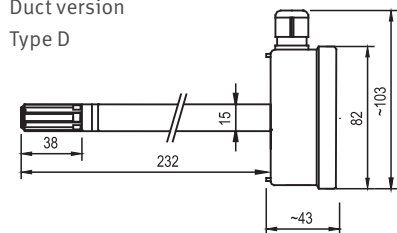

Wall version
Type W

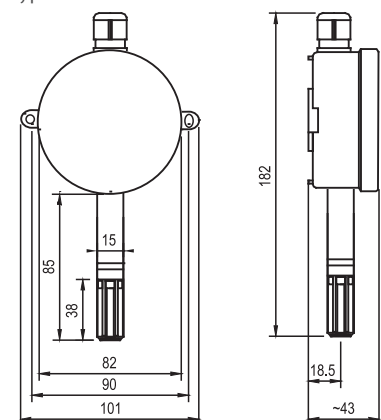

Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual

Recommended accessories

- Service cable AC3006 / AC3009*
- Replacement filter & carrier SPA-PCW-PE
- Replacement filter SPA-PE
- Calibration device ER-15
- Mounting flange AC5005
- * Requires optional HW5 software and service cable

| Technical data | HF320 Analog 2-wire | HF33x Analog 3-wire |
|--|---|---|
| General | | |
| Parameters | Humidity and temperature | |
| Calculated parameters | Dew/Frost point | |
| Housing material / IP protection | ABS / IP65, except type R/S IP20 | |
| Dimensions | 101 x 182 x 43 mm (type W), 103 x 82 x 278 mm (type D), 82 x 82 x 27 mm (type S), 120 x 82 x 27 mm (type R) | |
| Weight | 140 g | |
| Probe material | Polycarbonate | |
| Probe connection | Fixed, type R retractable | |
| Filter material | Polyethylene | |
| Display (only type R/S) | LCD, 1 or 2 decimals, without backlight | LCD, 1 or 2 decimals, with backlight |
| Electrical connections | Type D/W: screw terminals inside, M16 cable gland | |
| Power supply | 10...28 VDC | 18...40 VDC / 13...28 VAC |
| Current consumption | 2x20 mA max. | <60 mA DC / <150 mA AC (type W/D) <100 mA DC / <250 mA AC (type R/S) |
| Application temperature / Storage conditions | -40...60 °C / 0...100 %rh, -10...60 °C (with display) | |
| Measurement range | -40...60 °C | |
| Firmware upgrade | Via HW5 software | |
| Service interface | UART service interface (Universal Asynchronous Receiver Transmitter) | |
| CE / EMC compatibility | EMC Directive 2014/30/EU | |
| Fire protection class | Corresponds to UL94-HB | |
| Humidity measurement | | |
| Sensor | ROTRONIC HYGROMER® IN-1 | |
| Measurement range | 0...100 %rh | |
| Accuracy at 23°C ±5 K | ±2.0 %rh / ±1.0 %rh (type R) | |
| Adjustment at 23 °C | 35, 80 %rh | |
| Long-term stability | <1 %rh/year | |
| Response time | <15 s t63 (63 % increase 35...80 %rh) without filter | |
| Maximum wind velocity | 20 m/s with filter | |
| Temperature measurement | | |
| Sensor | PT100 Class A | |
| Measurement range | -40...60 °C / -40...140 °F | |
| Accuracy at 23°C ±5 K | ±0.3 K / ±0.2 K (type R) | |
| Adjustment points | 1 | |
| Long-term stability | <0.1 °C / year | |
| Response time | <15 s t63 (63 % increase 35...80 %rh) without filter | |
| Scale limits | -999...+9999 units | |
| Analog output | | |
| Number | 2 | |
| Current | 4...20 mA | 0/4...20 mA |
| Voltage | N/A | 0...1/5/10 V |
| Maximum load | ≤2x500 Ω (current output) | ≤2x500 Ω (current output) ≥1 kΩ/V (voltage output) |
| Accuracy at 23 °C | 0.03 mA | 0.02 mA 2 mV (0...1 V), 5 mV (0...10 V) |

HF4 series

The HygroFlex4 series is ideal for all applications where exact measurement of humidity and temperature is critical.

FEATURES

- Accuracy: ± 1 %rh, ± 0.2 K, at $23\text{ }^{\circ}\text{C} \pm 5$ K
- Temperature limit at probe: $-50\text{...}100\text{ }^{\circ}\text{C}$ / $0\text{...}100$ %rh
- Range of application electronics: $-40\text{...}60\text{ }^{\circ}\text{C}$ / $0\text{...}100$ %rh; $-10\text{...}60\text{ }^{\circ}\text{C}$ with display
- Service interface
- Adjusted at $23\text{ }^{\circ}\text{C}$ and 10, 35, 80 %rh

Power supply

- Low voltage: 2x2 or 3-wire

Signal outputs

- Current output
- Voltage output

Versions

- Wall version (W)
- Duct version (D)

Output parameters

- Humidity & temperature *

Output scaling

- Relative humidity: range selectable, standard $0\text{...}100$ %rh
- Temperature: range selectable, standard: $0\text{...}50\text{ }^{\circ}\text{C}$
- Dew point: range selectable

Display

- Display with backlight (excl. 2-wire), trend indicators and keypad
- Without display



* Only scalable together with HW5 Software

HF4 wall and duct versions

APPLICATIONS

HVAC applications, greenhouses, museums, storage rooms, libraries, swimming pools, climate control in office buildings

2 or 2x2-wire


| Order code | HF420 Type W/D |
|-------------------|---|
| Output signal | 4...20 mA |
| Supply voltage | 10...28 VDC |
| Display | Optional (without backlight, keypad) Type D only horizontal version possible with display (see pictures) |
| Temperature range | Scalable* |
| Probes | Fixed |
| Filter type | Polyethylene |

3-wire


| Order code | HF43x Type W/D |
|-------------------|--|
| Output signal | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* |
| Supply voltage | 18...40 VDC 13...28 VAC |
| Display | Optional (with backlight, keypad) Type D only horizontal version possible with display (see pictures) |
| Temperature range | Scalable* |
| Probes | Fixed |
| Filter type | Polyethylene |



Wall version, type W

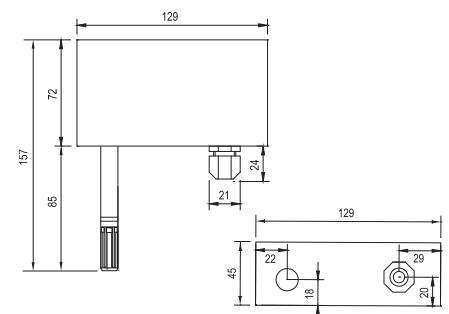

Duct version, type D

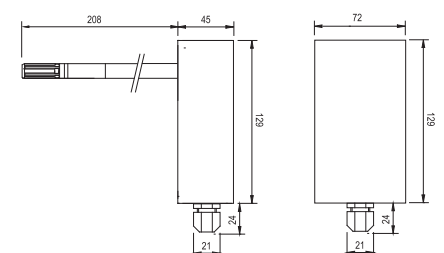

Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Mounting flange (type D)

Recommended accessories

- Service cable AC3006 / AC3009*
- Replacement filter, PE, black NSP-PCB-PE
- Calibration device ER-15
- Mounting kit DIN top-hat rail (type W) AC5002

* Requires optional HW5 software and service cable

| Technical data | HF420 Analog 2-wire | HF43x Analog 3-wire |
|---|---|--|
| General | | |
| Parameters | Humidity and temperature | |
| Calculated parameters | Dew/Frost point | |
| Housing material / IP protection | ABS / IP65 | |
| Dimensions | 129 x 157 x 45 mm (type W), 129 x 253 x 72 mm (type D) | |
| Weight | 220 g | |
| Probe material | Polycarbonate | |
| Probe connection | Fixed | |
| Filter material | Polyethylene | |
| Display | LCD, 1 or 2 decimals without backlight, menu navigation, 4 keys | LCD, 1 or 2 decimals with backlight, menu navigation, 4 keys |
| Electrical connections | Screw terminals inside, M16 cable gland | |
| Power supply | 10...28 VDC | 18...40 VDC / 13...28 VAC |
| Current consumption | 2 x 20 mA max. | <270 mA |
| Application temp. housing / electronics | -40...60 °C / -10...60 °C (with LCD), 0...100 %rh | |
| Measurement range | -50...100 °C | |
| Firmware upgrade | Via HW5 software | |
| Service interface | UART service interface (Universal Asynchronous Receiver Transmitter) | |
| CE / EMC compatibility | EMC Directive 2014/30/EU | |
| Fire protection class | Corresponds to UL94-HB | |
| Humidity measurement | | |
| Sensor | ROTRONIC HYGROMER® IN-1 | |
| Measurement range | 0...100 %rh | |
| Accuracy at 23 °C ±5 K | ±1.0 %rh | |
| Adjustment at 23 °C | 10, 35, 80 %rh | |
| Long-term stability | <1 %rh/year | |
| Response time | <15 s τ63 (63 % increase 35...80 %rh) without filter | |
| Maximum wind velocity | 20 m/s with polyethylene filter | |
| Temperature measurement | | |
| Sensor | PT100 1/3 Class B | |
| Measurement range | -50...100 °C / -58...212 °F | |
| Accuracy at 23 °C ±5 K | ±0.2 K | |
| Adjustment points | 1 | |
| Long-term stability | <0.1 °C / year | |
| Response time | <15 s τ63 (63 % increase 35...80 %rh) without filter | |
| Analog output | | |
| Number | 2 | |
| Current | 4...20 mA | 0/4...20 mA |
| Voltage | N/A | 0...1/5/10 V |
| Maximum load | ≤2x500 Ω (current output) | ≤2x500 Ω (current output) ≥1 kΩ/V (voltage output) |
| Accuracy at 23 °C | 0.03 mA | 0.02 mA 2 mV (0...1 V), 5 mV (0...10 V) |

HF5 series

The HF5 series is compatible with HygroClip2 probes with integrated AirChip technology – which achieve excellent accuracy thanks to their precision. This generation of instruments includes unique calibration and adjustment functions.

FEATURES

- Interchangeable HC2A / HC2 probes
- Housing material: ABS / Aluminum
- Accuracy: See chapter «Probes»
- Temperature limit at probe: See chapter «Probes»
- Range of application electronics: -40...60 °C / 0...100 %rh; -10...60 °C with display
- Digital outputs, also combinable with analog outputs
- Use as %rh / °C simulator for system validation *
- Service interface

Power supply

- Low voltage: 2x2 or 3-wire
- Low voltage, galvanically isolated; 4-wire
- Mains voltage, galvanically isolated; 4-wire

Signal outputs

- Current outputs, voltage outputs
- RS-485, USB, Ethernet

Versions

- Wall mount (W), duct mount (D), cable version (C) with a selected probe

Output parameters

- Humidity & temperature
- Humidity & a psychrometric parameter
- Temperature & psychrometric parameters

Output scaling

- Relative humidity: range selectable, standard scale 0...100 %rh
- Temperature: range selectable, standard scale 0...50 °C
- Psychrometric parameters: range selectable

Display

- Display with backlight (excl. 2-wire), trend indicators and keypad
- Without display

* Requires optional HW5 software and service cable



Available with ATEX certificate

HF5 wall and duct versions

APPLICATIONS

HVAC applications, food and pharmaceutical industries, printing and paper industries, meteorology, agriculture, archaeology.

2x2-wire

| | |
|-------------------|-----------------------|
| Order code | HF520 Type W/D |
| Output signal | 4...20 mA |
| Supply voltage | 10...28 VDC |



3/4-wire

| | | |
|-------------------|--|--|
| Order code | HF5xx Type W/D | |
| Output signal | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* | RS-485 Ethernet (not for aluminum version) |
| Supply voltage | Low voltage: 15...40 VDC / 12...28 VAC Galvanically isolated: 9...36 VDC / 7...24 VAC (not for aluminum version) | |
| Housing | ABS or aluminum | |
| Display | Optional (with backlight, keypad) Type D only horizontal version possible with display (see pictures) | |
| Output ranges | Scalable* | |
| Probes | 1 interchangeable HC2A / HC2 probe input | |



Wall version



Type W (aluminum)

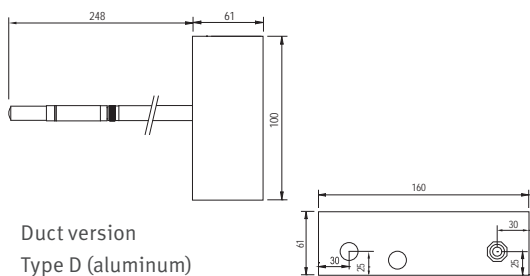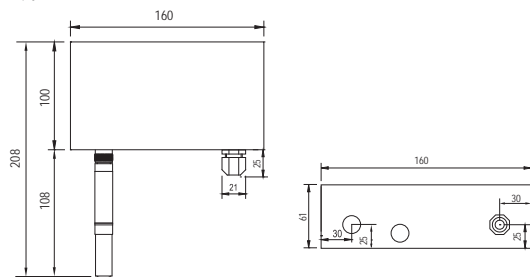

Duct version Type D (aluminum)

Wall version

Type W (ABS)

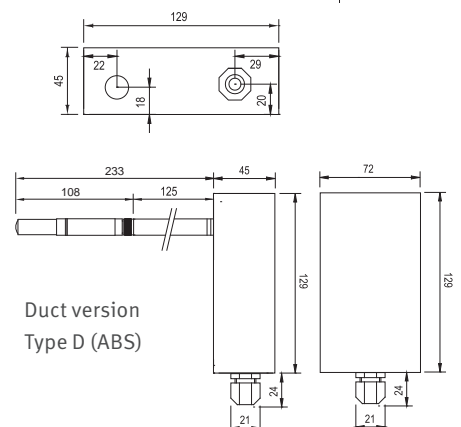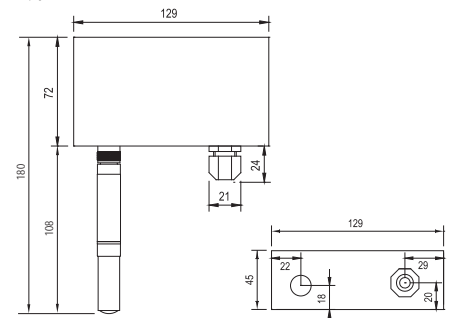

Duct version Type D (ABS)

* Requires optional HW5 software and service cable


HF5 wall versions

4-wire mains voltage

| Order code | HF5xx Type W/D | |
|----------------|--|--------------------|
| Output signal | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* | RS-485 Ethernet |
| Supply voltage | Mains voltage: 100...240 VAC | |
| Versions | Type W | |
| Display | Optional (with backlight, keypad) | |
| Probes | 1 interchangeable HC2A / HC2 probe input | |
| Output ranges | Scalable* | |
| Housing | ABS | |



Wall version type W

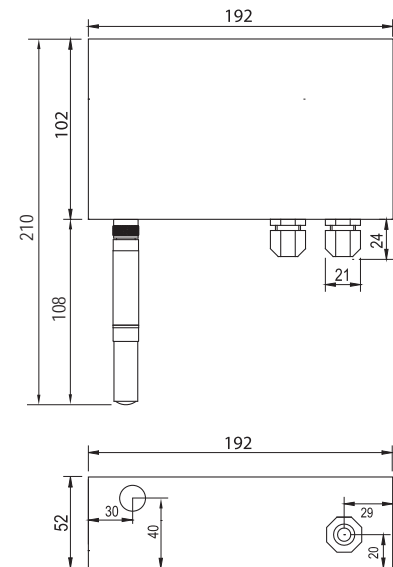

Compatible

- All HC2A / HC2 probes (order separately)
- HW5

Delivery package

- Product qualification
- Short instruction manual
- Mounting flange (type D)

Recommended accessories

- Standard climate probe HC2A-S
- Probe extension cable 2 m E2-02A
- Service cable AC3006*
- Mounting kit DIN top-hat rail (type W) AC5002
- Calibration cable with HP23 AC2001

* Requires optional HW5 software and service cable

| Technical data | HF520 2-wire | HF53/4/x 3-wire | HF56x, mains voltage 4-wire |
|---|--|--|---|
| General | | | |
| Parameters | Humidity and temperature | | |
| Calculated parameters | All psychrometric parameters | | |
| Housing material / IP protection | ABS / IP65 (models with USB or Ethernet interface, IP40), Al/IP65 (also with Ethernet interface) | | |
| Dimensions | ABS: 129 x 72 x 45 mm (type D/W) Al: 160 x 100 x 61 mm | | 192 x 102 x 52 mm (type D/W) |
| Weight | ABS: 220 g | ABS: 220 g, Al: 750 g | ABS: 500 g |
| Probe connection / Interface | E2 (threaded coupling) / UART | | |
| Display | LCD, 1 or 2 decimals, without backlight, menu navigation, 4 keys | LCD, 1 or 2 decimals, with backlight, Menu navigation, 4 keys | |
| Electrical connections | Screw terminals inside M16 cable gland Socket (USB/Ethernet) | | 2xM16 Cable gland |
| Power supply | 10...28 VDC min 10 + 0.02 x load | 15...40 VDC/12...28 VDC galvanically. isolated 9...36 VDC / 7...24 VAC | 100...240 VAC |
| Current consumption | 2 x 20 mA max. | 270 mA max. (without Ethernet) 420 mA max. (with Ethernet) | 30 mA max. (without Ethernet) 45 mA max. (with Ethernet) |
| Start-up time | 1 min | | |
| Application temp. housing / electronics | -40...60 °C / -10...60 °C (with display), 0...100 %rh | | |
| Firmware upgrade | Via HW5 software | | |
| Service interface | UART service interface (Universal Asynchronous Receiver Transmitter) | | |
| CE / EMC compatibility | EMC Directive 2014/30/EU | | |
| Fire protection class | Corresponds to UL94-HB | | |
| Humidity measurement | | | |
| Humidity measurement | Probe dependent | | |
| Temperature measurement | | | |
| Temperature measurement | Probe dependent | | |
| Analog output | | | |
| Number | 2 | | |
| Current | 4...20 mA | 0/4...20 mA | |
| Voltage | N/A | 0...1/5/10 V | |
| Galvanic isolation | N/A | HF54 and HF56 | |
| Maximum load | 2x500 Ω | ≤2x500 Ω (current output) ≥1 kΩ/V (voltage output) | |
| Accuracy at 23 °C | 0.02 mA | 0.02 mA 10 mV | |
| Digital output | | | |
| RS-485 | No digital outputs | RS-485 & analog | |
| USB | | USB & RS-485 & analog | |
| Ethernet | | Ethernet RJ45 & RS-485 & analog | |

HF73A series

The HygroFlex HF73A transmitters are used wherever harsh environments demand an optimal solution. There is hardly an industrial process in which humidity, temperature or dew point / frost point does not need to be considered.

FEATURES

- Accuracy: $\pm 1.0\% \text{rh}$, $\pm 0.2 \text{ K}$, at $10 \dots 30 \text{ }^\circ\text{C}$
- Temperature limit at probe: max. $-100 \dots 200 \text{ }^\circ\text{C}$ ¹ $0 \dots 100\% \text{rh}$
- Range of application electronics: $-40 \dots 85 \text{ }^\circ\text{C}$ / $0 \dots 100\% \text{rh}$
- Aluminum diecast housing and probe of PPS
- Various probe lengths available
- Use as a $\% \text{rh}/^\circ\text{C}$ simulator for system validation *
- Service interface
- Adjusted at $23 \text{ }^\circ\text{C}$ and 10, 35, 80 $\% \text{rh}$



Power supply

- Low voltage: 2x2 or 3-wire

Signal outputs

- Current outputs, voltage outputs*

Versions

- Duct version (D)

Output parameters

- Humidity & temperature*

Output scaling

- Relative humidity: range selectable, standard scale $0 \dots 100\% \text{rh}$
- Temperature: range selectable, standard: $-50 \dots 100 \text{ }^\circ\text{C}$
- Dew/Frost point: range selectable

Display

- Without display

* Requires optional HW5 software and service cable

¹ Short-term peak load (3 x 5 min)


HF73A version

APPLICATIONS

Measures relative humidity, temperature and dew/frost point in industrial environments and outdoors. For use in harsh conditions.

3-wire

| Order code | HF732A |
|----------------------------|--|
| Output signal | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* |
| Supply voltage | 18...40 VDC / 13...28 VAC |
| Probes | Fixed, PPS |
| Display | No |
| Output ranges | Scalable* |
| Temperature limit at probe | -100...150 °C (type D)** |
| Filter carrier | Slotted sleeve (order filter separately) |

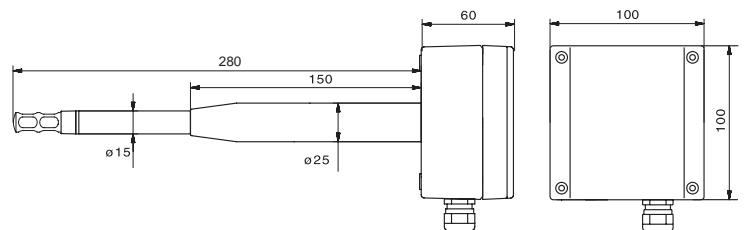

Duct version
Type D

* Requires optional HW5 software and service cable

** Peak load: For 100 hours between 190 °C and 200 °C. Maximal permissible continuous load: 190°C.

| Technical data | HF73A, analog, 3-wire |
|---|---|
| General | |
| Parameters | Humidity and temperature |
| Calculated parameters | Dew/Frost point |
| Housing material / IP protection | Aluminum / IP65 |
| Dimensions | 60 x 100 x 100 (type D) |
| Weight | 600 g + 140 g per probe extension unit (150 mm) |
| Probe material | PPS |
| Probe connection | Fixed |
| Filter carrier | Slotted sleeve |
| Filter material | Filter is not supplied with transmitter (must be ordered separately) |
| Display | No |
| Electrical connections | Screw terminals inside, M16 cable gland |
| Power supply | 15...40 VDC / 13...28 VAC |
| Current consumption | 150 mA max. |
| Application temp. housing / electronics | -40...85 °C, 0...100 %rh |
| Measurement range | -100...150 °C (type D) |
| Firmware upgrade | Via HW5 software |
| Service interface | UART service interface (Universal Asynchronous Receiver Transmitter) |
| CE / EMC compatibility | EMC Directive 2014/30/EU |
| Humidity measurement | |
| Sensor | ROTRONIC HYGROMER® HT-1 |
| Measurement range | 0...100 %rh |
| Accuracy at 10...30 °C | ±1.0 %rh |
| Adjustment at 23 °C | 10, 35, 80 %rh |
| Long-term stability | <1 %rh/year |
| Response time | <15 s τ63 (63 % increase 35...80 %rh) without filter |
| Temperature measurement | |
| Sensor | PT100 Class A |
| Measurement range | Peak load: For 100 hours between 190 °C and 200 °C. Maximal permissible continuous load: 190°C |
| Accuracy at 10...30 °C | ±0.2 K |
| Adjustment points | 1 |
| Long-term stability | <0.1 °C / year |
| Response time | <15 s τ63 (63 % increase 35...80 %rh) without filter |
| Analog output | |
| Number | 2 |
| Current | 0/4...20 mA |
| Voltage | 0...1/5/10 V |
| Maximum load | ≤2x500 Ω (current output) ≥1 kΩ/V (voltage output) |
| Accuracy at 23 °C | 0.02 mA 2 mV (0...1 V), 5 mV (0...10 V) |

XB32A-OEM

The XB OEM transmitter consists of a cable PPS probe, a printed circuit board without housing. Thanks to its compact size, high accuracy and choice of analog outputs, the transmitter can be adapted to meet customer requirements and used practically everywhere.

APPLICATIONS

Climate chambers, incubators, monitoring of industrial processes, etc.

FEATURES

- Accuracy: $\pm 1.0\%rh$, $\pm 0.2\text{ K}$, at $10\text{...}30\text{ }^\circ\text{C}$
- Range of application: probe dependent up to $0\text{...}100\%rh$ / -100 to $200\text{ }^\circ\text{C}$ ¹
- Range of application: electronics $-40\text{...}85\text{ }^\circ\text{C}$
- Freely scalable analog outputs
- Simulator mode*

Power supply

- Low voltage 3/4 wire (XB3X)

Signal outputs

- Current outputs, voltage outputs

Versions



- Printed circuit board with cable probe (C)

Probes

- PPS probes
- Probe diameter: 15 mm
- Probe length up to 294 mm
- Cable lengths 2 and 5 m

Output parameters

- Humidity & temperature
- Dew or frost point & temperature or humidity

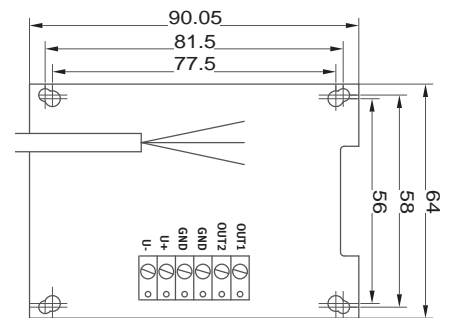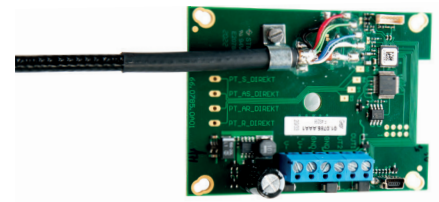

PPS probe $\varnothing 15\text{ mm}$



Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Note: a filter must be ordered separately




Recommended accessories

- Wire mesh (SPA-WM), sinter steel (SPA-SSS) and Teflon (SPA-PFTE) filters
- Service cable AC3006 / AC3009*

* Requires optional HW5 software and service cable

¹ Short-term peak load (3 x 5 min)

Overview

| | Basic | | Compact |
|-------------------------------|---|--|---|
| |  |  |  |
| | HL-1D | BL-1D | HL-20D |
| Memory capacity | 32,000 lines (each line contains %rh + °C) | 32'000 lines | 32,000 lines |
| Sensor | HYGROMER IN-1 / NTC | BOSCH BMP280 / HYGROMER IN-1 / NTC | HYGROMER IN-1 / PT100 Class A |
| Range of application | -30...70 °C 0...100 %rh | -30...70 °C 0...100 %rh | -10...60 °C 0...100 %rh |
| Calculations | – | – | Dew/Frost point |
| Power supply | 1x CR2 battery | 1 x CR2 battery | 3x AA batteries |
| Configurable logging interval | | Yes | |
| Programmable alarms | | Yes | |
| Interface | USB | USB | UART, requires AC3006 service cable |
| IP protection | IP67 | IP67 | IP40 |
| Standards | EN 12830 | EN12830 | – |
| CE / EMC compatibility | | Yes | |

HygroLog HL-1D

Basic logger

The HL-1D is the smallest humidity logger available from Rotronic. It offers the most important logging functions and is fully compatible with HW5 software.

FEATURES

- Accuracy: $\pm 2.0\%rh$, $\pm 0.3\text{ K}$
- Compact with very high level of IP protection
- High storage capacity: 32,000 lines
- Free evaluation and configuration software HW5
- Very long battery life: up to 3 years
- Conforms to EN12830. Version V3.0 and later
- Programmable logging mode

| Technical data | HL-1D |
|---|---|
| General | |
| Parameters | Humidity & temperature |
| Sensor type | HYGROMER® IN-1 / NTC |
| Accuracy at 23 °C $\pm 5\text{ K}$ | $\pm 2.0\%rh$, $\pm 0.3\text{ K}$ |
| Range of application / Storage conditions | -30...70 °C / 0...100%rh |
| IP protection | IP67 |
| Weight | 85 g |
| Dimensions | 90 x 60 x 23 mm |
| Logging interval | 30 s...24 h |
| Battery | 1 x CR2 |
| Battery life | Up to 3 years (logging interval 1 h) |
| Battery charge indicator | Yes (HW5 software, display and LED indicator) |
| Storage capacity | 32,000 lines (each line contain %rh & °C) |
| Function | MIN/MAX/AVG |
| Display | LCD |
| Resolution | 0.1 %rh, 0.1 °C |
| Display refresh rate | 5 s (standard) or same as logging interval |
| LED indicators | 2 LEDs Right LED flashes green during data logging Left LED flashes red when limits exceeded or low battery state |
| Communication | USB-Mini port (cable optional) |
| Standards | EN12830 (V3.0 and later) |




USB-Mini port (settings and data download) Battery compartment

Configuration & evaluation



The values stored in the HL-1D can be downloaded with the HW5 software and displayed graphically. The user determines the logging interval, the alarm limits, the recording mode and much more.

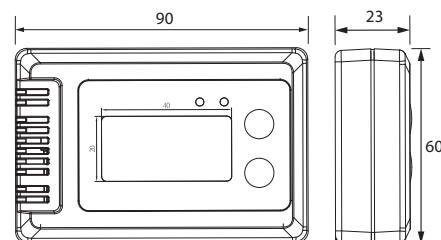

Delivery package

- Battery, CR2
- Short instruction manual
- Function and calibration certificate

Recommended accessories

- USB-Mini cable AC0003

BL-1D

In addition to humidity and temperature, the BL-1D also logs ambient pressure and dew point. Thanks to its full HW5 functionality, its compact size and easy handling, the BL-1D is ideal for numerous applications.

FEATURES

- Accuracy: ± 3.0 hPa, ± 2.0 %rh, ± 0.3 K
- Compact with very high level of IP protection
- High storage capacity: 32,000 lines
- Free evaluation and configuration software HW5
- Very long battery life: up to 3 years
- Conforms to EN12830

| Technical data | BL-1D |
|---|--|
| General | |
| Parameters | Pressure / Humidity / Temperature |
| Sensor type | BOSCH BMP280 / HYGROMER® IN-1 / NTC |
| Accuracy at 23 °C ± 5 K | ± 3.0 hPa, ± 2.0 %rh, ± 0.3 K |
| Range of application / Storage conditions | -30..70 °C / 0..100 %rh |
| IP protection | IP67 |
| Weight | 85 g |
| Dimensions | 90 x 60 x 23 mm |
| Logging interval | 30 s...24 h |
| Battery | 1 x CR2 |
| Battery life | Up to 3 years (logging interval 1 h) |
| Battery charge indicator | Yes (HW5 software, display and LED indicator) |
| Storage capacity | 32,000 lines (each line contains °C/%rh/Pa/DP) |
| Function | MIN/MAX/AVG |
| Display | LCD |
| Resolution | 1 hPa, 0.1 %rh, 0.1 °C |
| Display refresh rate | 5 s (standard) or same as logging interval |
| Communication | USB-Mini port (cable optional) |
| Standards | EN 12830 |




Configuration & evaluation



The values stored in the BL-1D can be downloaded with the HW5 software and displayed graphically. The user determines the logging interval, the alarm limits, the recording mode and much more.

interval, the alarm limits, the recording mode and much more.

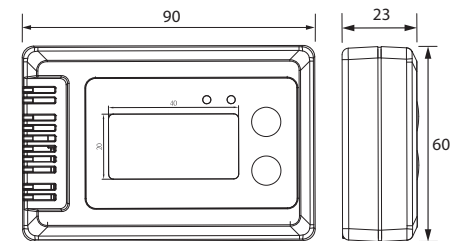

Delivery package

- Battery, CR2
- Short instruction manual
- Function and calibration certificate

Recommended accessories

- USB-Mini cable AC0003

HygroLog HL-20D

Precision compact logger

The compact data logger for humidity and temperature measurement offers high precision and reliability at a reasonable price. The HL-20 series is easy to use and suitable for a wide range of applications. Thanks to its integrated batteries, the HL-20D provides hours of operation and offers its users maximum flexibility.

APPLICATIONS

Warehouses, factories, museums, office buildings, cleanrooms, transportation, libraries and test facilities.

FEATURES

- Range of application: -10...60 °C / 0...100 %rh
- 20,000 data point memory
- Accuracy at 10...30 °C: ±1.3 %rh (0...10 %rh) / ±0.8 %rh (10...60 %rh) / ±1.3 %rh (60...100 %rh) ±0.3 K
- Freely selectable logging interval, 5 s...1 h
- Integrated clock with time stamp for every measurement
- Adjusted at 10, 35, 80 %rh and 23 °C
- Programmable visual alarms
- Free HW5 software for device configuration and analysing recorded data



HL-20-D



HL-20D-SET



| Order code | Display | Incl. AC3006 service cable |
|-------------|---------|----------------------------|
| HL-20D | Yes | No |
| HL-20D-SET1 | Yes | Yes |

Delivery package

- Factory adjustment certificate, short instruction manual, 3 AA batteries
- Screw with plug for wall mounting

Recommended accessories

- Service cable AC3006
- Calibration device HL-20-CAL
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

HygroPalm HP31

The HygroPalm HP31 is a handheld instrument with a fix Rotronic probe, it is able to perform spot measurements and logging of relative humidity, temperature and psychrometric parameters.


APPLICATIONS

Field inspection and spot checks in HVAC, pharmaceutical industry, agriculture and food industry and building management systems.

FEATURES

- Measures relative humidity and temperature and perform psychrometric calculations
- Visual and audible alarms
- Graphic display for saved data
- 64'000 data points memory with programmable logging interval
- Long-life rechargeable battery (up to 48 hours at a logging interval of 30 seconds)

| General specifications | |
|----------------------------|---|
| Order code | HP31 |
| Device type | Handheld device (%rh / °C) |
| Application range | -10...60 °C 0...100 %rh (non-cond.) |
| Storage range | -10...45 °C 10...90 %rh |
| Probe application range | -10...60 °C 0...100 %rh (non-cond.) |
| Functions | Spot measurements Programmable logging interval MIN / MAX / AVG |
| Accuracy @ 23°C | ±2 %rh / ±0.3 °C |
| Logging interval | 1 s...24 h |
| Memory capacity | 8 x 8000 data points |
| Psychrometric calculations | Dew / Frost point (Dp / Fp) Wet bulb temperature (Tw) Enthalpy (H) Vapor concentration (Dv) Specific humidity (Q) Mixing ratio by weight (R) Vapor pressure (E) Saturation vapor pressure (Ew) Saturation vapor density (SVD) |
| Calculation method | WMO Standard |
| Display refresh rate | 1 s (typical) |
| Integrated battery | Lithium polymer, 3.7 V, 1000 mAh 48 h – Logging every 30 s, screen off 10 h – Screen always on |
| PC interface | Micro-USB port, HW5 compatible |
| Housing / Mechanics | |
| Enclosure material | ABS, TPR |
| IP protection class | IP65 |
| Dimensions | 160 x 63 x 30 mm |
| Weight | 185 g |

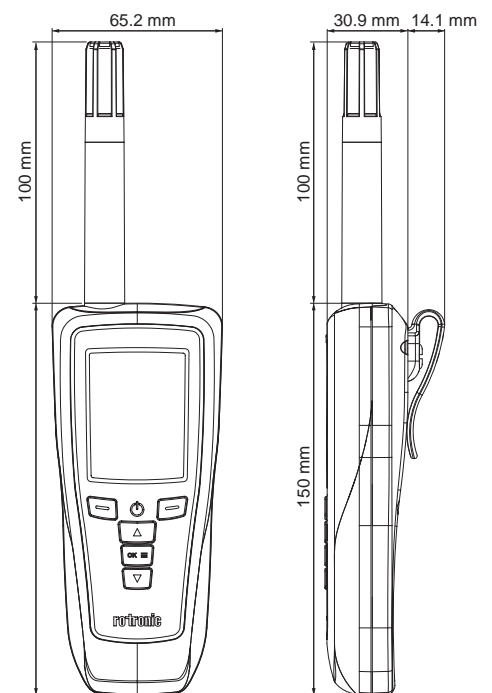

Compatible

- HW5

Delivery package

- HygroPalm HP31
- Soft case
- Micro-USB service cable AC0006

Recommended accessories

- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

HygroPalm HP32

The HygroPalm HP32 can be combined without adjustment with all all HC2 and HC2A probes (except HC2-LDP). It measures relative humidity and temperature, can perform all psychrometric calculations and has trend indicators as well as a hold function to freeze measured values.


APPLICATIONS

Field inspection and spot checks in HVAC, pharmaceutical industry, agriculture and food industry and building management systems.

FEATURES

- Measures relative humidity and temperature and perform psychrometric calculations
- Visual and audible alarms
- Graphic display for saved data
- 64'000 data points memory with programmable logging interval
- Long-life rechargeable battery (up to 48 hours at a logging interval of 30 seconds)

| General specifications | |
|----------------------------|---|
| Order code | HP32 |
| Device type | Handheld device (%rh / °C) |
| Application range | -10...60 °C 0...100 %rh (non-cond.) |
| Storage range | -10...45 °C 10...90 %rh |
| Probe application range | Depends on probe |
| Functions | Spot measurements Programmable logging interval MIN / MAX / AVG |
| Accuracy @ 23°C | Depends on probe |
| Logging interval | 1 s...24 h |
| Memory capacity | 8 x 8000 data points |
| Psychrometric calculations | Dew / Frost point (Dp / Fp) Wet bulb temperature (Tw) Enthalpy (H) Vapor concentration (Dv) Specific humidity (Q) Mixing ratio by weight (R) Vapor pressure (E) Saturation vapor pressure (Ew) Saturation vapor density (SVD) |
| Calculation method | WMO Standard |
| Display refresh rate | 1 s (typical) |
| Integrated battery | Lithium polymer, 3.7 V, 1000 mAh 48 h – Logging every 30 s, screen off 10 h – Screen always on |
| PC interface | Micro-USB port, HW5 compatible |
| Housing / Mechanics | |
| Enclosure material | ABS, TPR |
| IP protection class | IP65 |
| Dimensions | 160 x 63 x 30 mm |
| Weight | 185 g |

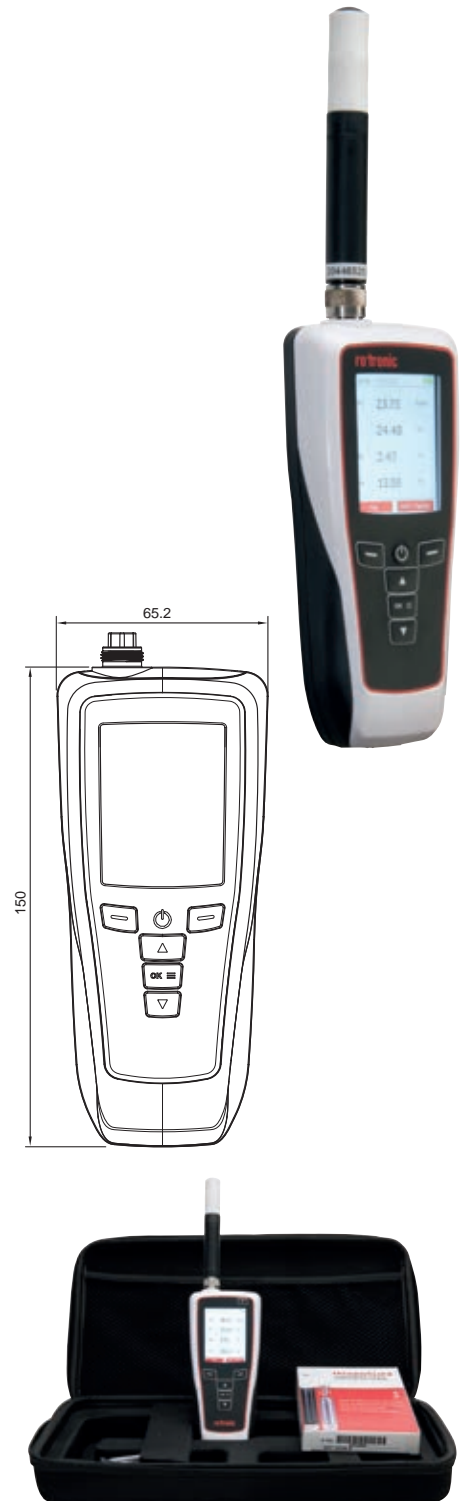

Compatible

- All HC2 and HC2A probes (except HC2-LDP)

Delivery package

- HygroPalm HP32
- Short instruction manual
- Soft case
- USB-Micro service cable AC0006

Recommended accessories

- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

| Specifications handheld instruments | | |
|---|---|-------------------------------------|
| Features | HP31 | HP32 |
| Probe type | Fixed probe | HC2A-xx (not included) |
| Probe interchangeable | No | Yes |
| Humidity / Temperature sensor | HYGROMER® IN-1 Pt100 1/3 Class B | Probe dependent |
| Number of probe inputs | N/A | 1 |
| Measurement range (probe) | -10...60 °C 0...100 %rh | Probe dependent |
| Accuracy at 10...30 °C | ±2 %rh / ±0.3 K | Probe dependent |
| Long-term stability | <1 %rh / year | |
| Response time humidity sensor | <15 s τ63 | Probe dependent |
| Initialization time | <2 s | |
| Range of application | -10...60 °C / 0...100 %rh | |
| Display resolution | 2 decimals | |
| Illuminated display | Yes | |
| Alarm indicators | Yes | |
| Battery indicator | Yes | |
| Real time clock | Yes | |
| Functions | | |
| Adjustment of transmitters | No | |
| Adjustment via keypad | Single & multi-point %rh Single-point °C | |
| Probe adjustment with dew point reference | No | |
| Calculations | All psychrometric parameters | |
| Data logging | 8 x 8,000 measurement points | |
| Electrical specifications | | |
| Power supply | Integrated rechargeable battery | |
| Rechargeable battery charge | No | |
| Battery life (typical, without backlight) | 4...7 h | |
| Communication interfaces | Micro USB Service cable AC0006 | |
| Max. length probe cable | 5 m | |
| Mechanical specifications | | |
| Housing material | ABS, TPR (housing) | |
| Dimensions | 250 x 65 x 31 mm | 150 x 65 x 31 mm (without probe) |
| Weight | 200 g | 185 g |
| CE / EMC directives | 2014/30/EU | |
| IP protection class | IP65 | |

HygroPalm HP-GTS – Measuring instrument for the paper industry

The HygroPalm HP-GTS from Rotronic is a tried-and-tested instrument for measurement of equilibrium relative humidity and temperature in stacks of paper and cardboard.


APPLICATIONS

Humidity measurements in stacks of paper, cardboard and textiles for paper and textile technicians and printers.

FEATURES

- Measures relative humidity and temperature in stacks of paper
- Graphical display of measured values
- Freely adjustable visual and audible alarm
- 64,000 data point memory with programmable logging interval

| General specifications | |
|--|---|
| Order code | HP-GTS |
| Device type | Handheld device (%rh / °C) |
| Range of application of instrument and probe | -10...60 °C / 0...100 %rh (non-condensing) |
| Humidity sensor | ROTRONIC HYGROMER IN-1 |
| Accuracy @ 23 °C | ±2 %rh / ±0.3 °K |
| Functions | Spot measurements Programmable logging interval MIN / MAX / AVG |
| Logging interval | 1 s...24 h |
| Memory capacity | 8 x 8000 data points |
| Display refresh rate | 1 s (typical) |
| PC interface | Micro-USB port, HW5 compatible V |
| Integrated battery | <ul style="list-style-type: none"> • Rechargeable lithium polymer battery • 3.7 V • 1000 mAh • 48 h with screen off, logging every 30 s • 10 h with screen always on |
| Housing / Mechanics | |
| Housing material | ABS, TPR |
| Probe material | Aluminum |
| IP protection class | IP65 (measuring instrument) |
| Dimensions | 408 x 63 x 30 mm |
| Weight | 225 g |

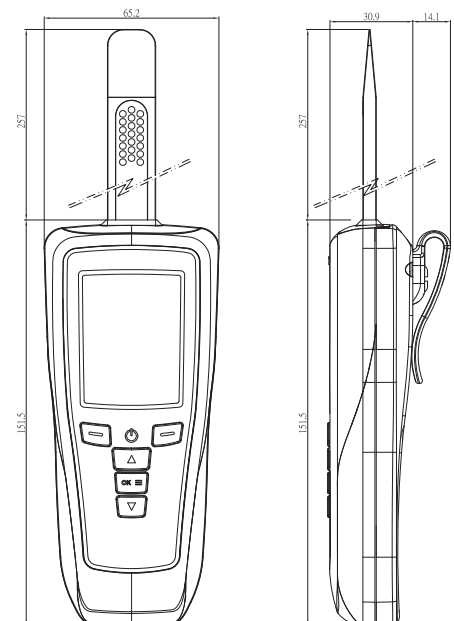

Delivery package

- HygroPalm HP-GTS
- Soft case
- Micro-USB cable (computer connection and battery charging)

Recommended accessories

- Calibration device for sword probes EGS
- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS

HygroGen2 HG2

Since its launch, the Rotronic HygroGen has defined the standard for portable humidity and temperature calibration. Hundreds of users worldwide have identified that this tool for the rapid generation of stable temperature and humidity conditions can save significant amounts of time in performing calibrations of all types of humidity instruments from all manufacturers.

The HygroGen2 further satisfies the stringent demands of quality and compliance regulations with its ability to calibrate instruments over their full working range, and is embraced throughout the pharmaceutical industry as the leading instrument in its class and is favored in ISO 17025 humidity calibration laboratories across the world.

Being portable and robust, it can be set up at the installation location allowing for complete system qualification. The rock-solid stability, minimal thermal gradients and quick set-point changes of HygroGen2-S are now replicated in a new family member: HygroGen2-XL, which boasts a chamber with 10 times the capacity.

External Chilled Mirror Reference Integration

(formerly "AutoCal+") External chilled mirror Reference Integration further extends the utility of the generator, with the ability to integrate chilled mirror hygrometers as the AutoCal calibration reference or within the Remote API.

APPLICATIONS

On-site calibration solution for all users of humidity and temperature measuring equipment.

FEATURES

- Generates stable humidity and temperature conditions ($\pm 0.1\%rh$, $\pm 0.01\text{ }^\circ C$)
- Calibration solution for the laboratory and on-site
- Humidity equilibrium typically in only 5 minutes for HG2-S, 15 minutes for HG2-XL
- Calibrates multiple probes simultaneously
- «AutoCal» automatic calibration (optional)
- «Remote API» logging and control with third-party software (optional)



HygroGen2 with external chilled mirror hygrometer – Michell S8000 Remote



HG2-S and HG2-XL in comparison

Video HygroGen2

Interested? Then scan the QR code!



Delivery package

- Instruction manual
- SCS certificate for reference probe

Recommended accessories

- See HygroGen2 accessories
- «AutoCal» automatic calibration
- Extended ranges of application «HumiExt» and «TempExt»
- «ExtRef» chilled mirror reference
- «RemoteSS» remote screen sharing
- «RemoteAPI» programming interface for remote control

| HygroGen2 Specifications | | HG2-S | HG2-XL |
|---|--|---|--|
| Chamber volume | | 2 liters | 20 liters |
| Working volume | | 1.5 liters | 17 liters |
| Humidity changes ($\pm 0.1\%$rh stability) | 5...95 %rh | <math>< 5</math> minutes | <math>< 15</math> minutes |
| Temperature changes ($\pm 0.01\text{ }^\circ\text{C}$ stability) | 23...50 °C | <math>< 5</math> minutes | <math>< 15</math> minutes |
| | 23...0 °C | <math>< 25</math> minutes | <math>< 35</math> minutes |
| Temperature gradients | 15...50 °C | <math>< \pm 0.05\text{ }^\circ\text{C}</math> | <math>< \pm 0.05\text{ }^\circ\text{C}</math> |
| | 5...60 °C | <math>< \pm 0.1\text{ }^\circ\text{C}</math> | <math>< \pm 0.1\text{ }^\circ\text{C}</math> |
| | 0...5 °C | <math>< \pm 0.15\text{ }^\circ\text{C}</math> | <math>< \pm 0.15\text{ }^\circ\text{C}</math> |
| Probe mounting | | Up to 6 probes through door ports | 8 probes through the door, plus internal shelf racks |
| Weight & dimensions | | 13 kg, 45 x 41x 21 cm | 37 kg, 80 x 62 x 41 cm |
| Working principle | Mixed flow with desiccant dryer cell and piezoelectric humidifier; Peltier thermoelectric element with radial chamber mixing fan | | |
| Control probe specification | $\pm 0.8\%</math>rh (10...30 °C), \pm 2\%</math>rh (0...60 °C) \pm 0.1\text{ K} (10...30 °C), \pm 0.3\text{ K} (0...60 °C)$ | | |
| Typical calibration uncertainty | $\pm 1.5\%</math>rh (k=2) at 23 °C, \pm 0.15\%</math>rh (k=2) 15...50 °C$ | | |
| Sensor | HygroClip2, capacitive RH sensor, Pt100 temperature sensor | | |
| Control type | Embedded multiple PID controller, touch screen graphical user interface | | |
| Programmer function | 20 user programs can be saved, up to 200 set-points per program can be changed | | |
| External sample loop for MBW reference | Temperature controlled outlet and inlet, 6 mm fittings | | |
| USB ports | 7 front, 2 rear | | |
| Integrated software | Rotronic HW5 | | |
| Water level | Low and high alarm, bar graph status indication | | |
| Water quality | UV sterilization, auto time cycling | | |
| Desiccant condition | Condition monitored during control operation | | |
| Optional enhanced features | Temperature and humidity range extensions, AutoCal, External MBW/RHS Reference Integration, Remote Screen Share, Remote API | | |
| Power supply | 110...240 VAC 50/60 Hz, 3 A (240 VAC) 6A (110 VAC) | | |
| Housing | Powder coated aluminum and steel, IP20 | | |
| Operating conditions | 10-35 °C, <math>< 2000</math> m altitude | | |
| CE | Safety: | EN 61010-1:2001 | |
| | EMC: | EN 61326-1:2006 | |
| | | EN 61000-6-1:2007 | |

| Order code | Description |
|--------------------|--|
| HG2-S | HygroGen2 with touch screen, calibrated control/reference probe, set-point control & programmer function, heated sample loop, desiccant cell, fill syringe, embedded HW5-P software. Order chamber door separately |
| HG2-XL | HygroGen2-XL with touch screen, calibrated control/reference probe, set-point control & programmer function, heated sample loop, 2 x desiccant cell, fill syringe, embedded HW5-P software. |
| MBW473-RP2-SET | MBW473 dew point mirror, RP2 measurement head, SCS certification |
| MBW473 SH2-SET | MBW473 dew point mirror, SH measurement head, SCS certification Recommendation, SH placed inside the HG-XL on the top shelf, sampling directly from the inside |
| HG2-AutoCal-Code | Extension (activation key): automatic calibration function |
| HG2-ExtRef-Code | Extension (formerly Autocal+, requires AutoCal or RemoteAPI, activation key): MBW/RHS External Reference Integration - enables MBW chilled mirror as external reference |
| HG2-TempExt-Code | Extension (activation key): extended temperature range -5...60 °C |
| HG2-HumiExt-Code | Extension (activation key): extended humidity range 2...99 %rh |
| HG2-RemoteSS-Code | Extension (formerly Remote, activation key): Remote Screen Share |
| HG2-RemoteAPI-Code | Extension (activation key): programming interface for remote control |

HygroGen2 / HygroGen2-XL accessories

Consumables

| | |
|-----------|--|
| HG2-DES-3 | Desiccant for molecular sieve (3 kg) |
| HG2-DC | Additional desiccant cell; pre-filled with molecular sieve |
| HG2-FILL | Fill tube and syringe |

Chamber doors, plugs and probe sleeves

| | |
|--------------|---|
| HG2-D-888888 | HG2-S door, 6 x 30 mm ports with 6 bungs; order specific B8 sleeves to suit smaller probe diameters |
| HG2-DP-00000 | HG2-S clear acrylic door (no ports) for instruments with displays |
| HG2-B8 | 30 mm bung for HG2-D-888888 |
| HG2-B8-xx | B8 probe sleeves for HG2-D-888888 (external: 30 mm; internal: probe diameter see xx diameter codes) |
| HG2-D-xxxxx | HG2-S custom door for > 30 mm ports, please ask your Rotronic dealer for the doors available |
| HG2-Bxx | Custom bung |
| HG2-Bxx-xx | Custom probe adaptor sleeves |

Accessories

| | |
|------------------|--|
| HG2-TB | HG2-S transit bag, lightweight |
| HG2-TC | HG2-S heavy-duty transit case |
| HG2-AC3001-L/050 | HygroClip2 calibration cable, 50 cm, USB connector |
| HG2-HW5-V3 | Software for HygroGen2 |
| HG2-CAM | Probe sleeve with high definition USB cam |



HG2-D-888888 door with plugs and probe sleeves



Door cross section



HygroGen bag



HygroGen case

Humidity standards

Equipped with Rotronic humidity standards, a suitable calibration device and the HW5 software, it is easy to calibrate and adjust probes on-site at your premises. It is also possible to calibrate and adjust probes with the handheld instrument HP32 (direct adjustment with the device, no software needed).

APPLICATIONS

Calibration and adjustment of Rotronic probes (third-party probes also possible).

FEATURES

- Traceable to national standard
- Ampoules contain unsaturated salt solutions
- Inexpensive calibration on site
- Simple and safe use
- Unlimited lifetime as long as the glass ampoules are kept sealed
- Practical packs of 5 ampoules of the same humidity value (approx. 0.8 ml per ampoule)



| Order code | Nominal value | Measurement uncertainty at 23 °C | Quantity | PADS Included |
|----------------|---------------|----------------------------------|----------|---------------|
| EA00-SCS | 0,5 %rh | ±0.3 %rh | 5 | 5 |
| EA00-BOX-SCS | 0,5 %rh | | 50 | - |
| EA05-BOX25-SCS | 5 %rh | | 25 | 25 |
| EA05-BOX-SCS | 5 %rh | | 50 | 50 |
| EA10-SCS | 10 %rh | | 5 | 5 |
| EA10-BOX-SCS | 10 %rh | | 50 | - |
| EA11-SCS | 11 %rh | | 5 | 5 |
| EA20-SCS | 20 %rh | | 5 | 5 |
| EA20-BOX-SCS | 20 %rh | | 50 | - |
| EA35-SCS | 35 %rh | | ±0.4 %rh | 5 |
| EA35-BOX-SCS | 35 %rh | 50 | | - |
| EA50-SCS | 50 %rh | ±0.6 %rh | 5 | 5 |
| EA50-BOX-SCS | 50 %rh | | 50 | - |
| EA60-SCS | 60 %rh | | 5 | 5 |
| EA65-SCS | 65 %rh | ±0.7 %rh | 5 | 5 |
| EA65-BOX-SCS | 65 %rh | | 50 | - |
| EA75-SCS | 75 %rh | ±0.8 %rh | 5 | 5 |
| EA80-SCS | 80 %rh | | 5 | 5 |
| EA80-BOX-SCS | 80 %rh | 50 | - | |
| EA95-SCS | 95 %rh | ±0.8 %rh | 5 | 5 |
| EA95-BOX-SCS | 95 %rh | | 50 | - |
| EA-PADS | - | - | - | 50 |



Compatible

- With all calibration devices

Delivery package

- SCS certificate
- Textile pads
- Calibration instructions


Recommended accessories




- Textile pads in tubes (50 pc.) EA-PADS

Calibration devices

APPLICATIONS

Rotronic calibration devices are small, airtight chambers that fit Rotronic probes precisely. The lower part of the device consists of a screw-on lid into which the humidity standard is poured on to an absorbent textile pad. The specified humidity is generated in the calibration device after a stabilization period. High humidity values require a longer stabilization period. The probe can then be calibrated or adjusted by comparison with the reference value of the humidity standard.

| Order code | Use | |
|--|--|---|
| Push-on calibration devices. Gasket with O-ring and thumb screw | | |
| ER-15 | For 1 probe Ø 14...15 mm Brass, nickel-plated |  |
| EDM 15/15 | For 2 probes Ø 14...15 mm Brass, nickel-plated |  |
| ERV-15 | For 1 probe Ø 14...15 mm Vertical calibration position Brass, nickel-plated |  |
| ER-05 | For 1 probe Ø 4...5 mm Brass, nickel-plated |  |
| ER-12K | For 1 probe Ø 12 mm Brass, nickel-plated |  |
| Calibration devices for special probes | | |
| EGS | For all sword probes Brass, nickel-plated |  |

| Order code | Use | |
|---|---|---|
| Screw-on calibration devices. Gasket with seal face on probe. Cannot be used for HC2A-S probes | | |
| EMV-25 | For 1 probe Ø 25 mm (PG11) Vertical calibration position Aluminum, Ematal-coated |  |
| Calibration devices for special probes | | |
| WP-14-S | For bell probes HC2-AW, HC2-AW-USB, AW-DIO POM, stainless steel 1.4305 |  |
| HL-20-CAL | For HL-20 POM Spring steel 1.4310 |  |

Extension cables


For HC2A/HC2 probes

The HC2A/HC2 extension cables extend the HC2A probes away from transmitters, The HC2A/HC2 extension cables extend the HC2A/HC2 probes away from transmitters, handheld instruments or data loggers. The HC2A/HC2 extension cables can be used up to 5 meters. For longer cable runs, use the AC3003 signal amplifier for distances up to 100 meters.

FEATURES

- Range of application -40...90 °C

| Extension cables for HC2A/HC2 probes | | | |
|--------------------------------------|--------------|--------|-----------------------------|
| Order code | Cable length | Shaft | Color |
| E2-F3A | 30 cm | Normal | Black |
| E2-01A | 1 m | Normal | Black |
| E2-02A | 2 m | | |
| E2-02A-S | 2 m | | |
| E2-05A | 5 m | Normal | White |
| E3-01A | 1 m | Normal | |
| E3-05A | 5 m | Normal | |
| E2-02A-M | 2 m | Normal | Black, with metal connector |

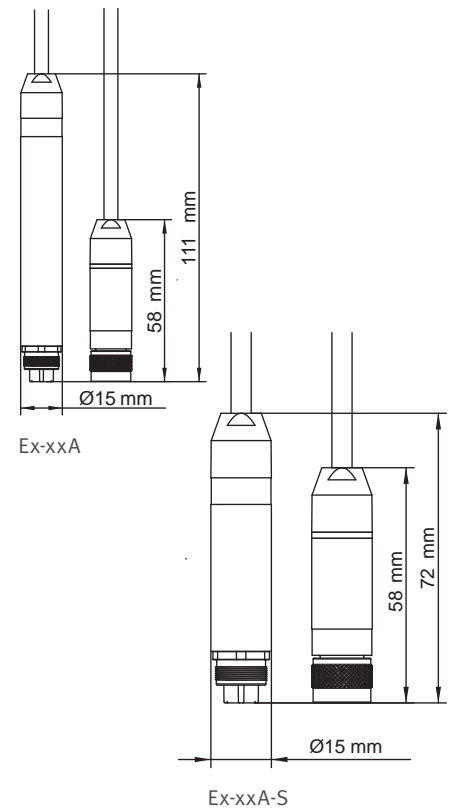


Extension cables

For use with HC2-S3C03(PT15) meteorological probe and analogue probes.

FEATURES

- Range of application -40...70 °C


| Cables to connect an analog probe to a HP23-A, HF8, HL-NT | | |
|---|--------------|-------|
| Order code | Cable length | Color |
| A-01XX | 1 m | Black |

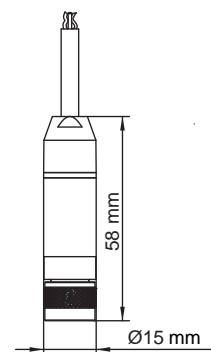

HC2A/HC2 connector

FEATURES

- Maximum wall thickness: 4 mm
- Hole diameter: 12.5 mm
- 30 cm long, color-coded wires
- Ends tin-plated
- Range of application: -40...100 °C

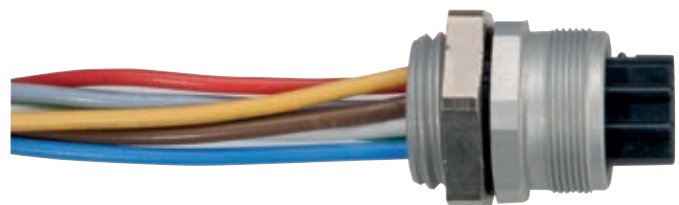


Order code: E2-XX

Extension cables


For HC2A/HC2 probes with open ends

The HC2A/HC2 probe extension cables with open ends can be used to integrate HC2A/HC2 probes into users' analog or digital networks.

| Extension cables for HC2A/HC2 probes with open ends | | | | |
|---|--------------|---|-------|----------------------|
| Order code | Cable length | Shaft | Color | Range of application |
| Supply voltage 3.3 VDC (without electronic control) | | | | |
| E2-01XX | 1 m | Normal | Black | -40..90 °C |
| E2-02XX | 2 m | Short [S] | | |
| E2-02XX-S | 2 m | | | |
| E2-05XX | 5 m | Normal | | |
| E3-01XX | 1 m | Normal | White | |
| E3-02XX | 2 m | | | |
| E3-05XX | 5 m | | | |
| Supply voltage 5...24 VDC / 5...16 VAC (with electronic control) | | | | |
| E2-02XX-ACT/01 | 2 m | Normal | Black | -40..70 °C |
| E2-05XX-ACT/01 | 5 m | | | |
| E2-10XX-ACT/01 | 10 m | | | |
| E3-02XX-ACT/01 | 2 m | Normal | White | |
| E3-05XX-ACT/01 | 5 m | | | |
| E3-10XX-ACT/01 | 10 m | | | |
| Supply voltage 5...40 VDC / 6...28 VAC (with electronic control) | | | | |
| E2-05XX-ACT-HV | 5 m | Black | 5 m | |
| Wire assignment | | | | |
| Green | VDD (+) | 3.3 VDC | | |
| | | 5...24 VDC / 5...16 VAC | | |
| | | 5...40 VDC / 6...28 VAC | | |
| Gray | GND | Digital and power supply GND | | |
| Red | RxD | UART | | |
| Blue | TxD | UART | | |
| White | Out1 | Analog output 1, standard humidity 0...100 %RH = 0...1 V | | |
| Brown | Out2 | Analog output 2, standard temperature -40...60 °C = 0...1 V | | |
| Yellow | AGND | Analog GND (connect to GND when using docking stations) | | |

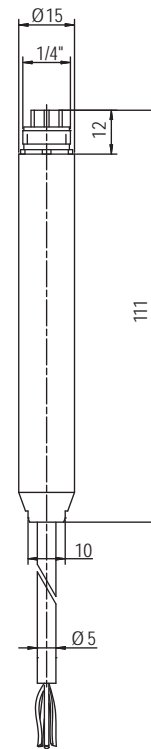

E2-01xx

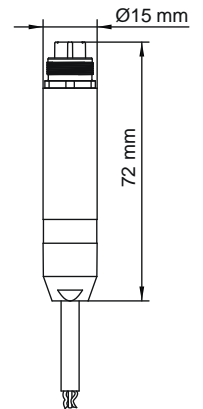

E2-02xx-S


Digital signal amplifiers

Using a digital signal amplifier, it is possible to achieve probe line distances of up to 50 meters.

FEATURES

- Color: black
- Range of application: -40...70 °C
- Power supply: 3.3 V / 4.8 mA

| Digital signal amplifiers | | |
|---------------------------|--|----------------------|
| Order code | Description | Cable length / Shaft |
| AC3003 | UART signal amplifier, probe and instrument side with luster terminals | Normal shaft |
| AC3003/10 | AC3003 with luster terminal and not pre-assembled Cat. 5 cable, normal shaft | 10 m |
| AC3003/20 | | 20 m |
| AC3003/50 | | 50 m |

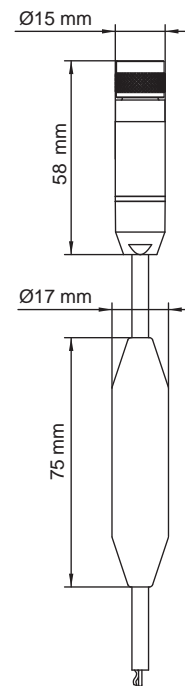


AC3003

Service cable HF transmitters

FEATURES

- Transfer of measured values from HF3/4/5/7 to HP32/23
- USB-Mini to 7-pin connector

| Service cable for HF-series transmitters | |
|--|--|
| Order code | Description |
| AC2001 | Service cable for HF-series transmitters |

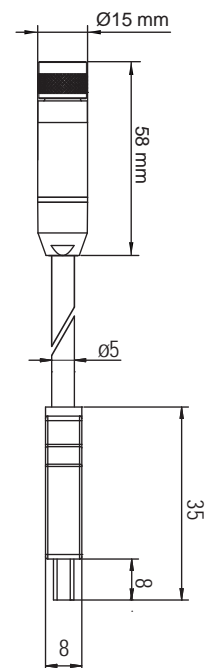

AC2001

USB converters


For HC2A/HC2 probes

FEATURES

- To connect HC2A/HC2 probes to a PC via the USB interface
- Requires HW5 software on the PC
- Power supply via USB interface
- Range of application: -40...70 °C
- Cable length: 2.8 m

USB converters for HC2A/HC2 probes

| Order code | Description | Shaft |
|------------|--|----------------|
| AC3001 | Active UART to | Short shaft |
| AC3001-L | USB converter cable | Long shaft [L] |
| XD-AC3001 | Active UART to USB converter cable for XD probes | Short shaft |

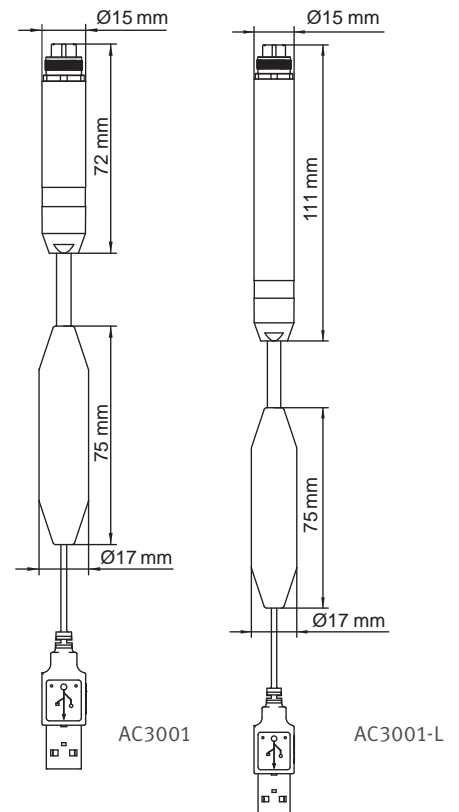

RS-485 and Modbus converter

For HC2A/HC2 probes

FEATURES


- To connect HC2A/HC2 probes to a RS-485 or Modbus network
- It is possible to switch between Modbus and RS-485 protocol in the HW5 software
- Power supply: 5...28 VDC
- Range of application: -40...70 °C

Note

Self-heating of the converter can lead to errors in the measured values; it is therefore advisable to place the probe a short distance away using an extension cable (e.g. E2-F3A).

RS-485 / Modbus converters

| Order code | Description | Cable length |
|-------------|---|--------------|
| E2-05XX-MOD | Converter cable for HC2A/HC2 RS-485 and MODBUS | 5 m |

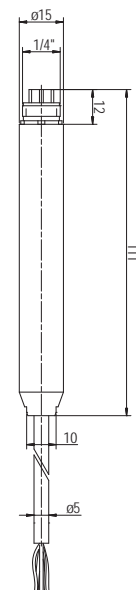

Service cables

For HF, HL-20


FEATURES

- Connects Rotronic instruments via their service interface (UART) to a USB interface
- Requires HW5 software
- For programming (settings, scaling, firmware update, etc.)
- Two different types:
 - AC3006, the instrument must be supplied with power.
 - AC3009, the instrument is supplied with power via the USB interface.

AC3006 in combination with a 2-wire type: with all 2-wire types (HF320, HF420, HF520, HF620, HF720) ensure that the computer or laptop is galvanically isolated from the main power supply.

| Service cables | | |
|----------------|---|--------|
| Order code | Description | Length |
| AC3006 | Service cable without power supply | 1.8 m |
| AC3009 | Service cable with power supply via USB interface | 3.6 m |

| | AC3006 | AC3009 | AC0006 |
|---------|--------|--------|--------|
| HF1 | | | |
| HF3 | ✓ | ✓ | |
| HF4 | ✓ | ✓ | |
| HF5 | ✓ | ✓ | |
| HF7 | ✓ | ✓ | |
| TF5 | ✓ | ✓ | |
| PF4 | ✓ | ✓ | |
| PF5 | ✓ | ✓ | |
| HL-20 | ✓ | ✓ | |
| BL-1D | | | |
| HL-1D | | | |
| TL-1D | | | |
| CL11 | | | |
| HP32 | | | ✓ |
| CP11 | | | |
| AwTherm | | | ✓ |
| CRP5 | ✓ | | |

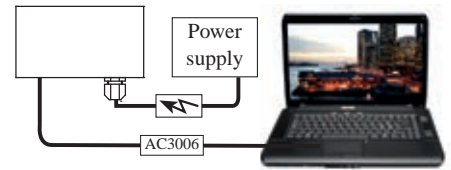

AC3006



AC3009



AC3006 / AC3009



HC2 simulators

FEATURES

- Humidity / Temperature simulators with fixed values and certificate
- For system validation
- Values cannot be changed with the HW5 software
- Range of application: -40...100 °C

| Service cables | | |
|-------------------|----------|-------------|
| Order code | Humidity | Temperature |
| HC2-SIMC-000/0023 | 0 %RH | 23 °C |
| HC2-SIMC-035/0023 | 35 %RH | 23 °C |
| HC2-SIMC-050/0023 | 50 %RH | 23 °C |
| HC2-SIMC-080/0023 | 80 %RH | 23 °C |

Other types available on request.



Protective caps

FEATURES

- Protects probes/connectors during cleaning cycles against water and chemical substances, e.g. H₂O₂

| Protective caps | |
|-------------------|--|
| Order code | Protection |
| Protection-E2/E3 | Connectors |
| Protection-Filter | Sensor note: only compatible with HC2 probes |
| Protection-HC2 | Complete HC2A/HC2 probe |



Protection HC2

Protection filter



Protection E2/E3

Mounting kits

| Mounting kits | |
|---------------|--|
| Order code | Description |
| AC5002 | DIN top-hat rail adapter for PF4, PF5, HF4, HF5, HF8 |



AC5002

Mounting gland with flange

| Mounting gland with flange for temperatures <100 °C | |
|---|--|
| Order code | Description |
| AC5005 | Mounting gland with flange for 15 mm probes M20 x 1.5 / to 100 °C |



AC5005

| Mounting glands without flange | |
|--------------------------------|---|
| Order code | Description |
| AC1303-M | Mounting gland for 15 mm probe M20 x 1.5 / brass, nickel-plated / to 200 °C |
| AC1304-M | Mounting gland for 25 mm probe M32 x 1.5 / brass, nickel-plated / to 200 °C |
| AC1301-MEX | Mounting gland for 15 mm ATEX probes M25 x 1.5 / brass, nickel-plated / to 95 °C |



AC1303-M
AC1304-M
AC1301-MEX

| Mounting flange | | |
|-----------------|------------|--|
| Order code | Use with | Description |
| AC1305 | AC1303-M | Mounting flange for AC1303-M Ø 80 mm / steel, nickel-plated / to 200 °C |
| AC1306 | AC1304-M | Mounting flange for AC1304-M Ø 80 mm / steel, nickel-plated / to 200 °C |
| AC1307 | AC1301-MEX | Mounting set for AC1301-MEX Ø 80 mm / steel, nickel-plated / to 200 °C |



AC1305
AC1306

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



PT100 probes

Rotronic offers a wide range of its own PT100 probes, but other 4-wire temperature probes can also be used.


Accuracy: Class A

Wire technique: 4-wire

Connection: 4-pin Binder connector plug

τ_{90} : Time needed to reach 90% of the new measured value after a temperature increase (air velocity = 2 m/s)

PT100 input

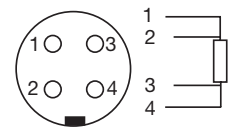

4-wire PT100



AC1900



AC1902




AC1904



AC1909

| Order code | Probe type | Temperature range | Cable/handle operating range | |
|------------|---|-------------------|--|--|
| AC1900 | Fixed probe 100 x 3 mm DIN 1.4404 | -50...300 °C | -40...105 °C without cable | |
| AC1902 | Insertion probe with handle 250 x 3 mm DIN 1.4404 | -50...350 °C | -40...105 °C 1 m, PUR cable | |
| AC1903 | Cable probe 200 x 6 mm Not waterproof DIN 1.4404 | -50...350 °C | -40...105 °C 2 m, thermoplastic cable | |
| AC1904 | Cable probe 50 x 6 mm Waterproof DIN 1.4301 | -50...105 °C | -40...105 °C 2 m, thermoplastic cable | |
| AC1909 | Fixed probe for measurements in air, 100 x 4 mm DIN 1.4401 | -50...150 °C | -40...105 °C without cable | |
| AC1913-A | Kapton foil probe, 20 x 15 x 2 mm | -50...200 °C | -40...105 °C 1 m, four PFA wires | |
| AC1916-A-T | Cable probe 60 x 6 mm Waterproof DIN 1.4571 | -30...200 °C | -40...85 °C 2 m PTFE cable | |

| Order code | Probe type | |
|--------------|--|---|
| HC2-PT100-B4 | Adapter for PT100 probes to HP32, HF5, PF4 and PF5 |  |
| AC1607/05 | Extension cable for PT100 probes, 4-pin Binder male/female connectors Max. 85 °C, min. -40 °C | 5 m |
| AC1607/10 | Extension cable for PT100 probes, 4-pin Binder male/female connectors Max. 85 °C, min. -40 °C | 10 m |
| AC1607/25 | Extension cable for PT100 probes, 4-pin Binder male/female connectors Max. 85 °C, min. -40 °C | 25 m |

| Compatible | Delivery package |
|--|---|
| <ul style="list-style-type: none"> Transmitters | <ul style="list-style-type: none"> Temperature probe |

TF5 series

The TF5 series is compatible with all PT100 probes in the Rotronic range. This device generation includes a unique calibration and adjustment function.

FEATURES

- Interchangeable PT100 probes
- Range of application electronics: -40...60 °C / 0...100 %rh -10...60 °C with display
- Temperature measurement with PT100 probe, 4-pin Binder connection
- Service interface

Power supply

- Low voltage: 2 or 3-wire

Signal outputs

- Current output
- Voltage output

Version

- Wall version

Output parameter

- Temperature

Output scaling

- Temperature: range selectable, standard: -40...60 °C

Display

- Display with backlight (excl. 2-wire, trend indicator and keypad)
- Without display



TF5 wall version

APPLICATIONS

Production processes, storage, transportation and drying processes.

2-wire


| | |
|-------------------|---------------------------------|
| Order code | TF520 Type W |
| Output signal | 4...20 mA |
| Supply voltage | 10...28 VDC |
| Display | Optional (without backlight) |
| Temperature range | Scalable* |
| Probes | Interchangeable (-100...600 °C) |

3-wire


| | |
|-------------------|--|
| Order code | TF53x Type W |
| Output signals | 0...1 V 0...5 V 0...10 V 0...20 mA 4...20 mA Customer selection possible* |
| Supply voltage | 15...40 VDC / 12...28 VAC |
| Display | Optional (with backlight) |
| Temperature range | Scalable* |
| Probes | Interchangeable (-100...600 °C) |



Wall version, type W

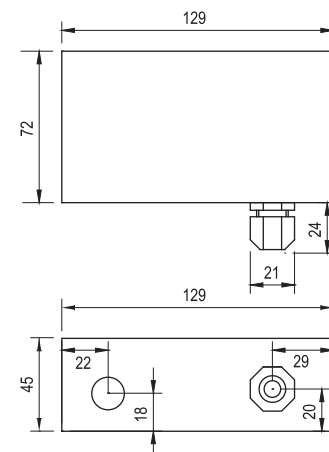

PT100 input

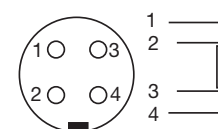

4-wire PT100

Compatible

- PT100 probes
- All PT100 probes with 4-wire connection
- HW5

Delivery package

- Product qualification
- Short instruction manual
- Screws and plugs for mounting
- Connector for third-party probe

Recommended accessories

- Service cable AC3006 / AC3009*
- Extension cable 5 m AC1607/05
- Mounting kit DIN top-hat rail AC5002

* Requires optional HW5 software and service cable.

| Technical data | TF520 2-wire | TF53x 3-wire |
|---|--|--|
| General | | |
| Parameter | Temperature | |
| Housing material | ABS | |
| Protection | IP65 | |
| Dimensions | 129 x 72 x 45 mm | |
| Weight | 220 g | |
| Probe connection | 4-pin Binder, threaded coupling | |
| Display/Operation optional | LCD, 1 or 2 decimals without backlight Menu navigation, 4 keys | LCD, 1 or 2 decimals with backlight Menu navigation, 4 keys |
| Electrical connections | Connections: screw terminals inside Cable gland: M16 | |
| Power supply | 10...28 VDC | 15...40 VDC / 12...28 VAC |
| Current consumption | <20 mA | <20 mA |
| Range of application / Storage conditions | -40...60 °C / -10...60 °C (with LCD), 0...100 %rh | |
| Temperature scaling | Max. -100...200 °C | |
| Firmware update | Via HW5 software | |
| Service interface | UART service interface (Universal Asynchronous Receiver Transmitter) | |
| CE / EMC compatibility | EMC Directive 2014/30/EU | |
| Fire protection class | Corresponds to UL94-HB | |
| Analog output | | |
| Number | 1 | |
| Current | 4...20 mA | 0(4)...20 mA |
| Voltage | N/A | 0...1/5/10 V |
| Permissible load | ≤500 Ω | ≤500 Ω (current output) ≥1 kΩ/V (voltage output) |

TL-CC1

The Rotronic cold-chain temperature logger TL-CC1 is easy to configure (without software), generates PDF reports automatically and comes at an unbeatable price.

APPLICATIONS

Monitoring of the cold chain during the transportation of sensitive freight such as pharmaceuticals, foods and technical products.

FEATURES

- PDF report generation without software installation
- Freely configurable
- Clear alarm indication
- All-in-one logger: configuration tool, PDF report, instruction manual and calibration certificate
- High storage capacity, single use, single journey
- Conforms EN 12830



| Technical data | TL-CC1 |
|---|--|
| General | |
| Parameter | Temperature |
| Temperature sensor | NTC thermistor |
| Accuracy at -30...70 °C | ±0.5 K |
| Resolution | 0.1 °C |
| Range of application / Storage conditions | -30...70 °C / -22...158 °F, < 80 %rh |
| IP protection | IP65 (in plastic bag) |
| Weight | Approx. 10 g |
| Battery | CR2032 (not replaceable) |
| Dimensions without bag | 80 x 43 x 2.5 mm |
| Dimensions with bag | 105 x 55 x 2.5 mm |
| Logging interval | 0.5/5/10/30/60/90/120 min. |
| Start delay | 0.5/5/10/30/60/90/120 min. |
| Alarm ranges | -20...-10 °C, -10...0 °C, 2...8 °C, 0...15 °C, 0...25 °C, 15...25 °C, freely selectable values |
| Alarm type | Deactivated, single or cumulative |
| Storage period | 12 months |
| Storage capacity | 8192 data points |
| Event marking | Up to 8 points |
| Use | START/STOP button, MARK button |
| Alarm indication | LED indicators PDF reports |
| Communication | USB 2.0 port, type A |
| Operating system | Windows |
| Conformity | EN 12830 |

PDF report



Delivery package

- 10 pc. per box
- Short instruction manual

TL-1D

TL-1D temperature data logger: compact, accurate and inexpensive.

APPLICATIONS

Warehouses, factories, museums, office buildings, cleanrooms, transportation, libraries, test facilities, room monitoring in HVAC systems.

FEATURES

- Accuracy: ± 0.3 K, at $23\text{ }^{\circ}\text{C} \pm 5$ K
- Compact with very high level of IP protection
- High storage capacity: 32,000 lines
- Free evaluation and configuration software HW5
- Very long battery life: up to 3 years
- Conforms to EN12830. Version 3.0 and later
- Programmable logging mode

| Technical data | TL-1D |
|--|---|
| General | |
| Parameter | Temperature |
| Sensor type | NTC thermistor |
| Accuracy at $23\text{ }^{\circ}\text{C} \pm 5$ K | ± 0.3 K |
| Range of application / Storage conditions | $-30\text{...}70\text{ }^{\circ}\text{C}$ / $0\text{...}100\%$ rh |
| IP protection | IP67 |
| Weight | 85 g |
| Dimensions | 90 x 60 x 23 mm |
| Logging interval | 30 s...24 h |
| Battery | 1 x CR2 |
| Battery life | Up to 3 years (logging interval 1 h) |
| Battery charge indicator | Yes (HW5 software, display and LED indicator) |
| Storage capacity | 32,000 lines |
| Function | MIN/MAX/AVG |
| Display | LCD |
| Resolution | $0.1\text{ }^{\circ}\text{C}$ |
| Display refresh rate | 5 s (standard) or same as logging interval |
| LED indicators | 2 LEDs Right LED flashes green during data logging Left LED flashes red when limits broken or low battery |
| Communication | USB-Mini port (cable optional) |
| Standards | EN12830 (V3.0 and later) |




USB-Mini port
(settings and data
download)

Battery
compartment

Configuration & evaluation



The values stored in the TL-1D can be downloaded with the HW5 software and displayed graphically. The user determines the logging interval, the alarm limits, the recording mode and much more.

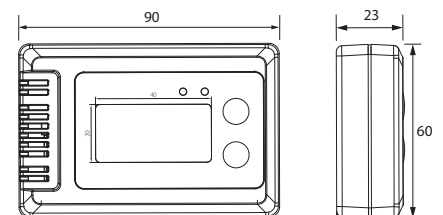

Delivery package

- Short instruction manual
- Battery CR2
- Function and calibration certificate

Recommended accessories

- USB service cable

AC0003

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Video differential pressure

Interested? Then scan the QR code!



PF4/PF5 series

The thermal measurement technique of the PF4 transmitter allows exact measurements in the smallest of ranges. The differential pressure transmitter enables Rotronic customers to measure a further important parameter in addition to humidity, temperature, low dew point and CO₂.

FEATURES

- Accuracy: $\pm 1.0\%$ full scale
- Fast response time
- Freely configurable analog signals
- Integrated relay switch contact
- High resistance to pressure
- Thermal mass flow measurement at low flow rate
- High immunity to dust and humidity in the environment
- Integrated damping function for variable response times

Power supply

- Low voltage: 3-wire

Signal outputs

- Current output
- Voltage output
- Ethernet
- Relay switch contact

Version

- Wall mount

Output parameters

- Differential pressure
- Differential pressure & temperature
- Differential pressure, temperature & relative humidity

Measurement ranges

- $-25\dots+25$ Pa / $-50\dots+50$ Pa / $-100\dots+100$ Pa / $-250\dots+250$ Pa / $-500\dots+500$ Pa

Display

- Display with backlight, trend indicator and keypad
- Without display



PF4/PF5 series

APPLICATIONS

Clean rooms, operating theaters, HVAC, filter technology and applications where small pressure differences prevail.

BENEFITS

- Flow or diaphragm differential pressure sensors
- 1 to 3 analog outputs, 1 analog input
- Network integration (Ethernet)
- Modbus TCP or RTU over RS485
- Potential-free relay with switch contacts

3-wire

| Order code | PF44x-1 | PF44x-L |
|----------------|---|----------------------------------|
| Output signals | 0...1/5/10 V 0/4...20 mA Relay switch contact | Ethernet Relay Switch contact |
| Supply voltage | 15...48 VDC / 16...35 VAC | |
| Display | Optional | |

3/4-wire



| Order code | PF54x-1 | PF54x-L |
|----------------|---|----------------------------------|
| Output signals | 0...1/5/10 V 0/4...20 mA Relay switch contact | Ethernet Relay Switch contact |
| Supply voltage | 18...48 VDC / 16...35 VAC | |
| Display | Optional | |



PF4 with PT100



PF5 with HC2-A

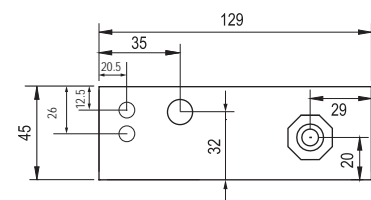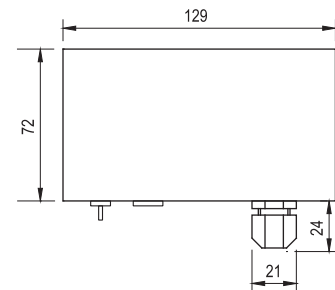

Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Screws and plugs for mounting

Recommended accessories

- Service cable AC3006 / AC3009*
- Temperature probe AC19xx
- Mounting kit DIN top-hat rail AC5002
- HC2A-S probe

* Requires optional HW5 software and service cable.

PF4/PF5 series

| Technical data | PF44X-1 Analog 3-wire | PF44X-L Analog & digital 3-wire | PF54X-1 Analog 3/4-wire | PF54X-L Analog & digital 3/4-wire |
|--|--|--|--|--|
| General | | | | |
| Parameters | Differential pressure, temperature and relative humidity | | | |
| Housing material | ABS | | | |
| IP protection | IP65 | IP40 | IP65 | IP40 |
| Mounting position | Wall mount | | | |
| Dimensions | 129 x 72 x 45 mm | | | |
| Weight | 243 g | | | |
| Display | Coloured TFT display | | | |
| Electrical connections | Screw terminals M16 cable gland | Screw terminals M16 cable gland, socket | Screw terminals M16 cable gland | Screw terminals M16 cable gland, socket |
| Power supply | 15...48 VDC / 16...36 VAC (galvanically isolated) | | | |
| Current consumption | <300 mA @ 24 VDC | | | |
| Range of application / Storage conditions | -5...60°C / 0...100%rh, non-condensing | | | |
| Firmware upgrade | Via HW5 software | | | |
| Service interface | UART service interface (inside device) | | | |
| CE / EMC compatibility | EMC-Directive 2014/30/EU | | | |
| Fire protection class | Corresponds to UL94-HB | | | |
| Differential pressure measurement | | | | |
| Measurement principle | Thermal mass flow measurement | | Membran sensor | |
| Measurement ranges | ±10 Pa / ±25 Pa / ±50Pa / ±100 Pa / ±250 Pa / ±500 Pa | | ±25 Pa / ±50Pa / ±100 Pa / ±250 Pa / ±500 Pa | |
| Medium | Air and non-aggressive gases | | | |
| Accuracy at 23°C ±3 K | ±1.0 %FFS | | | |
| Long-term stability | ±0.05 % FSS/year (typ.) ±0.1 % FSS/year (max.) | | ±0.25 % FSS (typ.) per year @ ±250 and ±500 Pa measurement range ±0.3125 % FSS (typ.) per year @ ±100 Pa measurement range ±0.625 % FSS (typ.) per year @ ±50 Pa measurement range ±1.25 % FSS (typ.) per year @ ±25 Pa measurement range | |
| Measurement interval | 1 s | | | |
| Pressure resistance | 5 bar | | 0.7 bar | |
| Leak rate | <10.8 ml/h | | 0 | |
| Pressure connections | Tubing connector Ø 4 mm x 10 mm | | | |
| Measurement of temperature and relative humidity (type-dependent) | | | | |
| Probe connections | Temperature: 4 pin Binder for 4-wire PT100 Humidity: Rotronic E2 for Rotronic HC2A-S probe Accuracy: probe dependent | | | |
| Outputs | | | | |
| Analog outputs | Min. 1, max. 3, freely configurable | | | |
| Analog output type | 0 to 1 V 0 to 5 V 0 to 10 V 0 to 20 mA 4 to 20 mA | | | |
| Relais / Switch output | 1 relay potential-free change-over switch (NC - COM - NO) | | | |
| Accuracy analog output @ 23°C | Voltage output: ±1 mV/V Current output: ±20 µA | | | |
| Permissible load | > 1 kΩ/V (voltage output) / < 500 Ω (current output) | | | |

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Video CO₂

Interested? Then scan the QR code!



CL11 benchtop display unit

Benchtop display unit for monitoring indoor air quality. Measures and records CO₂, relative humidity and temperature.

APPLICATIONS


Indoor air quality (IAQ) measurements in offices, conference rooms, schools, etc.

FEATURES

- Benchtop or wall mounting
- Measures and records CO₂, relative humidity and temperature
- Accuracy: ± 30 ppm, ± 3 %rh, ± 0.3 K
- ROTRONIC HYGROMER® IN-1 humidity sensor
- 40,000 data point memory for CO₂, humidity and temperature values
- Maximum, minimum and average value display
- Adjustable audible and visual CO₂ alarm
- Real-time clock
- Includes free logging and configuration software HW5



| Order code | CL11 |
|-----------------------------------|---|
| Probe type | CO ₂ : infrared (NDIR) with automatic calibration (ABC) Humidity: ROTRONIC HYGROMER® IN-1 Temperature: NTC |
| CO ₂ measurement range | 0...5000 ppm |
| Range of application | 0...50 °C / 0...95 %rh, non-condensing |
| Material | ABS |
| Power supply | Only with AC adapter |
| IP protection | IP30 |

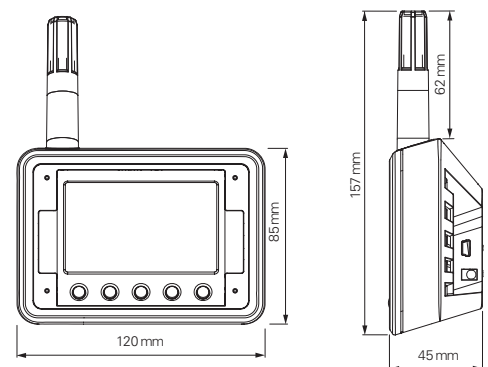

Delivery package

- Short instruction manual
- AC adapter AC1214
- Rotronic software HW5
- USB cable
- Factory adjustment certificate

Recommended accessories

- Humidity calibration device ER-15
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80%rh EA80-SCS
- External temperature probe AC1215

CO₂ DISPLAY

Room / Wall panel for monitoring indoor air quality. Measures and records CO₂, relative humidity and temperature.


APPLICATIONS

Indoor air quality (IAQ) measurements in offices, conference rooms, schools, etc.

FEATURES

- Benchtop or wall mounting
- Measures and records CO₂, relative humidity and temperature
- Accuracy: ±30 ppm, ±2.5 %rh, ±0.3 K
- ROTRONIC HYGROMER® IN-1 humidity sensor
- 18,000 data point memory for CO₂, humidity and temperature values
- Adjustable, visual CO₂ alert indicator
- Data download via USB flash drive
- Display of date and time

| Order code | CO ₂ Display |
|-----------------------------------|---|
| Probe type | CO ₂ : infrared (NDIR) with automatic calibration (ABC) Humidity: ROTRONIC HYGROMER® IN-1 Temperature: NTC |
| CO ₂ measurement range | 0...5000 ppm |
| Range of application | 0...50 °C / 0...95 %rh, non-condensing |
| Material | ABS |
| Power supply | AC adapter, 12 V |
| Dimensions | 330 x 250 x 50 mm |

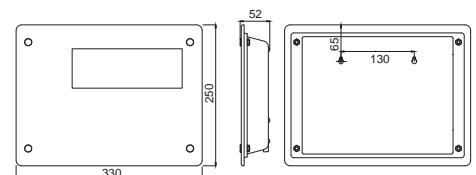

Delivery package

- Short instruction manual
- Mounting hardware
- Factory adjustment certificate

Recommended accessories

- Humidity calibration device ER-15
- Humidity standard for calibration 80%rh EA80-SCS
- Humidity standard for calibration 35 %rh EA35-SCS

CP11

Portable monitoring of indoor air quality. Measures and records CO₂, relative humidity and temperature.

APPLICATIONS


Mobile inspections and random tests of indoor air quality in offices, conference rooms, schools, etc.

FEATURES

- Measures and records CO₂, relative humidity and temperature
- Accuracy: ± 30 ppm, ± 2.5 %rh, ± 0.3 K
- ROTRONIC HYGROMER® IN-1 humidity sensor
- 18,000 data point memory for CO₂, humidity and temperature values
- Maximum, minimum and average value display
- Adjustable audible CO₂ alarm
- Adjustable automatic power off function
- Includes logging and configuration software, USB data cable and case



| Order code | CP11 |
|-----------------------------------|---|
| Probe type | CO ₂ : infrared (NDIR) with automatic calibration (ABC) Humidity: ROTRONIC HYGROMER® IN-1 Temperature: NTC |
| CO ₂ measurement range | 0...5000 ppm |
| Range of application | 0...50 °C / 0...95 %rh, non-condensing |
| Material | ABS |
| Power supply | 4 AA batteries / optional AC adapter |
| IP protection | IP30 |

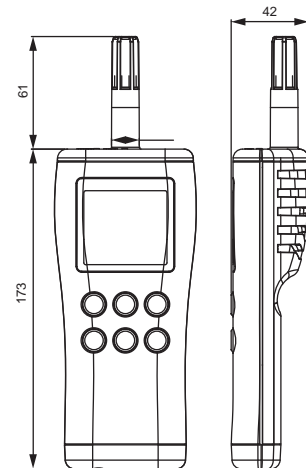

Delivery package

- Short instruction manual
- 4 x AA batteries
- Rotronic software HW5
- USB cable
- Soft case
- Factory adjustment certificate

Recommended accessories

- 5 VDC AC adapter AC1214
- Humidity calibration device ER-15
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80%rh EA80-SCS

| Technical data | CL11 | CP11 | CO ₂ Display |
|---|---|--|---|
| General | | | |
| Parameters | CO ₂ , relative humidity and temperature | | |
| Memory capacity | 40,000 values with time stamp, automatic recording (%rh / °C / ppm) | 18,000 values with time stamp, automatic recording (%rh / °C / ppm) 99 single values with time stamp, manual recording (%rh / °C / DP / WBT / ppm) | 18,000 values with time stamp, automatic recording (%rh / °C / ppm) |
| Housing material / IP protection | ABS / IP30 | | |
| Dimensions | 157 x 120 x 45 mm | 77 x 42 x 234 mm | 330 x 250 x 50 mm |
| Weight | 200 g | 290 g | 1400 g |
| Display | Two-line LCD with backlight | | |
| Alarm | Audible and visual, adjustable for CO ₂ measurement | Audible, adjustable for CO ₂ measurement | Visual, adjustable for CO ₂ measurement |
| Power supply | AC adapter AC1214 | 4 AA batteries / optional AC adapter AC1214 | AC adapter |
| Current consumption | 50 mA | 40 mA | <700 mA |
| Application temp. housing / electronics | 0...50 °C / 0...95 %rh, non-condensing | | |
| Service interface | USB-Mini port | | |
| CE / EMC compatibility | CE conformity 2014/30/EU | | |
| CO₂ measurement | | | |
| Measurement principle | Infrared (NDIR) with automatic calibration (ABC) | | |
| Measurement range | 0...5000 ppm | | |
| Accuracy at 23 °C ±5 K | ±30 ppm ±5 % of measured value | | |
| Null drift | <10 ppm/year | | |
| Maintenance | No maintenance (standard indoor applications) | | |
| Humidity measurement | | | |
| Sensor | ROTRONIC HYGROMER® IN-1 | | |
| Measurement range | 0...100 %rh | | |
| Accuracy at 23 °C ±5 K | <2.5 %rh (10...90 %rh) | | |
| Adjustment points | 35, 80 %rh | | |
| Long-term stability | <1.5 %rh/year | | |
| Response time | <30 s τ63, without filter | | |
| Temperature measurement | | | |
| Sensor | NTC | | |
| Measurement range | -20...60 °C | | |
| Accuracy at 23 °C ±5 K | ±0.3 K | | |
| Response time | 4 s τ90 | | |

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Video water activity

Interested? Then scan the QR code!



Video CRP5

Interested? Then scan the QR code!



Video differential pressure

Interested? Then scan the QR code!



Standalone water activity measurement head AwEasy

The AwEasy is a mobile device for easy and fast measurements of the water activity. The measurement head with Bluetooth can be used with the Smartphone together with the AwEasy App for iOS and Android. The AwEasy has also a small display, a light ring as an indicator and a wireless charger for an easy handling.



APPLICATIONS

Aw checks of cheese, meat, tobacco, building materials, animal feeds, bakery products, paper, medicines, in horticulture and agriculture, etc.

FEATURES

- The reliable AW Quick mode for quick results (typical 4 - 5 min)
- Easy use with a Smartphone App for iOS and Android
- Standalone measuring device with light ring and display
- Long battery life with wireless charging

| Probe | |
|--------------------------------|--|
| Sensor | HYGROMER WA-1 |
| Accuracy @ 23 ±5 °C | ± 0.008 aw / 0.8 %rh / ±0.1 K |
| Operating conditions | 0...70°C / 0...100%rh |
| Storage conditions | -10...70°C / 0...100%rh |
| Long-term stability | < 1 %rh / year (normal conditions) |
| Functions | |
| Parameters shown | aw, %rh, °C, °F |
| Status light | Yes |
| Long-term stability | < 1 %rh / year (normal conditions) |
| AW Quick Mode | Yes |
| Firmware update | Direct over the App |
| Protocols (values) | Date, time, aw / rh / °C / °F, aw setpoint, serial no., etc. |
| HW5 and HygroLab compatibility | No |
| Acoustic alarm | No |
| Calculations | No psychrometric calculations available |
| Hardware | |
| Batterie capacity | 500 mAh |
| Display | 1.2" LCD color display |
| Button | Multifunctional touch button |
| USB cable | USB-A to USB-C |
| Housing | |
| Dimensions | Ø68 x 65 mm |
| Housing material | Aluminum, stainless steel & PC |
| Weight | 600 g |
| CE conform | CE 2014/30/EU |
| IP protection rating | IP65 |

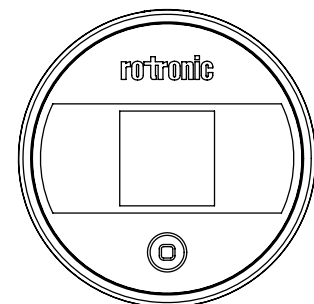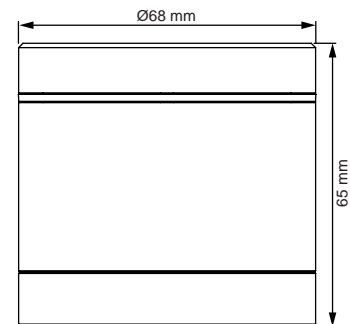

Compatible

- Smartphone with iOS and Android

Delivery package

- Factory adjustment certificate
- Wireless charger with 3 different power supply plugs (for the US, EU or UK)

Recommended accessories

- Sample holders
 - WP-14-S
 - WP-40
 - WP-40TH
- Calibration device
 - WP-14-S
- Calibration standards
 - EAxx-SCS
- Disposable sample containers
 - PS-14, PS-40

Water activity probes

APPLICATIONS

Quality assurance in food manufacturing, coffee processing and the tobacco industry, grain storage and pharmaceutical industry.

HC2-AW-USB

FEATURES

- Range of application: 0...1 aw (0...100 %rh) / -40...85 °C
- On/Off switch
- USB interface for direct connection to a PC
- Power supply: via USB interface
- Adjusted at 23 °C and 10, 35, 80 %rh
- AW Quick function for fast measurement results (typically 4-5 minutes)

| Order code | HC2-AW-USB | HC2-AW-USB-SW-1 |
|--------------|--|---------------------------------|
| Feature | Measurement probe | Probe + software HW5-AW-Code |
| Connection | Via USB to PC, 3 m cable | |
| Accuracy | ±0.008 aw, ±0.8 %rh, ±0.1 K, at 10...30 °C | |
| Power supply | Via USB interface | |
| Filter type | Wire mesh filter with 20...25 µm pore size | |
| Weight | 550g | |



HC2-AW-USB




HC2-AW

HC2-AW

FEATURES

- Same as HC2-AW-USB, but with UART interface

| Order code | HC2-AW |
|--------------|--|
| Feature | Measurement probe |
| Connection | Via UART, 1 m cable |
| Accuracy | ±0.008 aw, ±0.8 %rh, ±0.1 K, at 10...30 °C |
| Power supply | Via display unit |
| Filter type | Wire mesh filter with 20...25 µm pore size |
| Weight | 550g |

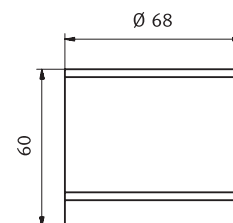

Compatible

- HC2-AW-USB: with PC
- HC2-AW: with laboratory analyzer HygroLab and handheld instrument

Delivery package

- Factory adjustment certificate

Recommended accessories

- Sample holders
WP-14-S
WP-40
WP-40TH
- Calibration device
WP-14-S
- Calibration standards
EAxx-SCS
- Disposable sample containers
PS-14, PS-40

Insertion probes

5 / 10 mm for measurements in bulk materials

APPLICATIONS


- 5 mm insertion probe: dust-free bulk materials such as tablets, grain, jelly capsules and granulates.
- 10 mm insertion probe: dusty bulk materials such as flour, sugar, etc.

FEATURES

- Range of application: -40...85 °C / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard configuration: 0...1 V = -40...60 °C / 0...100 %rh
- Adjusted at 23 °C and 10, 35, 80 %rh


5 mm insertion probe

| Order code | HC2-P05 |
|---------------|---|
| Probe type | Ø 5 x 200 mm, insertion probe with 2 m cable |
| Accuracy | ±0.015 aw, ±1.5 %rh, ±0.3 K, at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: approx. 4.5 mA |
| Filter type | No filter available (laser-cut slots) |
| Response time | <15 s τ 63 |
| Material | Stainless steel DIN 1.4305 (probe), POM (handle) |
| Weight | 160 g |

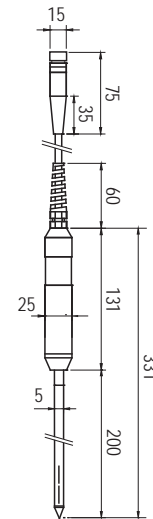

10 mm insertion probe

| Order code | HC2-HP28 |
|---------------|---|
| Probe length | Ø 10 x 280 mm |
| Accuracy | ±0.008 aw, ±0.8 %rh, ±0.1 K, at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: approx. 4.5 mA |
| Filter type | Sintered steel |
| Response time | <20 s, with filter τ 63 |
| Material | Stainless steel DIN 1.4305 (probe), POM (handle) |
| Weight | 200 g |

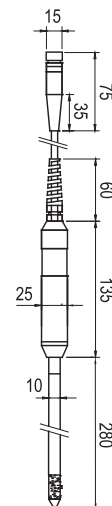

Compatible

- Laboratory analyzer HygroLab

Recommended accessories

- Replacement filter HC2-HP28 ET-Z10

Delivery package

- Factory adjustment certificate

Laboratory analyzer AwTherm

With AwTherm, Rotronic offers a professional, high-end laboratory unit for temperature-stabilized measurement of water activity. The wide control range permits measurements to be integrated directly in the tempered manufacturing or storage process.

APPLICATIONS

Food industry, pharmaceutical industry, cosmetics industry

FEATURES

- Highest precision through exact stabilization of temperature
- Wide temperature-control range
- Outstanding repeatability
- Excellent long-term stability
- Reference probe exchangeable for calibration or cleaning

| General specifications | |
|------------------------------|---|
| Order code | AwTherm |
| Operating conditions | 1...40 °C (34...107 °F) |
| Measurement range | 0.005...1.000 aw |
| Accuracy | ±0.005 aw (10...30 °C) / ±0.1 °C (±0.18 °F) |
| Power supply | 110...230 V / 50...60 Hz |
| Display | 8-line LCD with touch operation |
| Sample sizes | Variable (14 mm / 40 mm) |
| Current consumption | ≤2 A |
| Temperature control range | 0...60 °C (32...140 °F) |
| Temperature stability | ±0.01 °C/min (±0.018 °F/min) |
| Chamber-temperature gradient | <0.1 °C (<0.18 °F) |
| Probe | |
| Sensor | HYGROMER® IN-1 |
| Maintenance / Calibration | Annual calibration (recommended) |
| Long-term stability | <0.01 aw/year |
| Temperature sensor | PT100, DIN 1/3 Class B |
| Functions | |
| HW5-compatible | Yes |
| aw-Quick function | Yes |
| Interface | Micro USB |
| Calibration / Adjustment | Aw & temperature: HG2-S (probe removed with AwT-CAL) Aw: Rotronic humidity standards (via HW5) |
| Trend indicator | Yes |
| Approval / Conformity | |
| Standards | ISO 18787 |
| CE / EMC | EMC 2004/108/EC / IEC EN 61010-1:2010 |
| IP protection | IP21 |
| Housing / Mechanics | |
| Enclosure material | PC / ABS |
| Housing dimensions | 400 x 180 x 180 mm |
| Sample container dimensions | AwT-PS14: Ø46 x 14 mm / AwT-PS40: Ø46 x 40 mm |
| Weight | 4200 g |



Delivery package

- AwTherm incl. AwT-MHS
- AwT-PS14 or AwT-PS40
- AC adapter
- USB cable
- Instruction manual
- HW5-AW-Code

Recommended accessories

- AwTherm measurement probe AwT-MHS
- AwTherm sample holders AwT-PS14 / AwT-PS40
- Disposable sample containers PS-14 / PS-40


Laboratory device HygroLab

The Rotronic HygroLab is an innovative high-end laboratory analyzer for water activity measurements with up to four measurement probe inputs. Simultaneous or asynchronous measurement with the tried-and-tested AW Quick measuring function for pharmaceutical products, tobacco, coffee, food and many more.

FEATURES

- The reliable AW Quick mode for quick results (typical 4 - 5 min)
- 4 probe inputs for simultaneous or asynchrony measurements
- Standalone laboratory measuring device with 7" touch screen (no additional software necessary)
- Remote access with PC or Tablet
- Firmware updates over the internet

| General specifications | |
|---------------------------------|---|
| Order code | HygroLab |
| Operating range | 0...40 °C (32...104 °F) / 0...80 %rh |
| Parameters shown | AW, %rh, °C, °F |
| Dimensions | 215 ×146 ×79 mm |
| Accuracy @ 23 °C ± 5 % (HC2-AW) | ± 0.008 aw / 0.8 %rh / ±0.1 K |
| Long-term stability (HC2-AW) | < 1 %rh / year (Normal conditions) |
| AW Quick Mode | Yes |
| Display | 7" LCD capacitive touch screen |
| Power button | Push button (with RGB light indicator) |
| Trend display | Yes |
| Clock | Real time clock provides a time stamp for every measurement |
| Storage capacity | 16 GB |
| Power supply | 12VDC 2.0A 24W Max (AC adapter) |
| Power supply plugs | CH (EU) / UK / US |
| Probe connections | 4 x HC2 station probe (HC2A-S or HC2-AW) |
| USB (A) types | 2x 2.0 and 2x 3.0 |
| USB power supply | 5V / 500 mA |
| Measurement interval | 15 s |
| Start-up time | 30 s |
| Software update | Direct with the HygroLab over the internet |
| Protocols (values) | Date, time, AW / RH, °C / °F, AW Setpoint, Serial No., etc. |
| HW5 compatible | No |
| Acoustic alarm | No |
| Calculations | No psychrometric calculations available |
| Housing / Mechanics | |
| Housing material | Aluminum, ABS, stainless steel |
| Weight | 1.02 kg (2.25 lbs) |
| Conformity with standards | |
| CE conform | CE 2014/30/EU |
| IP protection rating | IP30 |

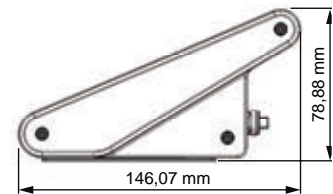

Compatible

- Water activity probe HC2-AW
- Humidity probe HC2A-S

Delivery package

- HygroLab
- Power adapter
- Pen
- Short instruction manual

Handheld instrument HP23-AW-A

In many situations it can be very useful to measure water activity at goods-in, production or storage rooms, e.g. inspection of bulk materials to ensure they meet specifications.

APPLICATIONS

Aw checks of cheese, meat, tobacco, building materials, animal feeds, bakery products, paper, medicines, in horticulture and agriculture, etc.

FEATURES

- Handheld instrument for measurement of water activity, relative humidity and temperature
- AW Quick function for fast measurement results (typically 4-5 minutes)
- Audible alarm to indicate completed measurement
- Saves up to 10,000 data records with %rh, °C, date and time
- Battery charging function

| | |
|----------------------|--|
| Order code | HP23-AW-A |
| Probe connections | 2 |
| Parameters shown | aw / %rh / °C / °F |
| AW Quick function | Integrated and via optional HW5 software |
| Calculations | All psychrometric calculations available |
| Power supply | 9 V battery or 9 V AC adapter via USB-Mini |
| Interfaces | USB |
| Range of application | 0...1 aW, 0...100 %rh, -10...60 °C |
| LCD | 3-line alphanumeric with trend indicator |
| Current consumption | Max. 20 mA (with backlight) |
| Dimensions/Weight | 188 x 72 x 30 mm / 200 g |
| Material | ABS |
| IP protection | IP30 |



Compatible

- Water activity probe HC2-AW
- Insertion probes HC2-P05, HC2-HP28
- All HC2 probes
- HW5

Delivery package

- Short instruction manual
- Battery

Accessories

Sample holders WP-14-S / 40 / 40TH

APPLICATIONS

The stainless steel sample holders were developed specifically for the water activity probes HC2-AW(-USB). There are two sizes available:

- WP-14-S for small samples and for calibration
- WP-40 for larger samples

Both products provide excellent sample containment and optimum temperature stability. The WP-40TH can be attached to a water bath for additional control.

| Order code | WP-14-S | WP-40 | WP-40TH |
|-------------------|-----------|---------------|----------------------|
| Use with | PS-14 | PS-14 / PS-40 | PS-14 / PS-40 |
| Depth | 14 mm | 40 mm | 40 mm |
| Internal diameter | 46 mm | 46 mm | 46 mm |
| Material | V2A steel | | Brass, nickel-plated |
| Weight | 350 g | 1250 g | 1550 g |



WP-14-S



WP-40



WP-40TH

Disposable sample containers PS-14 / PS-40

APPLICATIONS

The disposable sample containers ensure the optimum sample volume is filled into the WP-14-S or WP-40 sample holders. They prevent the sample holders from coming into direct contact with the product being tested, thereby preventing soiling or cross contamination. The sample containers also provide a convenient means of collecting and storing samples.

| Order code | PS-14 | PS-40 |
|-------------------|---------------------------|-----------------|
| Use with | WP-14-S / WP-40 / WP-40TH | WP-40 / WP-40TH |
| Depth | 14 mm | 40 mm |
| External diameter | 46 mm | 46 mm |
| Unit | 100 pc. | |



PS-14



PS-40

Clamp sealing mechanism

APPLICATIONS

In the case of very dry or very moist samples additional mechanical sealing of the AW measurement probe and sample holder may be necessary to prevent external conditions influencing the sample.

| Order code | AW-KHS |
|------------|-----------------|
| Use with | WP-40 / WP-40TH |
| Weight | 1100 g |



Meteorological probe HC2A-S3A

The HC2A-S3A probe is the meteorological probe with a white housing but with a different filter (Wire-mesh filter with 10 µm filter pore size suitable for meteorological applications). It measures relative humidity and temperature and calculates the dew/frost point and is designed for the use in Rotronic meteorological applications.

APPLICATIONS

Meteorology, weather stations, snow cannon

FEATURES

- Accuracy: $\pm 0.8\%$ rh, ± 0.1 K, at 10...30 °C
- Range of application: -50...80 °C¹ / 0...100 %rh
- Digital interface (UART) and scalable analog outputs, 0...1 V
- Standard analog output scaling: 0...1 V = -40...60 °C / 0...100 %rh


| Order code | HC2A-S3A |
|------------------------|---|
| Probe type | white |
| Dimensions | Ø 15 x 108 mm |
| Range of application | -50...80 °C ¹ , 0...100 %rh |
| Accuracy | $\pm 0.8\%$ rh, ± 0.1 K at 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC |
| Current consumption | ~4.5 mA |
| Long-term stability | <1 %rh / year ² |
| Sensor type | ROTRONIC HYGROMER® HM1-SK PT100 1/3 Class B |
| Filter type | wire mesh 1.4401, 10 µm |
| Response time | <15 s, without filter |
| Max. wind velocity | 3 m/s, without filter |
| Housing material | Polycarbonate |
| Weight / IP protection | 10 g / IP65 |

*1: The sensor withstands only 60 °Cdp

*2: Drift < 1%rh per year with clean air or ismilar (see also pollutant table in the catalogue)



HC2A-S3A

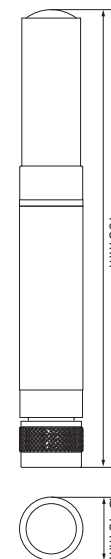

Compatible

- | | |
|--------------------------------|------------------|
| • Handheld instruments | HP32 |
| • Transmitters | HF5, PF4, PF5 |
| • Meteorology transmitters | MP102H, MP402H |
| • Naturally Ventilated Shields | AC1000 |
| • Actively Ventilated Shields | RS12-T or RS24-T |

Delivery package

- Factory adjustment certificate
- Short instruction manual
- Wire-mesh filter

Recommended accessories

- | | |
|--|----------|
| • Mounting flange | AC5005 |
| • Filters | |
| • Extension cable 5 m, white | E3-05A |
| • Calibration device | ER-15 |
| • Humidity standard for calibration 10 %rh | EA10-SCS |
| • Humidity standard for calibration 35 %rh | EA35-SCS |
| • Humidity standard for calibration 80 %rh | EA80-SCS |


Meteorological probe HC2A-S3/S3H

The HC2A-S3 belongs to the family of HC2A-S probes that form the basis of our product portfolio. It measures humidity and temperature and calculates the dew/frost point. The HC2A-S3H fulfills the highest demands for measuring accuracy.

FEATURES

- Measures relative humidity and temperature, calculates the dew/frost point
- Digital interface (UART) and analog outputs 0...1 V
- Adjusted at 23 °C and 10, 35, 80 %rh (HC2A-S3)
- Adjusted at 23 °C and 10, 20, 30, 40, 50, 60, 70, 80, 90 %rh (HC2A-S3H)

| Order code | HC2A-S3 | HC2A-S3H |
|----------------------|--|---|
| Probe type | Meteorology probe, white | |
| Range of application | -50...100 °C, 0...100 %rh | |
| Accuracy | ±0.8 %rh, ±0.1 K at 10...30 °C | ±0.5 %rh, ±0.1 K at 10...30 °C (10...90 %rh) |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC | |
| Long-term stability | <1 %rh / year | |
| Filter type | Polyethylene standard-filter, 40 µm, white | |
| Response time | <15 s (without filter) | |

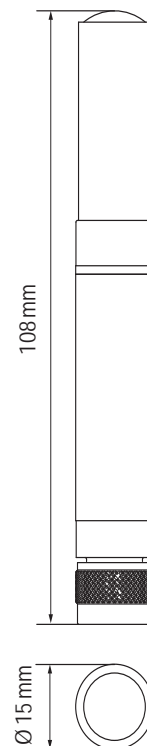

Compatible

- | | |
|-------------------------------|---------------|
| • Meteorology transmitters | MP102H/402H |
| • Actively ventilated shield | RS12T / RS24T |
| • Naturally ventilated shield | AC1000 |

Delivery package

- Factory adjustment certificate
- Polyethylene filter

Recommended accessories

- | | |
|--|----------------|
| • Polyethylene filter, white (40 µm) | SPA-PE |
| • Connection cable with voltage regulator and 2 m cable, white | E3-02XX-ACT/01 |
| • Calibration device | ER-15 |
| • Humidity standard for calibration 10 %rh | EA10-SCS |
| • Humidity standard for calibration 35 %rh | EA35-SCS |
| • Humidity standard for calibration 80 %rh | EA80-SCS |

Meteorological probe MP100A / MP400A

Standard meteorology probes with fixed sensors (analog technology).


APPLICATIONS

Weather stations, agriculture, ice warning and snow making systems.

FEATURES

- Very robust, therefore high long-term stability
- Voltage and current outputs for humidity and temperature
- HYGROMER® IN-1 Sensor / PT100 1/3 Class B
- Cable length compensation up to 100 m
- Connection with Tuchel T4/T7 connector or fitted cable with open ends

| Order code | MP100A | MP400A |
|------------------------|---|--------------------------------|
| Output | Voltage output 0...1 VDC | Current output 0(4)...20 mA |
| Range of application | -40...85 °C / 0...100 %rh | |
| Power Supply | 15...24 VDC | 5...24 VDC |
| Accuracy at 10...30 °C | 10...95 %rh: ±1.5 %rh Remaining range: ±2.5 %rh | |
| Measurement | Temperature with PT100 - direct or linear output signal | |
| Filter | Wire mesh filter ~ 20 µm pore size | |

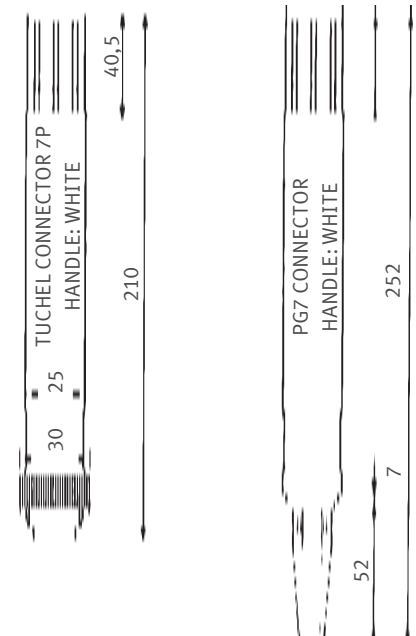

Compatible

- Actively ventilated shield RS12T/24T
- Naturally ventilated shield AC1002 / AC1003

Delivery package

- Factory adjustment certificate
- Wire mesh filter
- Instruction manual

Recommended accessories

- Humidity standard for calibration 10 %rh EA10-SCS
- Humidity standard for calibration 35 %rh EA35-SCS
- Humidity standard for calibration 80 %rh EA80-SCS
- Wire mesh filter SP-W3-25

| Technical data | MP100A (analog) | MP400A (analog) |
|---|---|------------------|
| General | | |
| Parameters | Humidity and temperature | |
| Housing material | Polyoxymethylene | |
| IP protection | IP65 | |
| Weight | 120 g | |
| Supply voltage | 4.8...30 VDC | 10...30 VDC |
| Current consumption | <4 mA at 4.8 VDC | <50 mA at 10 VDC |
| Range of application / Storage conditions | -40...85 °C | |
| Cable length compensation | Up to 99 m | |
| Humidity measurement | | |
| Sensor | ROTRONIC HYGROMER® IN-1 | |
| Measurement range | 0..100 %rh | |
| Accuracy at 0...30 °C | 10...95 %rh: ±1.5 %rh | |
| Long-term stability | <1 %rh/year | |
| Response time | <15 s τ 63 (63 % of a jump 35...80 %rh) without filter | |
| Temperature measurement | | |
| Sensor | PT100 1/3 Class B | |
| Measurement range | -50...100 °C | |
| Accuracy at 0...30 °C | ±0.3 K | |
| Response time | <15 s τ 63 | |
| Analog output | | |
| Current | N/A | 0(4)...20 mA |
| Voltage | 0...1 V | N/A |
| Digital output | | |
| | N/A | |

MP102H/402H

For interchangeable probe HC2A-S3 / HC2A-S3A

The MP102H and MP402H are meteorology transmitters with an analog output and RS-485 interface. Humidity and temperature are measured with an interchangeable HygroClip2 HC2A-S3 / HC2A-S3A probe. Temperature measurement can be enhanced by an external PT100 in various accuracy classes.


APPLICATIONS

Weather stations, snow guns, status monitoring of roads, bridges and airports, snow and ice warning systems, research in very remote areas.

FEATURES

- Humidity and temperature measurement with interchangeable HC2A-S3/HC2A-S3A probes (order separately)
- Calculates all psychrometric parameters
- Direct PT100 sensors available as an option
- Voltage or current output signal
- Freely scalable
- High long-term stability
- Service interface (UART) to PCB
- RS-485 interface
- Connection with cable (3...99 m) with open ends or Tuchel T7 connector

| Order code | MP102H | MP402H |
|----------------------|----------------------------------|--------------------------------|
| Output | Voltage output 0...1/5/10 VDC | Current output 0(4)...20 mA |
| Range of application | -40..80 °C / 0..100 %rh | |
| Power Supply | 5...24 VDC | 15...24 VDC |

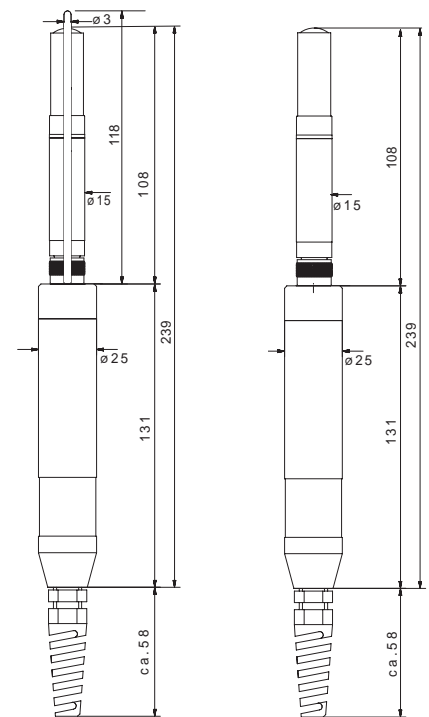

With external PT100

Without external PT100

Compatible

- Meteorology probes HC2A-S3 / HC2A-S3H / HC2A-S3A
- Actively ventilated shield RS12T / RS24T
- Naturally ventilated shield AC1003

Delivery package

- Short instruction manual

| Technical data | MP102H | MP402H |
|---|---|--------------|
| General | | |
| Parameters | Humidity and temperature Calculates all psychrometric parameters | |
| Housing material | Polyoxymethylene | |
| IP protection | IP65 | |
| Weight | 150 g | |
| Supply voltage | 5...24 VDC (0...1 V output) 10...24 VDC (0...5 V output) 20...24 VDC (0...10 V output) | 15...24 VDC |
| Current consumption | <50 mA | |
| Application temp. housing / electronics | -40...80 °C | |
| Cable length compensation | Up to 99 m | |
| Humidity measurement | | |
| Sensor | ROTRONIC HYGROMER® IN-1 (HC2A-S3) / ROTRONIC HYGROMER HM1-SK (HC2A-S3A) | |
| Measurement range | 0...100 %rh (HC2A-S3(A)) | |
| Accuracy at 10...30 °C | ±0.8 %rh (HC2A-S3(A)) | |
| Response time | <15 s τ63 (63 % increase 35...80 %rh) without filter | |
| Temperature measurement | | |
| Sensor | PT100 1/3 Class B (HC2A-S3(A)) | |
| Measurement range | -50...100 °C (HC2A-S3) / -50...80 °C HC2A-S3A | |
| Accuracy at 10...30 °C | ±0.1 K (HC2A-S3(A)) | |
| Response time | <15 s τ63 | |
| Direct PT100 (optional) | PT100 1/3 Class B PT100 1/5 Class B PT100 1/10 Class B | |
| Analog output | | |
| Current | N/A | 0(4)...20 mA |
| Voltage | 0...1 VDC 0...5 VDC 0...10 VDC | N/A |
| Digital output | | |
| | RS-485 UART | |

Actively ventilated shields

The ventilated weather and radiation protection shield RS12T with 12 VDC fan and RS24T with 24 VDC fan were developed in close cooperation with MeteoSwiss. This state-of-the-art device reduces the influences of thermal radiation on humidity and temperature measured values to a minimum.

APPLICATIONS

Snow guns, weather stations, agricultural meteorology and building management systems.



FEATURES

- Easy-to-install protection shield with integrated fan
- Special white coating (RAL 9010) minimizes solar heating
- Simple probe mounting
- Suitable for various probes


| Order code | RS12T | RS24T |
|----------------------|--------------------------------------|--------|
| Range of application | -30...60 °C | |
| Material | Aluminum, POM, RAL 9010 | |
| Power supply | 12 VDC, 2 W | 24 VDC |
| Fan | Papst fan IP54 | |
| Ventilation | 3.5 m/s / 900 l/min. | |
| Fan lifetime | At 40 °C ~70,000 h (approx. 8 years) | |

| Order code | MKRS-HC2 | MKRS-MP102-402 |
|------------------|--------------|------------------------|
| Use with | HC2A-S3/S3H | MP102H/402H |
| Probe connection | E2 connector | Open ends to terminals |
| Mast diameter | 30 - 65 mm | |


Further models available on request.

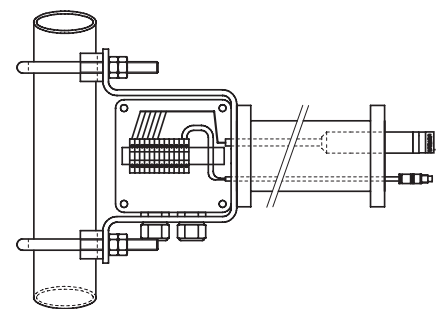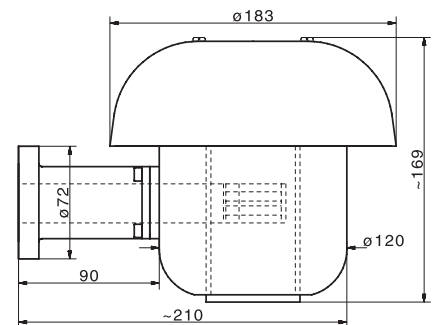

MKRS-HC2

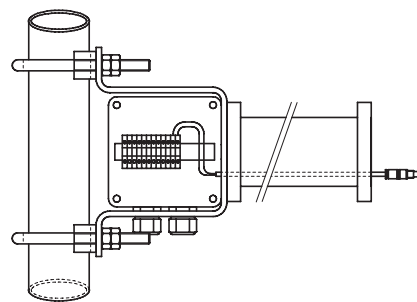

MKRS-MP102-402

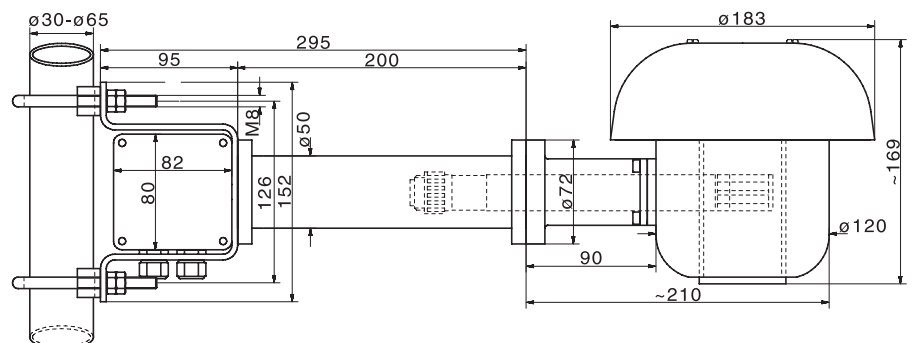

Compatible

- Mounting sets

Delivery package

- Installation instructions

Naturally ventilated shields

Naturally ventilated radiation shields are used where the natural ventilation (wind) provides sufficient air flow, e.g., measurement stations in the mountains.

APPLICATIONS

Snow guns, weather stations and building management systems.

FEATURES

- Easy-to-install protection shield for wall and mast mounting
- Multi-plate system for natural ventilation
- Simple probe mounting
- For probe diameters of 15 or 25 mm
- For mast diameters of 25...50 mm
- Protection against wind speeds up to 70 m/s and horizontal precipitation

| Order code | AC1000 | AC1002 | AC1003 |
|------------------|---|-------------------------------|---------------|
| Mounting probe | Probe screw connection Ø15 mm | Probe screw connection Ø25 mm | |
| Use with | HC2A-S3/A/S3H + E3-05A | MP100A/400A | MP102H/402H |
| Number of plates | 9 | 10 | 14 |
| Mounting shield | Mounting bracket + clamp for mast mounting (Ø 25...50 mm) | | |
| Dimensions | Ø130 x 140 mm | Ø130 x 160 mm | Ø130 x 215 mm |



AC1000 with HC2A-S3/A/SH + E3-05XX



AC1002 with MP100A-T4



AC1003 with MP102H

Delivery package

- Installation instructions
- Mounting hardware

CRP5 series

The differential pressure measurement of the CRP5 clean room panel is based on diaphragm sensor technology. Thanks to its functionality, this device of the highest Swiss quality can be configured perfectly for the application in question. The CRP5 stands out from the crowd with its front panel manufactured with sturdy glass and removable humidity and temperature probe.

FEATURES

- Designed for cleanrooms
- Removable humidity & temperature probe for simple cleaning
- Accuracy: Pressure $\pm 1.0\%$ FS, Temperature: ± 0.2 K / Humidity: $\pm 1.5\%$ rh
- Digital communication via Ethernet (Modbus TCP, HW5) and RS-485 (Modbus RTU, HW5)
- Analog and digital inputs
- Front-side pressure connections for room pressure measurement or calibration
- High chemical resistance of glass front panel
- Alarms via relay or color TFT display
- Visual operating elements for operation with protective gloves

Power supply

- Low-voltage: 3-wire

Signal output

- 4 independent current and voltage outputs
- Ethernet (Modbus TCP) / RS-485 (Modbus RTU)
- 6 relay switch contacts

Version

- Panel version with HC2-CRP probe at the front
- Panel version with probe connection at the back

Measured parameters

- Differential pressure, temperature and relative humidity
- Analog and digital input signals
- Psychrometric calculations such as enthalpy, dew point, etc.

Measurement ranges

- $-25\dots+25$ Pa / $-50\dots+50$ Pa / $-100\dots+100$ Pa / $-250\dots+250$ Pa / $-500\dots+500$ Pa
- $-5\dots60$ °C (23...140 °F) / 0...100 %rh
- Analog IN: 0...3.3 V or 0...24 mA (freely scalable)
Digital IN: 0...1.5 V (low level) / 3.5...24 V (high level)

Display

- Color TFT display with backlight



CRP5

APPLICATIONS



Cleanrooms, operating theaters, food industry and applications where very small pressure differences need to be detected.

| | |
|---|--|
| Order code | CRP53x |
| Output signals | 0...10 V / 4...20 mA (Customer rescaling possible*) 6 x solid-state relays |
| Pressure ranges | ±50 Pa / ±100 Pa / ±250 Pa / ±500 Pa |
| Configuration of the pressure connections | <ul style="list-style-type: none"> • Caps without holes with pressure connections at the back • Cap with hole at «+» connection for room pressure measurement • Cap with hole at «-» connection for room pressure measurement |
| Humidity probe | Removable probe at the front (HC2-CRP) or probe connection at the back (HC2) |
| Relays | 1 A DC / AC 2 A DC |



CRP5 with HC2-CRP probe


The magnetic HC2-CRP humidity and temperature probe can also be used independently.

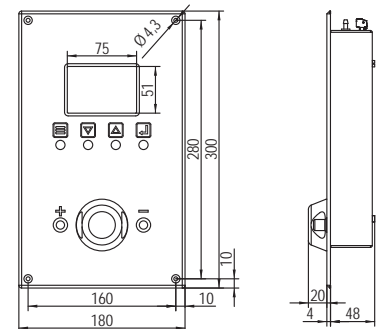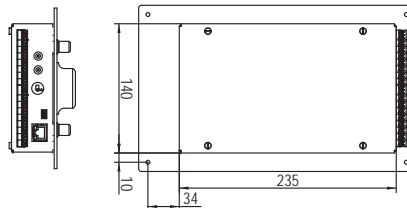


Flush mount probes

The flush mount probe is mounted in the walls of glass cabinets, showcases, gallery walls, laboratories and in cleanrooms for humidity and temperature measurement.

| | |
|------------------|--|
| Order code | HC2-IS25 |
| Accuracy | ±1.5 %rh, ±0.2 K, at 0...90 %rh and 10...30 °C |
| Power supply | 3.3...5 VDC, adjusted at 3.3 VDC, current: ~4.5 mA |
| Filter type | Sintered steel |
| Sensor type | ROTRONIC HYGROMER® WA-1, PT100 1/3 Class B |
| Response time | <20 s |
| Housing material | Polycarbonate, stainless steel DIN 1.4301 |
| Weight | 50 g |

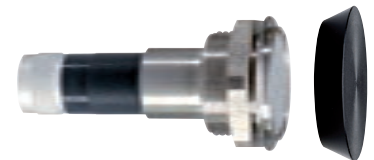

HC2-IS25, steel filter, cover

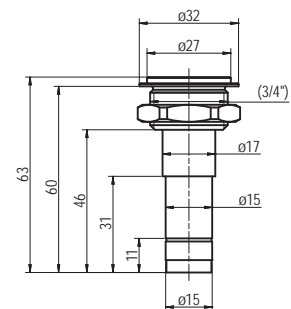

Compatible

- HW5

Delivery package

- Factory adjustment certificate
- Short instruction manual

Recommended accessories

- Service cable
- Calibration accessories
- HC2A-S probes

AC3006 / AC3009*

* Requires optional HW5 software and service cable.

| Technical data | CRP53x |
|---|---|
| General | |
| Parameters | Differential pressure, temperature, relative humidity, absolute pressure, digital and analog inputs |
| Housing material | Front: glass Back: stainless steel |
| IP protection | Front: IP65 (also with detached probe) Back: IP20 |
| Mounting position | Wall mounting |
| Dimensions | 180 x 300 x 72 mm |
| Weight | 1,700 g (with humidity probe) 1,550 g (without humidity probe) |
| Display | Color TFT display |
| Menu navigation | 4 optical keys |
| Electrical connections | Screw terminals at the back |
| Power supply | 20...48 VDC / 16...35 VAC |
| Current consumption | <450 mA |
| Range of application / Storage conditions | -5...60 °C (23...140 °F) / 0...100 %rh |
| Firmware update | Via HW5 software |
| Service interface | UART |
| CE / EMC compatibility | EMC Directive 2014/30/EU |
| Fire protection class | Corresponds to UL94-HB |
| Differential pressure measurement | |
| Measurement principle | Diaphragm sensor |
| Measurement ranges | ±50 Pa / ±100 Pa / ±250 Pa / ±500 Pa |
| Medium | Air and non-aggressive gases |
| Accuracy at 23 °C ±3 K | ±1.0 %FS |
| Zero drift | Compensated (manual or automatic zero adjustment) |
| Measurement interval | 1 s |
| Pressure resistance | 0.7 bar (70,000 Pa) |
| Pressure connections | Front: tubing connector Ø 6 mm x 10 mm Back: tubing connector Ø 4 mm x 10 mm |
| Measurement of temperature and relative humidity | |
| Probes | HC2-CRP, HC2 |
| Measurement range | -100...200 °C (probe dependent) / 0...100 %rh |
| Outputs | |
| Analog outputs | 4, freely configurable |
| Analog output type | 0 / 4...20 mA or 0...1 / 5 / 10 V |
| Switch output | 6 solid-state relays |
| Switching capacity | <50 VDC at <2A if polarity is considered <35 VAC at <1 A if polarity is not considered |
| Accuracy analog output | ±5 mV (voltage output) ±20 µA (current output) |
| Permissible load | >10 kΩ (voltage output) <500 Ω (current output) |
| Digital communication | Ethernet (Modbus TCP, HW5) / RS-485 (Modbus RTU, HW5) |

HygroFlex5-EX series

The HygroFlex5-EX series is the latest development in two-channel transmitters for precise measurement of humidity and temperature in dust and gas potentially explosive atmospheres. The interchangeable probes are cast into a stainless-steel tube and certified for operation in Zone 0/20. The transmitter itself is certified for Zone 1/21. The intelligent design of the circuitry with electrical isolation permits the measuring system to be operated without an intrinsically safe power supply for many applications.

FEATURES

- Measurement of relative humidity and temperature
- Optional output of dew point and other psychrometric calculations
- Safe operation in potentially explosive environments
- Electrically isolated analog outputs
- No intrinsically safe power supply required
- Interchangeable stainless steel probes
- Certified for two temperature classes (T4 / T5)

Power supply

- Low-voltage: 2-wire

Signal output

- Current output

Versions

- Wall mount (W)
- Duct mount (D)

Measured parameters

- Relative humidity and temperature

Measurement ranges

- 0...100 %rh
- -40...60 °C / -40...85 °C

Display

- Display with trend indicators and keypad
- Without display



HF5-EX duct / wall version

APPLICATIONS

Storerooms, pharmaceutical / biotechnology industry, sugar and flour mills, power stations, oil industry.


| | |
|-------------------|---|
| Order code | HF520-EX-x |
| Output parameters | Relative humidity / Temperature / Psychrometric calculation |
| Display | Optional (without backlight) |
| Humidity probe | Interchangeable HygroClip2-EX probes |



HF5-EX probes


HC2-SM-EX

Wall mounting

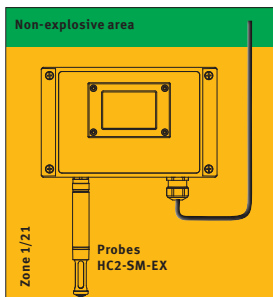


HC2-SM-EX

Duct mounting

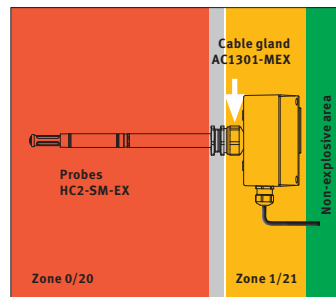


Wall version (W)

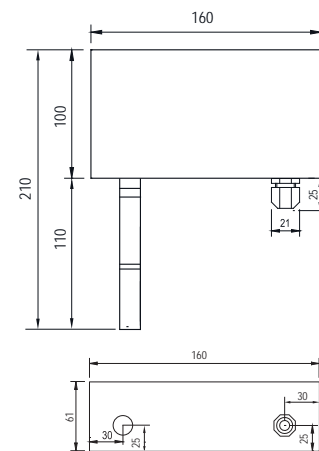


HC2-IMxxx-EX

Cable probe for flexible installations

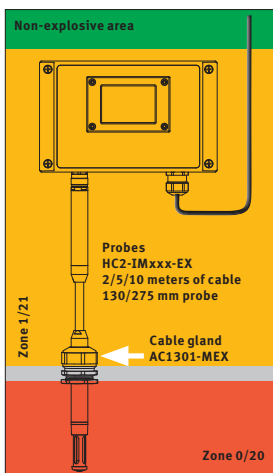


HC2-IExxx-EX / HC2-LDPxxx-EX

Screw-in cable probe for pressure lines or low dew point

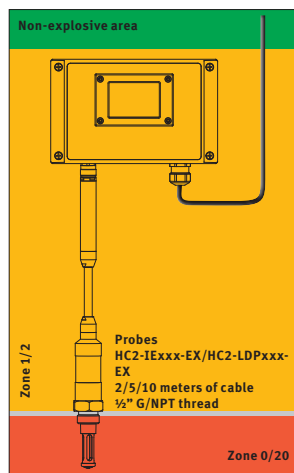

Duct version (D)

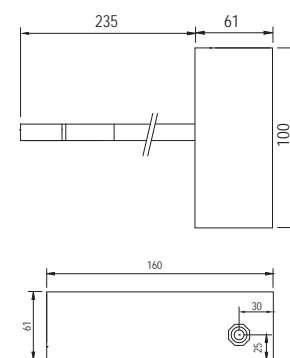

Compatible

- HW5

Delivery package

- Factory adjustment certificate, short instruction manual
- Screws for mounting

Recommended accessories

- Service cable AC3006*
- Calibration accessories
- Replacement filters
- Cable gland AC1301-MEX for mounting in ducts

* Requires optional HW5 software and service cable.

| Technical data | HF520-EX |
|---|---|
| General | |
| Parameters | Humidity and temperature |
| Calculated parameters | All psychrometric parameters |
| Housing material | Aluminum (DIN EN 1706 EN AC-ALSi 12 (Fe)) |
| IP protection | IP66 |
| Weight | Wall version: 1,030 g Duct version: 1,140 g |
| Startup time | Standard cold <60 s / warm <30 s |
| Measurement interval | 20...240 s |
| Display | Optional, LCD without backlight |
| Electrical connections | Connections: Ex-e terminals (0.2...2.5 mm ²) Cable gland: M16 x 1.5 (Ø cable 4.5...7 mm) |
| Power supply | 10...28 VDC |
| Current consumption | 2x24 mA startup / 2x20 mA operation |
| Application temperature housing / electronics | -40...60 °C without display -10...60 °C with display |
| Service interface | UART internal service interface (only outside the explosive zone) |
| CE / EMC compatibility | EMC Directive 2014/30/EU |
| ATEX directives | 2014/34/EU (ATEX) |
| EX identification |  II 2(1) G Ex eb mb [ia Ga] IIC T5 Gb II 2(1) D Ex tb [ia Da] IIIC T80°C Db |
| Analog output | |
| Number | 2 |
| Current | 4...20 mA, two-core |
| Galvanic isolation | Yes |
| Maximum load | 500 Ω |
| Accuracy at 23 °C | <20 µA |
| Technical data | |
| General | |
| Parameters | Humidity and temperature |
| Housing material / IP protection | Stainless steel (1.4301) / IP66 |
| Cable probes | 2/5/10 meters |
| EX identification |  II 1/2 G Ex ia IIC T5...T4 Ga/Gb II 1/2 D Ex ia IIIC T80 °C ...T110 °C Da/Db |
| Humidity measurement | |
| Sensor | HC2-SM/IM/IE-EX: ROTRONIC HYGROMER® IN-1 HC2-LDP-EX: ROTRONIC HYGROMER® LDP-1 |
| Adjustment | Not via device menu (only outside the explosive zone with HW5 + AC3001) |
| Measurement range | 0...100 %rh |
| Accuracy at 23 °C | 0.8 %rh |
| Temperature measurement | |
| Sensor | HC2-SM/IM/IE-EX: PT100 1/3 Class B HC2-LDP-EX: PT1000 1/3 Class B |
| Measurement range | -40...60 °C / -40...85 °C |
| Accuracy at 23 °C | 0.1 K |
| Accessories | |
| Filter | SP-FN15, sintered steel filter (1.4401) |
| Cable gland | AC1301-MEX for duct mounting and cable probes (IM) |

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Video Universal RMS

Interested? Then scan the QR code!



RMS – For every application

The Rotronic Monitoring System is a modular system of hardware elements and software. It guarantees maximum flexibility at installation time, and ensures excellent availability of the data during operation. The data loggers record all measurements by Rotronic and third-party sensors and transmit them to the database. It stores all information and makes it available to all users, regardless of whether they access the database by PC, Mac, tablet or smartphone.

Data flow

Input transducers

The data loggers read out Rotronic measuring instruments or other input transducers such as cameras or third-party sensors. In this way the RMS monitors various parameters, both from Rotronic and third-party products.

- Rotronic measuring instruments
- Digital measuring instruments from other suppliers
- Analog instruments from other suppliers



Data logger

The data logger stores all measured data and sends it to the database. Should the connection be lost, the logger stores the data internally to protect data integrity and fills the data gaps when the connection has been restored.

- Automatic internal storage
- Backfilling of data gaps
- Wireless/LAN interface



Software / Database

The database covers the complete monitoring system. It contains all the measured values of the system and saves all actions. The server or cloud software alerts the relevant users in the case of problems and manages the user-specific access rights.

- SQL database
- Cloud solution can be validated
- On-premis/Server solution can be validated




Output size

The database can be accessed with smartphones, tablets and all PCs with a web browser. Visualization and alerting are therefore possible worldwide and on all common platforms.

- Real-time monitoring
- Supports all common browsers



Network environment

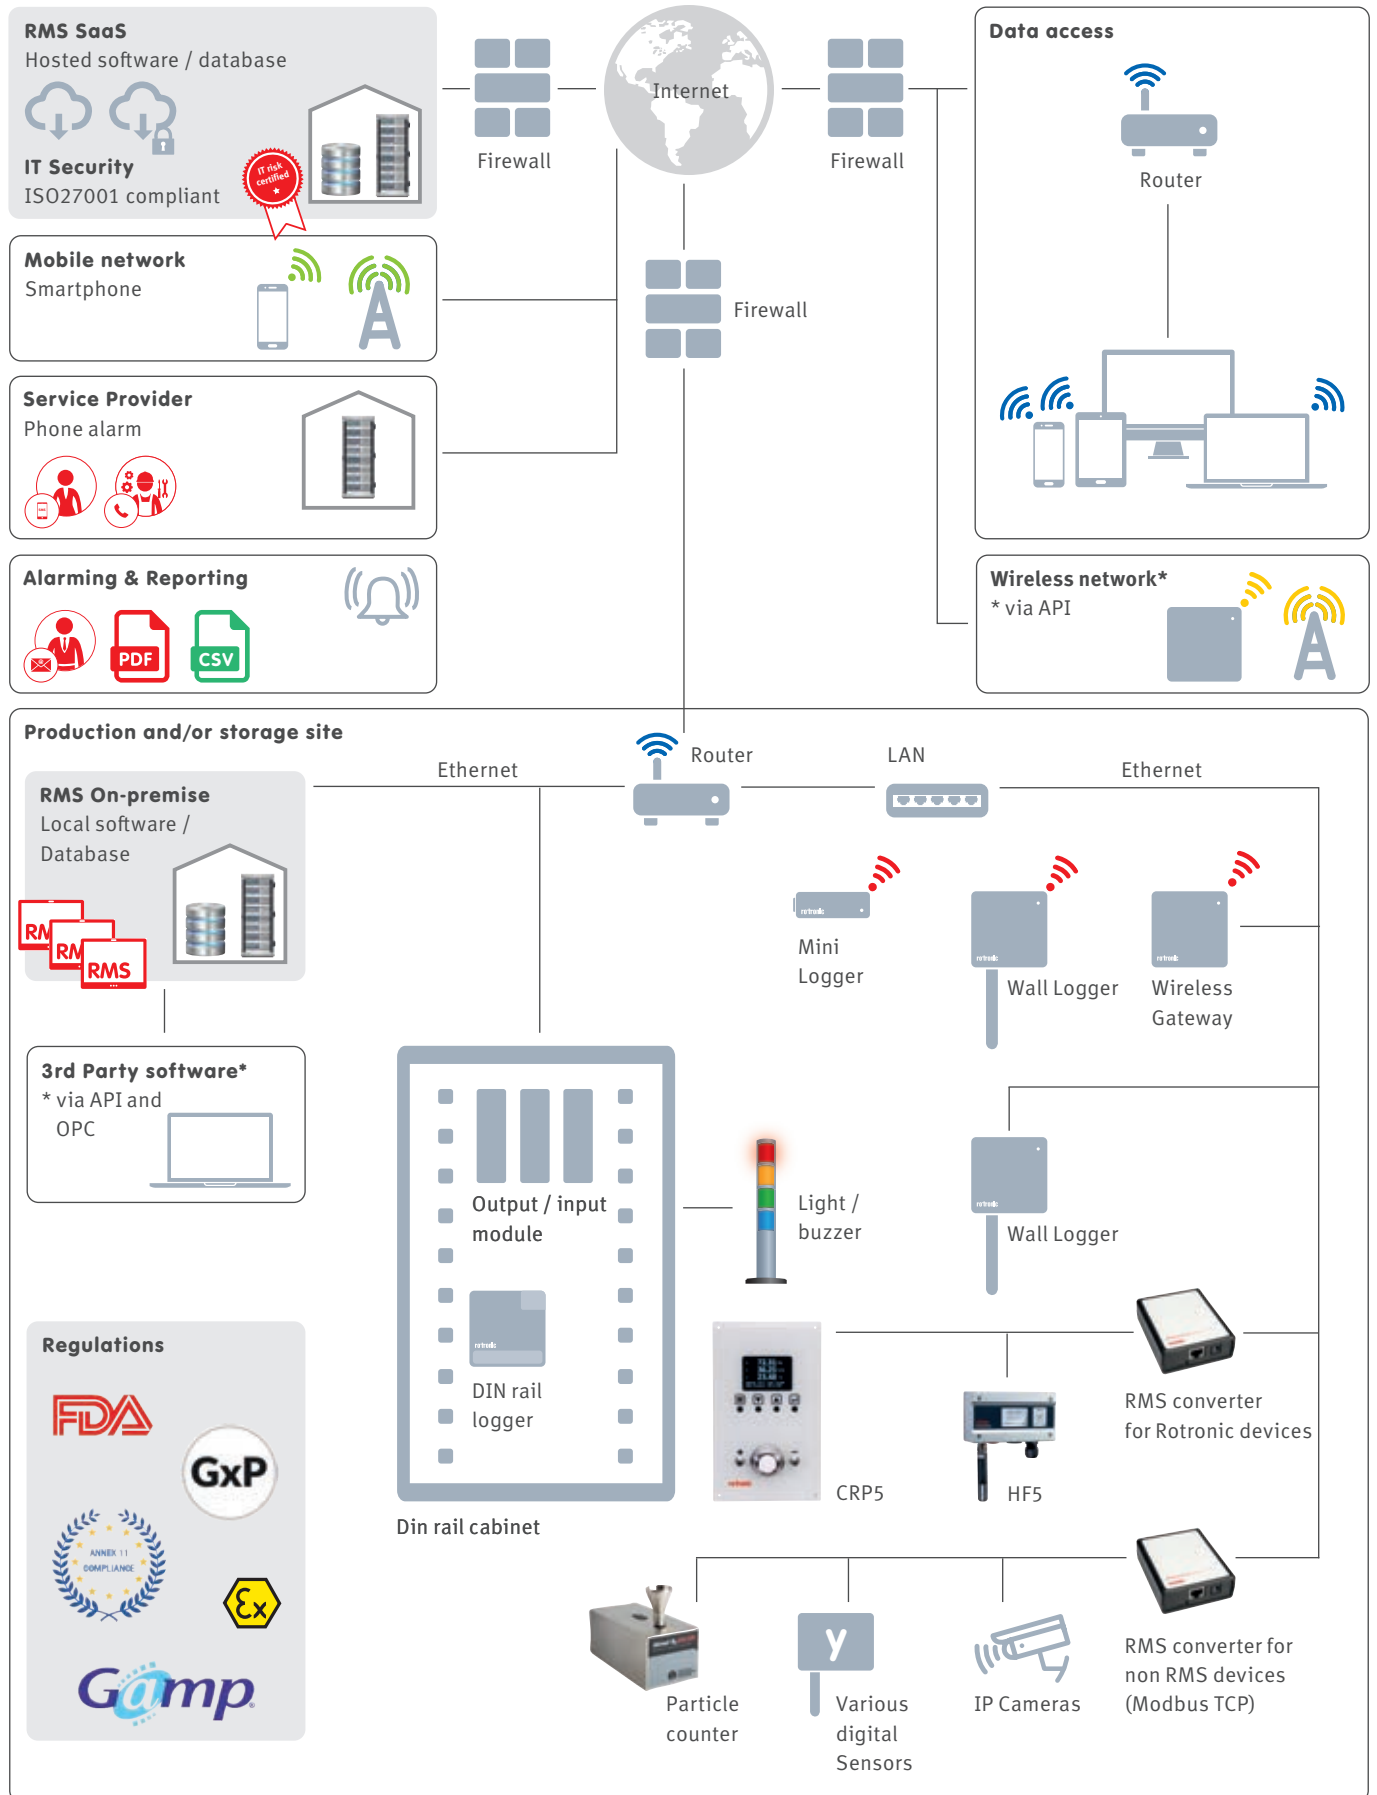

Monitoring software

The RMS Software fulfills all requirements for server-based monitoring. The software is linked to a database that archives all the measured data and actions of the system. The data can be accessed from anywhere in the world via all common platforms as long as an internet connection is available.

Data history always available

The database allows access to all historical data at any time, thereby ensuring traceability according to FDA and GMP. This data can be put together into a complete PDF report quickly, automatically and easily.

- Chart
- Table
- Layout
- Dashboard
- Events (audit trail)
- Analysis
- Reporting (PDF & CSV)

Alarms

Whether by voice call, email, SMS or switching of an alarm relay: the RMS offers clear alarm functions and records all events in the database:

- Errors
- Warnings
- System messages
- Reminders
- Alarms

Validation at the touch of a button

RMS enables validation at the touch of a button. The system checks data integrity automatically by self-test in that it switches all input modules into their various states and checks the alarms that are meant to be triggered. The software then generates a validation report on the complete system.

- The validation documents comply with GAMP5 requirements (see Rotronic Validation Guide on the Rotronic website)



Easy user management

The intelligent user management function makes it possible to assign different rights to every user on the basis of data groups. For example, the same user can have only read rights in data group A, while he also has write rights in data group B.

Data analysis

To analyze your data, you can generate reports at any time. These reports can be visualized and formatted at will.

- Charts and tables (PDF or CSV)
- Statistical data (min./max./average/standard deviation)
- MKT: mean kinetic temperature
- Audit trail

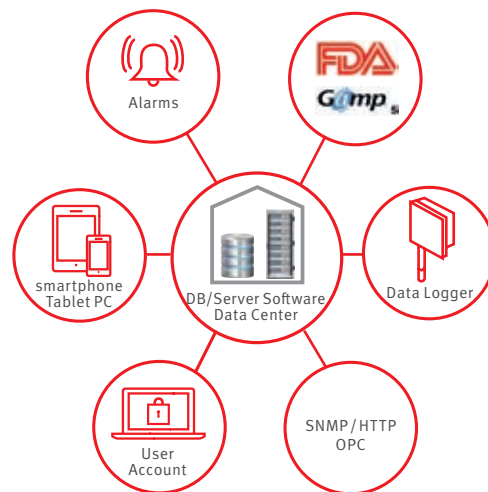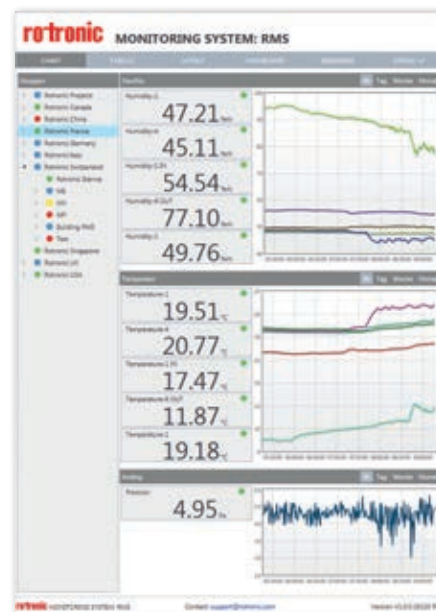

RMS software products

The RMS software was developed on the basis of FDA and GAMP5 guidelines.

| Type | RMS On-premise | | | RMS Cloud/SaaS (SaaS – Software as a Service) | | | | | |
|--|----------------|--------------|------------|--|-----|-----------|--------------|------------|-----------|
| Version | Basic | Professional | Enterprise | Free | Ind | Small | Professional | Enterprise | Exclusive |
| Chart & table view | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ | ✓ |
| Layout view | | ✓ | ✓ | | | | ✓ | ✓ | ✓ |
| Dashboard view | | ✓ | ✓ | | | | ✓ | ✓ | ✓ |
| Data archiving | | | ✓ | | | | | ✓ | ✓ |
| Audit trail | | ✓ | ✓ | | | | ✓ | ✓ | ✓ |
| Calibration/Adjustment | ✓ | ✓ | ✓ | | | ✓ | ✓ | ✓ | ✓ |
| Validation | | | ✓ | | | | | | ✓ |
| Alarm scheme | | ∞ | ∞ | | | | 40 | 200 | 200 |
| Users (freely extendable) | 2 | 5 | 10 | 1 | 20 | 2 | 5 | 10 | 10 |
| Devices or measuring points (freely extendable) | 10 | 40 | 100 | 2 | ∞ | 10 | 40 | 100 | 100 |
| Storage (freely extendable) | ∞ | ∞ | ∞ | | | 12 months | 12 months | 12 months | ∞ |

RMS-HCD

This digital probe is characterized by its high performance. Very low current consumption, the highest degree of accuracy and measurement results within 50 ms are its main features. This is enabled by the new AirChip4000, which together with the HYGROMER® HT-1 sensor forms a powerful combination.

FEATURES

- Measures relative humidity and temperature
- Outstanding accuracy, repeatability and long-term stability
- Advanced probe housing and construction
- Compatible with RMS data loggers and RMS software
- Low power consumption

| General specifications | | |
|----------------------------|---|--|
| Order code | RMS-HCD-S (black) RMS-HCD-S3 (white) | RMS-HCD-IC102 (Industrial probe, 2 m cable) |
| Humidity sensor | HYGROMER HT-1 | |
| Temperature sensor | PT1000, Class 1/3 B | PT 100, Class 1/3 B |
| Operating humidity | 0...100 %rh | |
| Operating temperature | -40...+85 °C | -40...+85 °C (Electronics) -100...200 °C ¹ (Sensor head) |
| Accuracy @ 23 °C | ±0.8 %rh ±0.1 K | |
| Long-term stability | 1 %rh / year | |
| Startup time | 50 ms | 90 ms |
| Measurement interval | 500 ms | |
| Response time sensor | τ63: <15 s without filter, (temperature and humidity) | |
| Maximum wind velocity | 3.5 m/s without filter | |
| Supply voltage | 2.8...5.5 VDC | 3.3...5.5 VDC |
| Current consumption | 0.5 mA | <3 mA |
| Digital interface | UART | |
| Protocol | Modbus RTU | |
| Standards | | |
| Compliance | FDA 21 CFR Part 11 / GAMP5 | |
| Housing / Mechanical parts | | |
| Material | PC, PPS, stainless steel 1.4301 | |
| Protection rating | IP65 (except sensor area) | |
| Weight | 10 g | 230 g |


¹ Peak load: 100 h. Maximum permissible continuous load: 190 °C



RMS-HCD-S



RMS-HCD-IC102

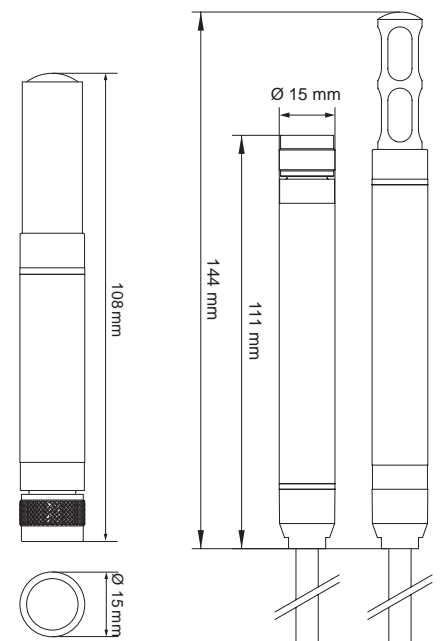

Compatible

- RMS-LOG-L / RMS-LOG-868 / RMS-LOG-915
- AC3001

Delivery package

- HygroClip DIGITAL
- Short instruction manual
- Calibration certificate

RMS-TCD-S-001


The RMS-TCD-S-0001 digital probe was designed for all temperature applications where accuracy and interchangeability are crucial. The temperature probe is attached to a 2m cable to ensure flexibility and ease of use during calibration.

FEATURES

- Measures temperature
- Outstanding accuracy, repeatability and long-term stability
- Advanced probe housing and construction
- Compatible with RMS data loggers and RMS software
- Low power consumption
- Digital communication
- Hot swap possibility, ensuring little to no downtime
- Automatic serial number replacement documented within the RMS audit trail



| General specifications | |
|-------------------------|--|
| Order code | RMS-TCD-S-001 |
| Measurement range | -200...200 °C |
| Accuracy | ±0.25 °C at -50...85 °C |
| Long term stability | ±0.5 °C/year |
| T63 | 90 s |
| Electronics details | |
| Temperature range | -40...85 °C |
| Relative humidity range | 0...100 %rh |
| Housing details | |
| Material | Polycarbonate |
| Housing potting | Yes |
| Diameter | Ø15 mm |
| Length | 110 mm |
| IP Rating | IP65 |
| Connector | Standard Rotronic 7-pin connector |
| Sensor details | |
| Temperature sensor | 4 wire PT100 Class A (DIN EN 60751) |
| Material | Stainless steel – austenitic – 1.4571 (316Ti) bar |
| Sensor potting | Yes |
| Diameter | Ø3 mm |
| Length | 50 mm |
| IP Rating | IP68 |
| Battery lifetime | RMS-LOG-868/915/L: @60 s 240 d RMS-LOG-L-D: @60s 18 d |
| Cable details | |
| Material | Perfluoroalkoxy alkanes (PFA) |
| Diameter | Ø2.2 mm |
| Length | 2 m |
| Temperature range | -190...200°C |
| Technical details | |
| Communication | MODBUS RTU |
| Output signal | UART |
| Power supply | 3.3...5 V |
| Current consumption | ~3.8 mA |
| Adjustment option 1 | 2 point user adjustment possible |
| Adjustment option 2 | A, B and C coefficients |
| Accessories | |
| Hardware | AC3001, RMS-LOG-L, RMS-LOG-868/915, RMS-LOG-L-D |
| Software | RMS-CONFIG; Rotronic Monitoring System |

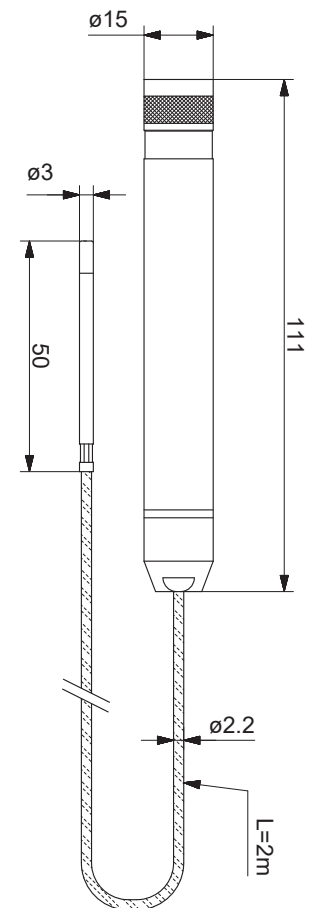

Compatible

- RMS-TD-0001
- AC3001
- RMS-LOG-L/868/915

Delivery package

- RMS-TCD-S-001
- Calibration Certificate



RMS-PCD-S-XXX

The Rotronic differential pressure probes are ideal for clean rooms, operating theaters and applications where even minor differences in pressure can have a big effect. Thanks to our two different measurement methods (thermal mass flow measurement and diaphragm measurement), we offer the perfect solution for every requirement. Together with other measurement parameters, these probes can be integrated in RMS perfectly.

FEATURES

- High-precision measurement and long-term stability
- With ambient pressure compensation
- Large overload range

| General specifications | | |
|--------------------------------------|--|---|
| Sensor type | Thermal Mass Flow | Membrane |
| Accuracy ¹ at 23 °C ±3 K | ±1% FS | ±1% FS ² |
| Long-term stability ³ | ±0.1% FSS/year | ±2% FSS/year for ±25Pa probe ±1% FSS/year for ±50Pa probe ±0.5% FSS/year for ±100Pa probe ±0.25% FSS/year for ±250Pa and ±500Pa probes |
| Zero point compensation ⁴ | Automatic, 1x per measurement interval | Manual, with external tube; via RMS software ¹ |
| Medium | Air | Air & non-aggressive gases |
| Ambient pressure compensation | Automatic | Not necessary |
| Adjustment and calibration | Factory adjustment/calibration: 5 points Customer adjustment: max. 9 points | |
| Measurement range | -25...+25Pa/-50...+50Pa/-100...+100Pa/-250...+250Pa/-500...+500Pa | |
| Burst pressure | 5 bar | 0.7 bar |
| Leak rate | <180 µl/min. | 0 µl/min. |
| Startup time | <0.5 s | |
| Measurement interval | 1 s probe / ≥10s RMS / 1s Modbus | |
| Response time τ63 | <1 s | |
| Range of application | -20...+80°C (0...+70°C temp.-comp.) 0...95 %rh non-condensing | |
| Voltage | 3.3 – 5.5 V | |
| Current consumption | 30 mA (avg.) | 12 mA (avg.) |
| Battery life LOG-868/915 | 350d @ 60s interval | 650d @ 60s interval |
| Battery life LOG-L | 395d @ 60s interval | 840d @ 60s interval |
| Protocols | Modbus RTU | |
| Standards | | |
| Compliance | FDA 21 CFR Part 11 / GAMP5 | |
| Housing / Mechanical parts | | |
| Housing material | Polycarbonate (housing) Stainless steel DIN 1.4305 (nuts, connectors) | |
| Fire protection class | Corresponds to UL94-HB | |
| Dimensions | Ø 32 mm x 87 mm | |
| Pressure connections | Tubing connector internal Ø 4 mm x 10 mm | |
| Weight | 60 g | |
| IP protection class | IP65 | |

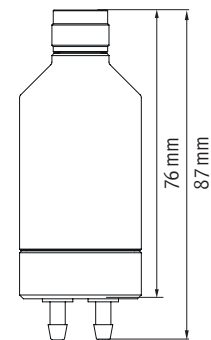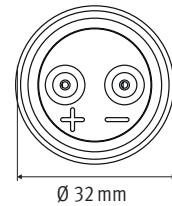

¹ Please see the device manual for detailed considerations.

² For maximum accuracy, Rotronic recommends strongly to perform a zero point compensation after the installation and initial operation and to repeat it annually. For aggressive environments / gas media, a more frequent zero point compensation is advised. Please see the device manual for detailed considerations.

³ Highly reducible by a zero point compensation of the RMS-PCD-S-Mxx (membrane sensor).

⁴ A zero point adjustment is recommended for every installation or position change.

Compatible

- RMS-LOG Wireless ≥V1.5/LAN data loggers ≥V1.4

Delivery package

- Differential pressure probe
- Calibration certificate
- Short instruction manual
- Wall-mounted holder
- Short pressure tube internal Ø 4mm x 10cm (PCD-S-Mxx only)

CCA-S-20X-SET

The CCA-S-20X is an analog probe with NDIR technology for measurement of carbon dioxide (CO₂). Developed with a pyroelectric infrared detector with dual temperature compensation and an integrated semiconductor temperature sensor to maximize accuracy and minimize drift. The signal is converted to 4...20 mA by the converter with power supply (CCA-S-20X-SET).

FEATURES

- Measures from 0 to 20 %CO₂
- Suitable for incubators: 37 °C, 95...98 %rh and 5 %CO₂
- Interchangeable probes
- ±0.1 °C accuracy in measurement range

| General specifications | |
|----------------------------|--|
| Measurement principle | Infrared (NDIR) |
| Measured parameter | Carbon dioxide concentration (%) |
| Accuracy | ±10 % of measured value |
| Medium | Air & non-aggressive gases |
| Long-term stability | ±0.24 %CO ₂ /year |
| Temperature dependence | ±10 % of measured value |
| Pressure dependence | ±0.15 % of measured value/hPa |
| Measurement range | 0...20 %CO ₂ |
| Application range | -20...50 °C / 0...100 %rh, 700...1200 hPa |
| Storage conditions | -20...30 °C / 0...95 %rh |
| Startup time | 60 s |
| Power supply | CCA-S-20X: 3...5 VDC / 80 mA CCA-S-20X-Set: 24 VDC / 150 mA |
| AC adapter requirements | 100...240 VAC / 50...60 Hz / 0.3 A |
| Output signal | 4...20 mA (CCA-S-20X-SET) 0.4...2.0 V (CCA-S-20X only sensor) |
| Conformity with Standards | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP 5 |
| Housing / Mechanical parts | |
| Enclosure material | Polycarbonate (housing) Stainless steel DIN 1.4305 (nut) |
| Fire protection class | Corresponds to UL94-HB |
| Dimensions | Sensor: 32 mm x 87 mm Converter box: 100 mm x 77 mm x 40 mm (LxWxH) |
| IP protection class | IP40 |
| Weight | 55 g sensor 200 g converter box |

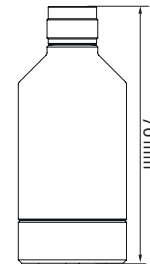
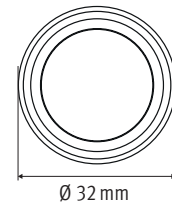


Fig.: CCA-S-20X-SET

Compatible

- Analog Input
RMS-MADC-868/915-A
RMS-ADC-L-R
- CO₂ Sensor
CCA-S-20X
- RMS On-Premise
RMS-WEB
- RMS SaaS solutions
RMS-CLD

Delivery package

- CCA-S-20X
- Power supply
- Converter box
- E2-01XX



RMS Wall Data Logger

The data logger is the flexible component between the probe and the database in the Rotronic Monitoring System. It stores 44,000 pairs of measured values and transmits them to the RMS database via LAN or wireless link. It guarantees absolute data protection, even if power supply and communications should break down temporarily.

FEATURES

- 44,000 data point memory
- Fail-safe, thanks to internal battery
- Wireless or LAN interface

| General specifications | | | |
|----------------------------|--|---------------|---------------|
| Measured parameters | Humidity & temperature, CO ₂ , differential pressure, LDP | | |
| Range of application | -40..70 °C / 0..100 %rh | | |
| Storage conditions | -40..30 °C / 0..95 %rh | | |
| Maximum altitude | 2000 m ASL | | |
| Power supply | 24 VDC ±10 % / <100 mA / Battery: RMS-BAT (2xAA, LiSocI2) / PoE: 802.3af-2003, Class 1 | | |
| AC adapter requirements | 24 VDC ±10 % / 4 W nominal / <15 W power-limited | | |
| Battery life | 3 years (at 23 °C, measurement interval 1 min., HCD-S probe) | | |
| Device data | | | |
| Measurement interval | 10 s to 15 min. | | |
| Startup time | < 10 s | | |
| Order code | RMS-LOG-L | RMS-LOG-868 | RMS-LOG-915 |
| Interfaces | Ethernet | ISM 868 MHz | ISM 915 MHz |
| Indoor wireless range | - | 20..50 meters | 15..25 meters |
| Protocols | HTTP / MODBUS TCP | | |
| Ethernet cable requirement | Min. Cat. 5, SFTP, max. 30 m | | |
| Conformity with standards | | | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP 5 | | |
| Housing / Mechanics | | | |
| Housing material | ABS | | |
| Fire protection class | UL94 -V2 | | |
| Dimensions | 105 x 113 x 38 mm | | |
| IP protection class | IP65 | | |
| Weight | 200 g | | |

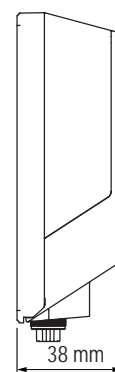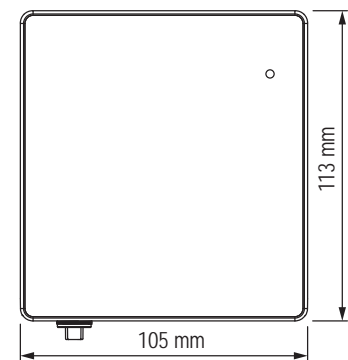

Compatible

- | | |
|----------------------------|----------------|
| • HygroClip DIGITAL | HCD/PCD/CCD |
| • RMS Gateway | RMS-GW-868/915 |
| • RMS On-premises software | RMS-WEB |
| • RMS SaaS solutions | RMS-CLD |

Delivery package

- Data logger
- 2 batteries
- Wall bracket
- Short instruction manual
- 2 screws & 2 plugs



RMS Data Logger with Display

The RMS-LOG-L-D stores up to 44,000 pairs of measured values and transmits them to the RMS database via LAN link. Thanks to its autonomous operation, the logger can display current readings as well as visual and audible alarms even if the power supply and communication should fail temporarily.

FEATURES

- 44,000 data point memory
- Visual and audible alarms
- Autonomous operation on failure
- Redundant power supply

| General specifications | |
|---|--|
| Measurement interval | 10 s to 300 s |
| Startup time | < 10 s |
| Software compatibility | ≥ V1.3.0, from V2.1 all functions |
| Application range | -20...70 °C, non-condensing |
| Storage conditions | -20...30 °C, non-condensing |
| Maximum altitude | 2000 m ASL |
| Power supply | 24 VDC ±10% / Battery: RMS-BAT (2xAA, LiSocI2) |
| Current consumption max. | 50 mA |
| AC adapter requirements | 24 VDC ±10%, 4 W minimum, > 5 W Limited Power Source |
| PoE | 802.3af-2003, Class 1 |
| Device data | |
| Order code | RMS-LOG-L-D |
| Ethernet cable requirement | Min. Cat 5, SFTP, max. 30 m |
| Interface | Ethernet |
| Protocols | HTTP / Modbus TCP |
| Number of measuring points | 2 |
| Battery life (@60 s and 600 s interval) | HCD-S / HCD-IC: 7 d CCD-S-XXX: 2.4 d PCD-S-XXX: 15 d |
| HCD-S / HCD-IC | 7 d |
| CCD-S-XXX | 2.4 d |
| PCD-S-XXX | 15 d |
| Storage capacity | 44,000 data points |
| Conformity with standards | |
| Soldering material | Lead free / RoHS conformity |
| FDA/GAMP directives | FDA CFR21 Part 11 / GAMP 5 |
| Housing / Mechanics | |
| Enclosure material | PC, ABS |
| Dimensions | 105 x 113 x 38 mm |
| IP protection class | IP65 |
| Fire protection class | UL94-V2 |
| Weight | 240 g |

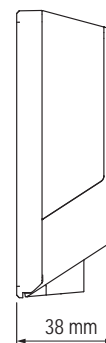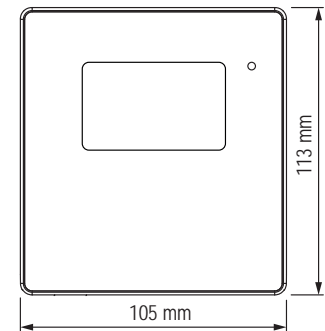

Compatible

- HygroClip DIGITAL HCD/PCD/CCD
- RMS On-premises software RMS-WEB
- RMS SaaS solutions RMS-CLD
- Autonomous operation and audible alarms from V2.1

Delivery package

- Data logger, with clamps
- Short instruction manual
- 2 batteries
- Certificate
- Velcro strips

RMS-LOG-T30-L/868/915



The RMS-LOG-T30 is a data logger with two integrated analog-to-digital converters, to which two PT100 sensors can be connected for high-precision temperature measurement. The measuring accuracy of the data logger with PT100 can be improved by a 1- or 2-point adjustment. The data logger stores 44,000 pairs of measured values and sends them to the RMS database via LAN or wireless interface.

FEATURES

- Saving of up to 44,000 data points
- 2 x PT100 sensor connections
- 2-, 3- or 4-wire connection
- ± 0.1 °C accuracy in measurement range

| General specifications | | | |
|---|--|----------------|----------------|
| Measured parameters | 2-, 3- and 4-wire RTD measurement | | |
| Number of measuring points | 2 x PT100 probes | | |
| Accuracy ¹ (@23 °C, without PT100) | ± 0.1 °C (-100 °C to 200 °C) ± 0.2 °C (-200 °C to 850 °C) | | |
| Application range | -40...70 °C 0...100 %rh | | |
| Storage conditions | -20...30 °C 0...95 %rh | | |
| Power | 24 VDC ± 10 % / <100 mA / PoE: 802.3 af-2003, Class 1 | | |
| AC adapter requirements | 24 VDC ± 10 % / >4 W / power-limited | | |
| Device data | | | |
| Measurement interval | 10 s to 15 min. | | |
| Order code RMS-LOG-T30-xxx | T30-L | T30-868 | T30-915 |
| Battery life (23 °C, 60 s interval) | 3 years | 2.4 years | 2.4 years |
| Interfaces | Ethernet | ISM 868 MHz | ISM 915 MHz |
| Indoor wireless range | - | 20...50 meters | 15...25 meters |
| Compatibility with RMS-GW-xxx Firmware | - | V2.1 | V2.1 |
| Compatibility with Software | \geq V1.3.0 | | |
| Protocols | HTTP / MODBUS TCP (T30-L) | | |
| Ethernet cable requirement | Min. Cat 5, SFTP, max. 30 m | | |
| Conformity with standards | | | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP 5 | | |
| Housing / Mechanics | | | |
| Housing material | PC, ABS | | |
| Fire protection class | UL94-V2 | | |
| Dimensions | 105 x 113 x 38 mm | | |
| IP protection class | IP65 | | |
| Weight | 240 g | | |

¹ In order to improve the measurement accuracy when using the data logger and the PT100, it is possible to carry out a 1-point or 2-point adjustment. To calculate the total accuracy of the RMS-LOG-T30, all variables must be added.

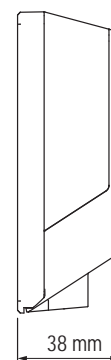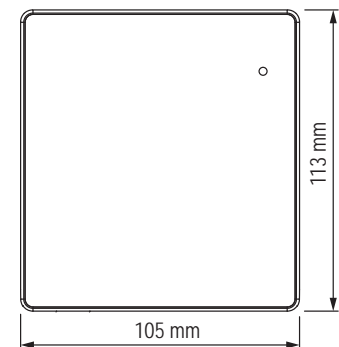

Compatible

- RMS Gateway RMS-GW
- RMS On-premises software RMS-WEB
- RMS SaaS solutions RMS-CLD
- PT100 probe T30-000X

Delivery package



- Data logger
- 2 batteries
- Wall bracket
- Short instruction manual
- 2 cable glands M12 x 1.5

RMS Mini Logger

The wireless mini data logger is the low-cost data logger in the Rotronic Monitoring System. Its small housing and wireless interface make it a really flexible data logger. The mini logger is available in various sensor variants: internal temperature sensor (NTC), external temperature sensor (NTC), light, voltage measurement, current measurement or digital switch contact. With this versatility, it can monitor refrigerators and incubators, as well as door contacts and OEM analog devices.

FEATURES

- Stores 10,000 measured values
- Fail-safe, thanks to internal battery
- Battery life up to 2.5 years
- Depending on the version, it measures temperature, current, voltage or light, or monitors a digital switch input
- ISM band 868 MHz / 915 MHz

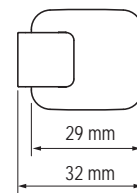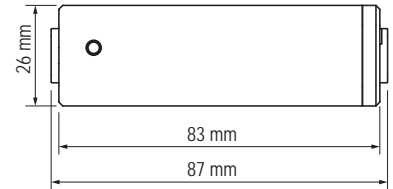

| General specifications | | |
|--|--|-----------------------------------|
| Device type | MS-MLOG-XXX-XXX RMS-MDI-XXX RMS-MADC-XXX-X | RMS-MLOG-BT-XXX RMS-MLOG-B-XXX |
| Memory size | 10,000 measured values | 13,000 data points |
| Range of application (electronics) | -30...85 °C / 0...100 %rh | -40...85 °C / 0...100 %rh |
| Battery life @23°C, 1 minute interval | 2.2 years | 2.5 years |
| IP protection class | IP65 | IP30 (B), IP65 (BT) |
| Working range pressure | 300...1100 hPa | |
| Storage conditions | -30...30 °C / 0...95 %rh | |
| Battery | 1x RMS-BAT | |
| Measurement interval | 10 s to 15 min (software dependant) | |
| Wireless specifications | | |
| Wireless interface | ISM 868 MHz | ISM 915 MHz |
| Indoor wireless range | 20...50 meters | 15...25 meters |
| Conformity with standards | | |
| FDA / GAMP directives | FDA 21 CFR Part 11 / GAMP5 | |
| Housing / Mechanics | | |
| Housing material | ABS | |
| Dimensions | 83 x 29 x 29 mm | |
| Fire protection class | UL94-V2 | |

Measured parameters

| | |
|----------------------------|---------------------------------------|
| RMS-MLOG-B-XXX | Temperature & humidity |
| RMS-MLOG-BT-XXX | Temperature & barometric pressure |
| RMS-MLOG-T-XXX | Temperature |
| RMS-MLOG-T10-XXX | Temperature with external probe (NTC) |
| RMS-MADC-XXX-V (0...10 V) | Power |
| RMS-MADC-XXX-A (0...20 mA) | Power input |
| RMS-MDI-XXX | Digital input |
| RMS-MLOG-LGT-XXX | Illumination |

Compatible

- Temperature probe T10-xxxxx
- RMS Gateway RMS-GW-868
- RMS On-premise RMS-WEB
- RMS SaaS solutions RMS-CLD

Delivery package

- Data logger
- Battery
- Wall bracket
- Short instruction manual
- 2 screws & 2 plugs



RMS Gateway

The gateway is the interface between the wireless data logger and the server software. It can manage up to 60 data loggers simultaneously, collecting all wireless-logger measurement data, and passing them on to the server software. When several gateways are used in the same network, they are configured redundantly. If one gateway should fail, the measurement values are automatically sent to the server software via another gateway.

FEATURES

- Connects 60 wireless data loggers simultaneously
- 5 wireless channels for parallel and redundant operation

| General specifications | |
|----------------------------|--|
| Range of application | -40..70 °C, 0..100 %rh |
| Storage conditions | -40..30 °C, 0..95 %rh |
| Maximum altitude | 2000 m ASL |
| Power supply | 24 VDC ±10 % / <100 mA / PoE: 802.3 af-2003, Class 1 |
| AC adapter requirements | 24 VDC ±10 % / 4 W nominal / <15 W power-limited |
| Device data | |
| Measurement interval | 10 s to 15 min. |
| Startup time | < 10 s |
| Order code | RMS-GW-868 RMS-GW-915 |
| Interfaces | Ethernet & ISM868 MHz Ethernet & ISM 915 MHz |
| Indoor wireless range | 20..50 meters 15..25 meters |
| Protocols | HTTP |
| Ethernet cable requirement | Min. Cat. 5, SFTP, max. 30 m |
| Conformity with standards | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP 5 |
| Housing / Mechanics | |
| Housing material | ABS |
| Fire protection class | UL94 -V2 |
| Dimensions | 105 x 113 x 38 mm |
| IP protection class | IP65 |
| Weight | 200 g |

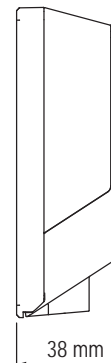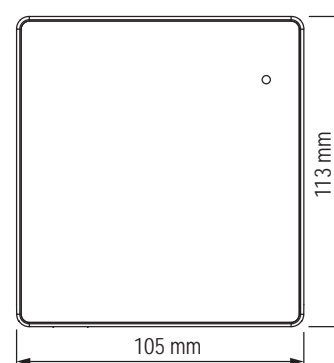

Compatible

- | | |
|----------------------------|----------|
| • RMS Data Logger | RMS-LOG |
| • RMS Mini Logger | RMS-MLOG |
| • RMS Display | RMS-D |
| • RMS On-premises software | RMS-WEB |
| • RMS SaaS solutions | RMS-CLD |

Delivery package

- Gateway
- Wall bracket
- Short instruction manual
- 2 screws & 2 plugs



RMS Display

The LAN display is a freely configurable display. As a remote display, it can be placed optimally where it suits the viewer best. It is able to show the measured values, states and alarms of RMS products. The display shows up to four measured values. Two measured values are shown at a time. If more than 2 measured values have been selected, the display alternates between the values that are to be displayed every 5 seconds.

FEATURES

- Shows up to 4 measured values
- Automatic adjustment of backlight on alarm

| General specifications | |
|-----------------------------|--|
| Device type | RMS Display |
| Display of measuring points | Up to 4 measuring points |
| Range of application | -20...70 °C / 0...100 %rh |
| Storage conditions | -20...30 °C / 0...95 %rh |
| Power supply | 24 VDC ±10 % / <100 mA / PoE: 802.3 af-2003, Class 1 |
| AC adapter requirements | 24 VDC ±10 % / >4 W / power-limited |
| Measurement interval | 10 s |
| Interface | Ethernet |
| Protocols | HTTP |
| Conformity with standards | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP5 |
| Housing / Mechanical parts | |
| Housing material | PC, ABS |
| Fire protection class | UL94-V2 |
| Dimensions | 105 x 113 x 38 mm |
| Display diagonal | 2.26 inch |
| IP protection class | IP65 |
| Weight | 206 g |

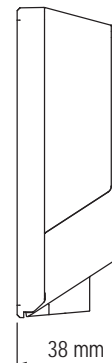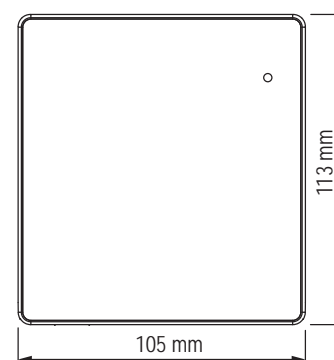

Compatible

- All measuring points
- RMS Gateway RMS-GW-868
- RMS On-premise RMS-WEB
- RMS SaaS solutions RMS-CLD

Delivery package

- Display
- Wall bracket
- Short instruction manual
- 2 screws & 2 plugs


RMS-ADC-L-R

The RMS-ADC-L-R is a data logger with two integrated analog-to-digital converters to which two sensors can be connected for high-precision analog measurement. The data logger stores 44,000 pairs of measured values and sends them to the RMS database via LAN.

FEATURES

- 44,000 data point memory
- 2 analog sensor inputs
- Various scaling: 0...1/5/10 V and 0/4...20 mA
- ± 0.03 % f.s. measurement range accuracy

| General specifications | |
|-----------------------------|--|
| Measurement interval | 10 s to 15 min |
| Startup time | < 10 s |
| Software compatibility | \geq V1.3.0 |
| Protocols | HTTP / MODBUS TCP |
| Ethernet cable requirement | Min. Cat 5, SFTP, max. 30 m |
| Application range | -40...70 °C, non-condensing |
| Storage conditions | -20...30 °C, non-condensing |
| Sensor power supply (Vex) | 24 V / 80 mA max. |
| Current consumption | < 160 mA |
| AC adapter requirements | 24 VDC ± 10 %, 4 W minimum, > 5 W power-limited |
| PoE | 802.3af-2003, Class 1 |
| Conformity with standards | |
| Soldering material | Lead free / RoHS conformity |
| FDA/GAMP directives | FDA CFR21 Part 11 / GAMP 5 |
| Device data | |
| Accuracy | ± 0.03 % full-scale |
| Temperature accuracy | ± 0.02 % full-scale / °C |
| Measuring resistance / Load | 25 k Ω at voltage input 250 Ω at current input |
| Number of measuring points | 1 or 2 analog inputs |
| Measurement ranges | 0...1 V, 0...5 V, 0...10 V, 0...20 mA and 4...20 mA |
| Storage capacity | 44,000 data points |
| Sensor quality | <ul style="list-style-type: none"> • Detection of sensor interruption (open loop) • Detection of overload • Detection of underload at 4...20 mA |
| Housing / Mechanics | |
| Housing material | PC, ABS |
| Dimensions | 110 x 119 x 22.5 mm |
| IP protection class | IP20 |
| Fire protection class | UL94-V0 |
| Weight | 125 g |

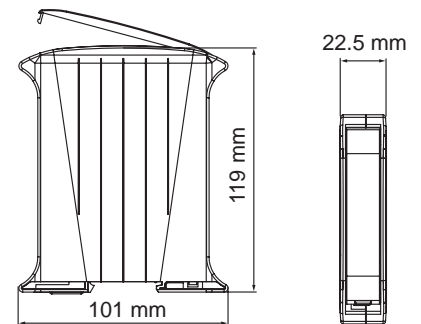

Compatible

- RMS On-premises software \geq V1.3.0
- RMS SaaS solutions \geq V1.3.0

RMS-WEB
RMS-CLD

Delivery package

- Data logger, with clamps
- Short instruction manual
- Certificate



RMS-DI-L-R

The digital input module stores all measured data on an event basis and sends it to the database via Ethernet. The minimum pulse time is 100 ms. Should the connection be lost, the module stores the data intermediately to protect data integrity and fills up the data gaps when the connection has been restored. The device has a battery so that logging of measured data is also ensured in the event of a failure in the external power supply.

FEATURES

- Two input channels
- Data logging of up to 75,000 measured values

| General specifications | |
|----------------------------|--|
| Device type | RMS-DI-L-R |
| Number of inputs | 2 independent digital inputs |
| Range of application | -40..70 °C / 0..100 %rh non-condensing |
| Storage conditions | -40..30 °C / 0..95 %rh |
| Maximum altitude | 2000 m ASL |
| Power supply | 24 VDC ±10 % / <100 mA / PoE: 802.3 af-2003, Class 1 |
| AC adapter requirements | 24 VDC ±10 % / 4 W nominal / <15 W power-limited |
| Battery type | RMS-BAT |
| Battery life | 3 years at 23 °C |
| Device data | |
| Input frequency | Max. 0.833 Hz or 1.2 s |
| Pulse recognition | >100 ms (periodically > 1.2 s) |
| Input circuit | Logic level: 0 V / 5-24 V |
| | Trigger threshold: ~3.77 V |
| | Current consumption: <1 mA |
| Reed circuit | Max. load at input 100 kΩ |
| Max. cable length at input | <3 m |
| Measurement interval | Event-based & interval (10 s to 15 min.) |
| Storage capacity | 75,000 data points |
| Interface | Ethernet |
| Protocols | HTTP |
| Conformity with standards | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP 5 |
| Housing / Mechanical parts | |
| Housing material | Polycarbonate (PC) |
| Fire protection class | UL94-V0 |
| Dimensions | 89.7 x 62.2 x 108 mm |
| IP protection class | IP20 |
| Weight | 206 g |

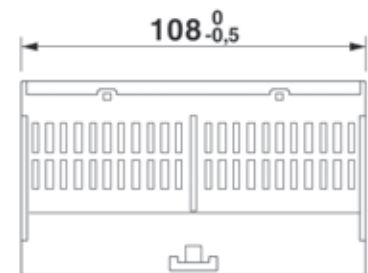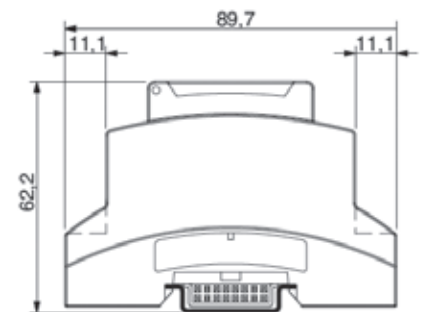

Compatible

- RMS-Config
 - RMS On-premise
 - RMS SaaS solutions
- RMS-WEB
RMS-CLD

Delivery package

- Digital module
- 2 batteries
- Wall bracket (wall-mounted housing)
- Short instruction manual
- 2 screws & 2 plugs



RMS-DO-L-R

The digital output module serves to display information, issue alarms and control events. The relays can be interrogated or set via Modbus TCP or the RMS software. It is possible to define the conditions in the RMS software and to actuate the outputs on the basis of them.

FEATURES

- Two output channels

| General specifications | |
|----------------------------|---|
| Device type | RMS-DO-L-R |
| Number of outputs | 2, polarity-independent |
| Range of application | -40..70 °C / 0..100 %rh non-condensing |
| Storage conditions | -40..30 °C / 0..95 %rh |
| Maximum altitude | 2000 m ASL |
| Power supply | 24 VDC \pm 10 % / <100 mA / PoE: 802.3 af-2003, Class 1 |
| AC adapter requirements | 24 VDC \pm 10 % / 4 W nominal / <15 W power-limited |
| Device data | |
| Interface | Digital signal / galvanically isolated |
| Relay switching capacity | 50 VAC (peak) 1 A / 50 VDC/1 A, polarity-independent |
| Voltage output (VEX) | 24 VDC (Note: The maximum current available depends on the external power supply connected) |
| Max. cable length at input | <3 m |
| Measurement interval | \geq 10 s |
| Interface | Ethernet |
| Protocols | HTTP |
| Conformity with standards | |
| FDA / GAMP directives | FDA CFR21 Part 11 / GAMP 5 |
| Housing / Mechanical parts | |
| Housing material | Polycarbonate (PC) |
| Fire protection class | UL94-V0 |
| Dimensions | 89.7 x 62.2 x 108 mm |
| IP protection class | IP20 |
| Weight | 155 g |

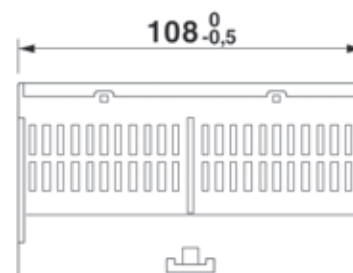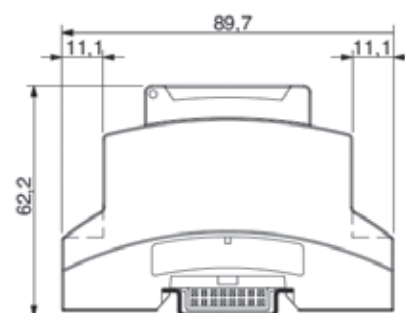

Compatible

- RMS-Config
 - RMS On-premise
 - RMS SaaS solutions
- RMS-WEB
RMS-CLD

Delivery package


- Digital module
- Wall bracket (wall-mounted housing)
- Short instruction manual
- 2 screws & 2 plugs

RMS Converter

The RMS Converter allows you to easily integrate existing devices and networks into RMS. The RMS Converter acts as an interface, gathering the data from digital devices and sending them to the RMS server software/MS SQL database. In addition, third party digital devices can be integrated if the communication protocol is MODBUS TCP. However, this function requires support from the Rotronic R&D. Where ever possible Rotronic would recommend replacing previous networks with RMS devices in the long term.

FEATURES

- Integrates digital devices seamlessly into RMS
- Integrates Rotronic digital devices into RMS
- No loss of accuracy due to A/D converters, show up to 5 decimal values

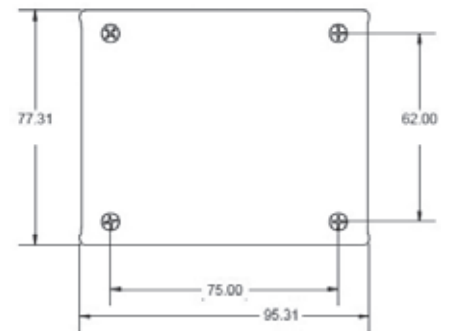

| General specifications | |
|----------------------------|---|
| Device type | RMS Converter |
| Number of measuring points | Integration of up to 100 |
| Range of application | -0 .. 50 °C / 0 .. 95 %rh |
| Storage conditions | -0 .. 50 °C / 0 .. 95 %rh |
| Electrical Supply | 5 VDC (universal mains adapter included) |
| Measurement interval | 10 s to 15 min |
| Interface | Ethernet |
| Protocols | Modbus TCP RoASCII HTTP SNMP Customer-specific enhancements |
| Supported webcams | D-Link DCS-2121 |
| Conformity with Standards | |
| FDA / GAMP directives | FDA 21 CFR Part 11 / GAMP5 |
| Housing / Mechanical parts | |
| Dimensions | 94 x 78 x 30 mm |
| IP protection class | IP20 |



Compatible

- | | |
|---------------------------------|-------------------------------|
| • Transmitter | HF4..HF8 (Ethernet) |
| • Transmitter | PF4/5 (Ethernet) |
| • RMS On-Premise | RMS-WEB |
| • RMS SaaS solutions | RMS-CLD |
| • Clean room panel | CRP5 |
| • Analogue to digital converter | RMS-8ADC-L-R-A/V |
| • RTD to digital converter | RMS-4RTD-L-R |
| • Particle counter | All with Modbus TCP interface |

Delivery package

- Converter
- Short instruction manual
- AC adapter
- Ethernet cable
- USB cable

AD-0001

The AD-0001 will warn users both visually and aurally of any alarms that are setup within the Rotronic monitoring system. Alarms can be setup via the alarm scheme as well as via the script function (IF/OR/AMD/THEN) and then triggered from the actions settings.


FEATURES

- Direct visual or sound alarming
- Alarming via thresholds or scripts (IF/OR/AND/THEN)
- Permanent or blinking red LED
- Permanent or pulsing buzzer

| General specifications | |
|----------------------------|---|
| Device type | AD-0001 |
| Range of application | -20...50 °C / 0...95 %rh |
| Storage conditions | -0...50 °C / 0...95 %rh |
| Electrical supply | 24 VDC (power can be supplied via the RMS-DO-L-R) |
| Light | Red LED |
| Sound | < 85 dB |
| Housing / Mechanical parts | |
| Height | 154.5 mm without mounting bracket |
| Diameter | 70 mm |
| IP protection class | IP65 |
| Housing material | PA and PC |

Sound pressure level dB (A)

| | | Distance in m | | | | | | | | | | |
|-----|----|---------------|----|----|----|----|----|-----|-----|-----|-----|------|
| 1 | 2 | 3 | 5 | 10 | 20 | 30 | 50 | 100 | 200 | 300 | 500 | 1000 |
| 100 | 94 | 90 | 86 | 80 | 74 | 70 | 66 | 60 | 54 | 50 | 46 | 40 |
| 90 | 84 | 80 | 76 | 70 | 64 | 60 | 56 | 50 | 44 | 40 | | |
| 85 | 79 | 75 | 71 | 65 | 59 | 55 | 51 | 45 | 39 | | | |
| 70 | 64 | 60 | 56 | 50 | 44 | 40 | 36 | | | | | |

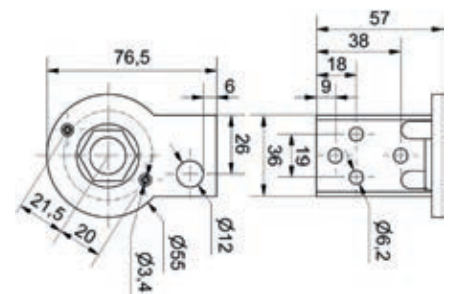

Compatible

- RMS-DO-L-R

Delivery package

- Device

RMS-TD-0001

Strict guidelines require high temperature stability in many areas and only allow the smallest fluctuations. However, there are unavoidable fluctuations fridge temperature when the door opens, which must be buffered to ensure that the probe temperature measurement is representative of the product temperature. As of such, the monitored temperature is more stable and meaningful. The sensor holder is traceable end-to-end and meets all FDA and GxP environments.

FEATURES

- Ensure that the temperature measurement is representative of the product temperature with this temperature buffer
- Easy installation of temperature probes in fridges and freezers

| General specifications | |
|------------------------|----------------------------------|
| Order code | RMS-TD-0001 |
| Temperature range | -196...40 °C |
| PET bottle | Polyethylene terephthalate (PET) |
| Mounting bracket | Poly lactide (PLA) |
| Sand | Biloxit (certified) |
| Dimensions | 34 x 110 mm |



Delivery package

- PET bottle
- Lid with seal
- Sand (weighed for the bottle)
- Two centering sleeves (suitable for 6 mm diameter probes only)
- Mounting bracket
- Cable ties



WB-0001

The WB-0001 detects the presence of water or conductive fluids once it reaches a level that bridges the two conductive strips on the bottom of the housing. Once the strips are bridged, audible and visual alerts as well as an internal switch are triggered. The sensing height can be adjusted from 0.08 mm to 13.5 mm using the included adjustable mounting bracket (that can be attached to any flat surface by either using the attached adhesive strips or mounting screws).

FEATURES

- Detect leaks as soon as they occur
- Visual and audible alarm
- Battery powered
- Adjustable sensing height
- Relay output

| General specifications | |
|-----------------------------------|--|
| Parameters | Water or conductive fluids |
| Range of application | 0...50 °C |
| Power supply | 3V CR2450 lithium metal battery |
| Battery lifetime | 5 years steady state / 48 hours during alarm condition |
| Power consumption | 0.9 mA steady state / 3.0 mA during alarm condition |
| Dimensions | 53 x 105.23 x 30.77 mm |
| Housing | ABS and polycarbonate |
| Cable length | 1.5 m |
| IP protection class | Water tight up to 3/4 of the body height |
| Weight | 137.5 g |
| Technical Information / Functions | |
| Switch type | SPST NO SSR |
| Audible alarm | At least 85dB @30 cm distance |
| Visual alarm | Red LED for water level, Yellow LED for low battery |

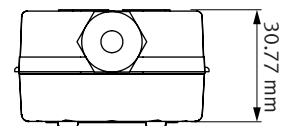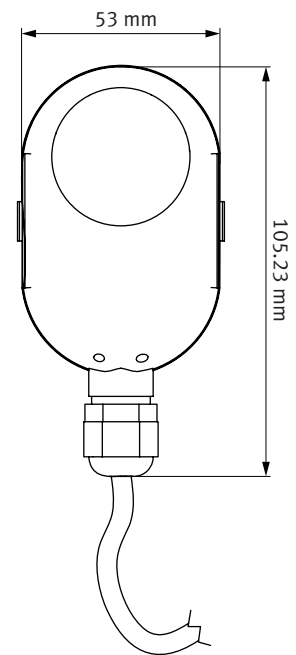

Compatible

- RMS-MDI-868/915
- RMS-DI-L-R

Delivery package

- 1 CR2450 lithium metal battery
- Short instruction manual

Temperature probes

The RMS temperature portfolio will cover a various array of applications, from the coldest such as liquid nitrogen tanks and cryogenic freezers to freezers, refrigerators and cold rooms to hotter ones such as water baths, incubators, ovens and autoclaves. Certain probes are also designed for specific applications for monitoring legionella within water pipes and monitoring room temperature.

T10-0001


- Applications: liquid nitrogen, cryogenics...
- Application range: -196...-90 °C
- Cable length: 2 m
- Probe diameter: 6-6.15 mm
- Probe length: 50 mm
- IP65
- Select NTC T10-0001 within RMS
- Sensor: NTC

T10-0002

- Applications: Dry ice, freezers...
- Application range: -80...150 °C
- Cable length: 2 m
- Probe diameter: 6-6.15 mm
- Probe length: 50 mm
- IP65
- Select NTC T10-0002/0006 within RMS
- Sensor: NTC

T10-0003/T10-0013/T10-0113

- Applications: freezers, fridges, cold rooms, water baths, incubators, ovens...
- Application range: -50...120 °C
- Cable length: 2 m
- Probe diameter: 6-6.15 mm
- Probe length: 50 mm
- IP65
- Select NTC T10-0003/4 within RMS
- Sensor: NTC

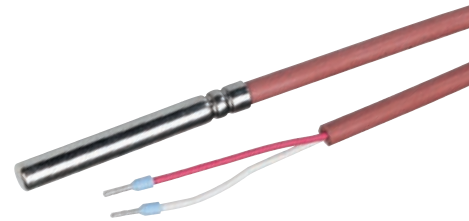

Temperature probes

T10-0005

- Applications: Dry ice, freezers...
- Application range: -90...0 °C
- Cable length: 4 m
- Probe diameter: 6-6.15 mm
- Probe length: 50 mm
- IP68
- Select NTC T10-0005 within RMS
- Sensor: NTC

T10-0006

- Applications: freezers, fridges, cold rooms, water baths, incubators, ovens...
- Application range: -80...150 °C
- Cable length: 4 m
- Probe diameter: 6-6.15 mm
- Probe length: 50 mm
- IP65
- Select NTC T10-0002/0006 within RMS
- Sensor: NTC

T30-0001

- Applications: Cryotechnology, dry ice
- Application range: -196...260 °C
- Cable length: 2000 mm
- Probe diameter: 6-6.15 mm
- Probe length: 50 mm
- IP68
- Sensor: 4 wire Pt100

T30-0003

- Applications: Standard
- Application range: -50...200 °C
- Cable length: 2000 mm
- Probe diameter: 6 mm
- Probe length: 50 mm
- IP65
- Sensor: 4 wire Pt100

T30-0006

- Applications: Standard
- Application range: -50...200 °C
- Cable length: 4000 mm
- Probe diameter: 6 mm
- Probe length: 50 mm
- IP65
- Sensor: 4 wire Pt100



Temperature probes

T30-0010

- Application range: -190...200 °C
- Cable length: 4000 mm
- Probe diameter: 3.6 mm
- Probe length: 50 mm
- IP65
- Sensor: 4 wire Pt100

T30-0012

- Application range: -190...260 °C
- Cable length: 2000 mm
- Probe diameter: 3 mm
- Probe length: 50 mm
- IP68
- Sensor: 4 wire Pt100

T30-0013

- Applications: Doors
- Application range: -50...200 °C
- Cable length: 2000 mm
- Probe diameter: 6 mm
- Probe length: 50 mm
- IP65
- Sensor: 4 wire Pt100



Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Software editions

HW5 STANDARD (FOR FREE)

- Single-user applications license
- Visualization of multiple loggers and measured values


HW5 WITH WATER ACTIVITY MEASUREMENT

- All functions of the HW5 standard
- AW Quick function for fast determination of water activity

Function overview

| Function overview | Standard HW5 | Professional with water activity HW5-AW-Code |
|---|--------------|--|
| The HW5 software from Rotronic constitutes a professional configuration tool and is licensed. Multiple use of one water activity license is permitted as long as the installed software is used at the same site address. | | |
| Viewing of measured values/Monitoring | | |
| Display of measured values on a monitor for multiple instruments | ✓ | ✓ |
| Display of measured values | | |
| Numeric and graphic display | ✓ | ✓ |
| Graphic comparisons and overlay functions | ✓ | ✓ |
| Analysis and calculation tool | | |
| Psychrometric parameters | ✓ | ✓ |
| Statistics | ✓ | ✓ |
| Printing/Reports | | |
| Automatic generation of adjustment, calibration and configuration reports | ✓ | ✓ |
| Printout as table, graph or PDF report | ✓ | ✓ |
| Users and passwords | | |
| Password protection | ✓ | ✓ |
| Users freely selectable. Rights freely definable | ✓ | ✓ |
| Water activity measurement | | |
| AwQuick and AwE | | ✓ |
| Supported interfaces | | |
| NFC and USB | ✓ | ✓ |
| RS-485 | ✓ | ✓ |
| Instrument-specific functions | | |
| Instrument settings, scaling, programming, data retrieval, data logging functions | ✓ | ✓ |
| Adjustment and calibration of Rotronic probes | ✓ | ✓ |
| Simultaneous adjustment of probes in one group | ✓ | ✓ |
| Time synchronization for data loggers | ✓ | ✓ |

Description of functions

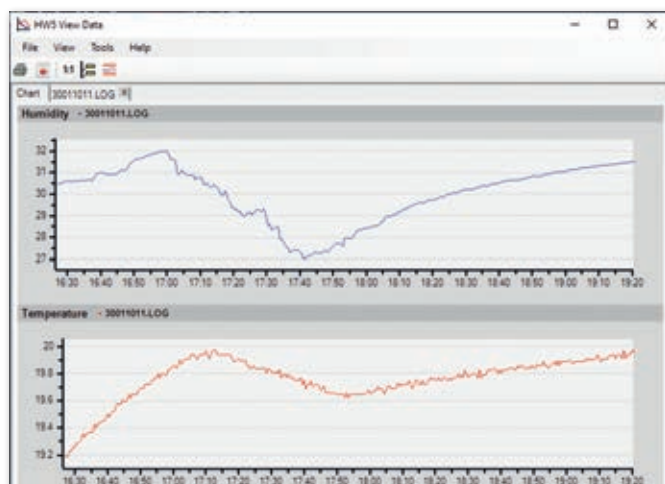

VIEWING OF MEASURED VALUES

Viewing of measured values is very easy and user-friendly. Files of any device shown in the device tree can be copied and opened directly with the HW5 Explorer. The data is presented in both tabular and graphical formats.

The graph module can be configured by the user.

Instrument configuration


The HW5 software can be used to adjust the settings of Rotronic instruments and probes. Depending on the instrument and probe, the following functions and settings can be changed:

- Assignment and scaling of transmitter outputs
- Definition of alarm values
- Relay switch points
- Adjustment and calibration of probes



Analysis and calculation tool Psychrometric parameters

All Rotronic instruments measure relative humidity in %rh and temperature in °C/°F. These two values can be used to calculate other psychrometric values such as dew point, mixing ratio, enthalpy and wet bulb temperature. The calculation module in HW5 software uses WMO*-verified formulas for these calculations and allows users to define their own parameters (e.g. mixing ratio & temperature) as input values in order to calculate the relative humidity from them. Other advanced options such as dew/frost point differentiation are also included.

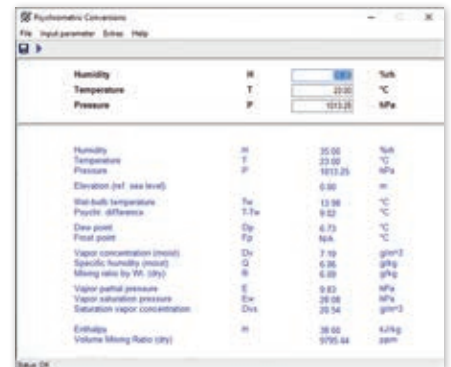


Statistical functions / PDF report

For many users detailed data, which can be very extensive, is not necessarily of much interest. For them it is merely important that the measured values lie within a certain range. The statistical function and integrated PDF report enable simple and detailed data evaluation for this.


It shows the following values:

- Min., max. and mean value (during a defined period or during the time of an alarm)
- Standard deviation
- Mean kinetic temperature
- Number of measured values
- Total time measurements exceeded a certain value

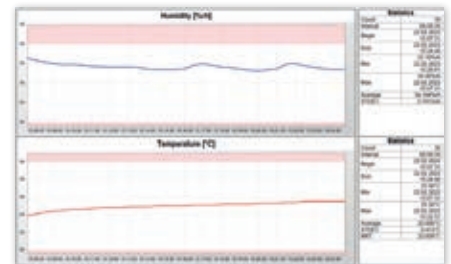

Users and passwords

User names and passwords can be defined and assigned freely. Every user can be granted different rights. Users can be blocked and reactivated again. Users that have been deleted cannot be recreated under the same name.

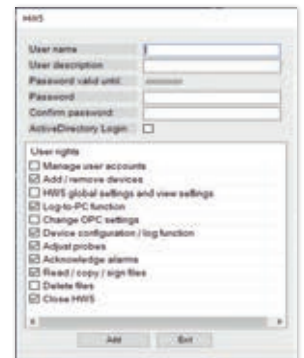

CP11 / CL11

Instrument configuration and downloading of data.

HF1

Instrument configuration and adjustment of humidity and CO₂.



* WMO = World Meteorological Organisation

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



PC-Series

ADVANTAGES

- High accurate measurements in precision manufacturing applications
- Built in interchangeable Hygrosmart module
- Different probe types; analog or digital
- Available in different materials Polymer or stainless steel


APPLICATIONS

- Production environment
- Industrial Manufacturing
- Meteorological applications
- Climate chambers



PC62 & PC62V

- Application range: 0...100 %rh, -20...80 °C
- Accuracy: $\pm 2\%$ rh (10...90 %rh), ± 0.2 K @ 23 °C
- Stability: $\pm 1\%$ rh/year
- Materials: Molded polymer or stainless steel

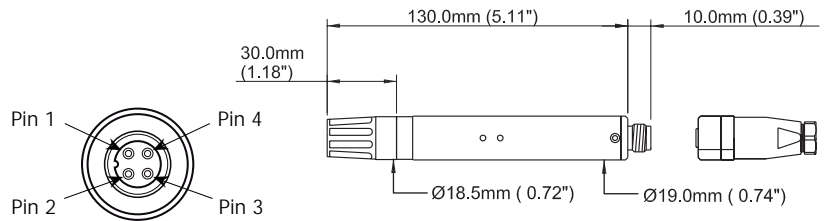


Electrical Connections

| Voltage output | | |
|----------------|-----------|----------------------|
| Cable | Connector | |
| White | Pin 1 | Power supply V + |
| Green | Pin 4 | Output rh + |
| Yellow | Pin 2 | Output temperature + |
| Brown | Pin 3 | Common ground |

| Cable | Connector | RS232 | RS485 |
|--------|-----------|------------------|------------------|
| White | Pin 1 | Power supply V + | Power supply V + |
| Green | Pin 4 | TX | TX/RX + |
| Yellow | Pin 2 | RX | RX/TX - |
| Brown | Pin 3 | Ground | Ground |


PCMini52

- Application range: 0...100 %rh, -20...80 °C
- Accuracy: $\pm 2\%$ rh (10...90 %rh), ± 0.2 K @ 23 °C
- Stability: $\pm 1\%$ rh/year
- Output: Modbus RTU / Voltage
- Materials: Molded polymer or stainless steel

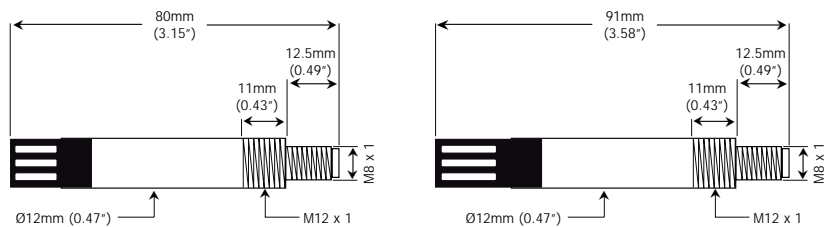

Electrical Connections


| Mating Cable | Pin |
|--------------|--------------------|
| Brown | Supply voltage V + |
| White | Modbus |
| Blue | V - |
| Black | Modbus |

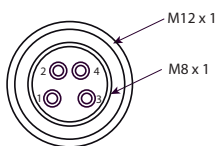

| Voltage output | | |
|----------------|-----------|----------------------|
| Cable | Connector | |
| Brown | Pin 1 | Power supply V + |
| White | Pin 2 | Output rh + |
| Blue | Pin 3 | Output temperature + |
| Black | Pin 4 | Common ground |

PC33 & PC52

- Application range: 0...100 %rh, -20...80 °C
- Accuracy PC52: ± 2 %rh (10...90 %rh), ± 0.2 K @ 23 °C
- Accuracy PC33: ± 3 %rh (30...80 %rh), ± 0.3 K @ 23 °C
- Stability: ± 1 %rh/year
- Materials: Molded polymer or stainless steel

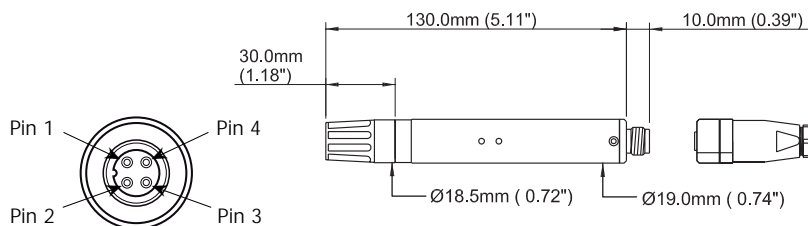

Electrical Connections

| Voltage output | | |
|----------------|----------------------|-----|
| Mating Cable | | Pin |
| White | Supply voltage V + | 1 |
| Yellow | Output temperature + | 2 |
| Brown | Common ground | 3 |
| Green | Output rh + | 4 |

| 4-20 mA Output 2-wire | | |
|-----------------------|----------------------|-----|
| Mating Cable | | Pin |
| White | Output rh + | 1 |
| Yellow | Output temperature - | 2 |
| Brown | Output rh - | 3 |
| Green | Output temperature + | 4 |

Technical Information

| | PC33 & PC52 | PC62 & PC62V | PCMini52 |
|--------------------------------|--|---|--|
| Probe type | Analog relative humidity and temperature | Digital relative humidity and temperature | Digital relative humidity and temperature |
| Measuring range | -20...80 °C / 0...100 %rh | | |
| Accuracy at 23 °C | PC33: ± 3 %rh (30...80 %rh) / ± 0.3 K PC52: ± 2 %rh (10...90 %rh) / ± 0.2 K | ± 2 %rh (10...90 %rh) / ± 0.2 K | ± 2 %rh (10...90 %rh) / ± 0.2 K |
| Long-term stability | <1 %rh / year | | |
| Probe housing | Molded polymer or stainless steel | | Molded polymer or stainless steel |
| IP Protection rating | IP65 | | |
| Power supply | 14...30 VDC (0...5 V / 0...10 V output) 5...30 VDC (0...1 V & mA output) | 14...30 VDC (0...5 V / 0...10 V output) 5...30 VDC (0...1 V) | 14...35 VDC (0...5 V / 0...10 V output) 6...35 VDC (0...1 V output) |
| Output signal | 4-20 mA, 0 to 1, 0 to 5, 0 to 10 V | 0-1, 0-5, 0-10 V, RS232, RS485 | Modbus RTU 0 to 1, 0 to 5, 0 to 10 V |
| Response time rh sensor | <10 sec typical (for 90% of the step change) | | |
| Electrical connections | M12 | | 4 pin, M8 connector 4 pin, M12 connector |
| Weight | 30 g (1.06 oz) without cable (molded polymer version) | | 10 g (0.35 oz) |

PC-SERIES ACCESSORIES AND SPARE PARTS

| Order Code | Compatibility | Product / Description |
|--|-----------------------------------|--|
| Protection cap | | |
| A000002 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") Slotted protection cap black |
| A000003 | PCMini52 | 12mm (0.47") Slotted protection cap black |
| A000046 | PCMini52 | 13mm HDPE Protection cap |
| A000120 | PC62 & 62V, PCMini52, PC33 & PC52 | ø90mm (3.54") WM weather protection cap (for ø19mm (0.75") probes) |
| A000125 | PC62 & 62V, PCMini52, PC33 & PC52 | ø120mm (4.72") WM weather protection cap (for ø19mm (0.75") probes) |
| Filter | | |
| A000014 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") PVDF filter |
| A000015 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") PVDF filter w/ protection cap black |
| A000017 | PCMini52 | 12mm (0.47") PVDF filter |
| A000018 | PCMini52 | 12mm (0.47") PVDF filter w/ protection cap black |
| A000021 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") Mesh filter w/ protection cap black |
| A000022 | PCMini52 | 12mm (0.47") Mesh filter w/ protection cap black |
| A000023 | PCMini52 | 12mm (0.47") Flat SS sintered dust filter |
| A000025 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") Arrow 5µm SS sintered filter |
| A000027 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") connector, no cable, w/screw terminal |
| A000028 | PCMini52 | 12mm (0.47") Arrow 20µm SS sintered filter |
| A000040 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") Foil filter 2µm w/protection cap black |
| A000042 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") Oleophobic foil filter 0.7µm (w/protection cap black) |
| K9 | PCMini52 | 12mm (0.47") Mesh filter with protection cap, light brown, extra long (30mm) |
| K10 | PCMini52 | 12mm (0.47") PTFE filter with peek protection cap |
| K11 | PCMini52 | 12mm (0.47") Slotted protection cap, light brown, extra long (30mm) |
| Cable | | |
| A000030-xx xx = total length i.e. A000030-20 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") Connector - Connector - Cable (price per meter) |
| A000031 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") connector with 2m (6.5') cable |
| A000032 | PC62 & 62V, PC33 & PC52 | 19mm (0.75") connector with 5m (16') cable |
| A000033 | PCMini52 | 12mm (0.47") connector with 2m (6.5') cable |
| A000036 | PCMini52 | 12mm (0.47") connector with 5m (16') cable |
| A000037 | PCMini52 | 12mm (0.47") connector with 10m (32.8') cable |
| A000321 | PCMini52 | 12mm (0.47") connector without cable (with solder terminal) |
| A000321-xx xx = total length i.e. A000321-20 | PCMini52 | 12mm (0.47") connector - Connector - Cable (price per meter) |
| A000322 | PCMini52 | 12mm (0.47") Connector with 20m (25.6') cable |
| Mounting | | |
| A000100 | PC62 & 62V, PC33 & PC52 | 3/4" NPT SS adj. fitting for SS probes |
| A000101 | PCMini52 | 1/2" NPT SS adj. fitting for SS probes |
| A000110 | PC62 & 62V, PC33 & PC52 | Al mounting flange for ø19mm (0.75") SS probes (outside ø80mm (3.15")) |
| A000111 | PCMini52 | Al mounting flange for ø12mm (0.47") SS probes (outside ø40mm (1.57")) |
| A000150 | PC62 & 62V, PC33 & PC52 | Mini flange for ø19mm (0.75") polymer probe |

COMPATIBILITY

- PC-Series are standalone probes which are not compatible with Rotronic transmitters and Rotronic handhelds.
- The only compatible accessories and spare parts like filters, protection caps, mounting clips etc. are listed here.
- In case of insecurity, please contact your local Rotronic partner.

**MODBUS REGISTER (PCMINI52)**

| Register | Content | Format |
|----------|--|-------------------|
| 0 | T ambient | 235 = 23.5 °C |
| 1 | rh | 457 = 45.7 % |
| 2 | Model type | 64480 (fixed) |
| 3 | Trade mark | 5000 (fixed) |
| 4 | Software release | xx.xx |
| 5/6 | Future purposes (don't use) | - |
| 7 | Modbus Device Address | Default 1 |
| 8 | Baud rate | 2 = 9600, 3=19200 |
| 9...13 | Factory purposes | - |
| 14 | Flash protect | Default 0 |
| 15...254 | Factory purposes (calibration registers) | - |

DT722**BENEFITS**

- Relative humidity, temperature measurement and dew point
- Designed for accurate measurement in a harsh environment
- Stainless steel housing
- Long term stability: ± 1 %rh over 12 months
- Withstands temperatures up to 150 °C (300 °F)


APPLICATIONS

- HVAC
- Heating, ventilation, air conditioning
- Food industry
- Pharmaceutical industry
- Printing and paper industries

**ELECTRICAL CONNECTIONS**

| Connections | | |
|-------------|-------|--|
| Cable | Pin | |
| White | Pin 1 | Supply + 8...32 VDC |
| Yellow | Pin 2 | Output 2 = Temp 4...20 mA (max. 500 Ω) |
| Brown | Pin 3 | Not connected (for calibration only) |
| Green | Pin 4 | Output 1 = RH 4...20 mA (max. 500 Ω) |
| | Pin 5 | Not connected (for calibration only) |

Note: Both RH and T need to be connected in order for the T output to work.

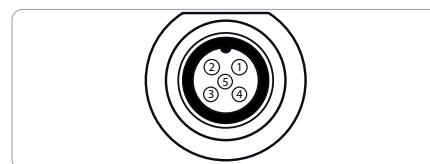

Note: Even though the DT722 has a 5 pin connector, the standard connection cable (A000031) only has four pins/wires. However, only three pins (1, 2 and 4) are needed to connect the DT722.

ACCESSORIES AND SPARE PARTS

| Order Code | Description |
|-----------------------|--|
| Protection cap | |
| A000002 | 19 mm (0.75") Slotted protection cap black |
| Filter | |
| A000014 | 19 mm (0.75") PVDF filter |
| A000015 | 19 mm (0.75") PVDF filter w/ protection cap black |
| A000021 | 19 mm (0.75") Mesh filter w/ protection cap black |
| A000025 | 19 mm (0.75") Arrow 5 μ m SS sintered filter |
| A000027 | 19 mm (0.75") connector, no cable, w/screw terminal |
| Cable | |
| A000030 | Single plug, without cable |
| A000030-XX | 19 mm (0.75") connector / cable (price per meter) |
| A000031 | 19 mm (0.75") connector with 2 m (6.5') cable |
| A000032 | 19 mm (0.75") connector with 5 m (16') cable |
| A000040 | Metal foil filter 2 μ m with protective cap, black |
| A000042 | Oleophobic foil filter 0.7 μ m with black protective cap |
| Mounting | |
| A000110 | 3/4" NPT SS adj. fitting for SS probes |
| A000100 | Al mounting flange for \varnothing 19 mm (0.75") SS probes (outside \varnothing 80 mm (3.15")) |

ORDER CODE

To get an order code that contains all the important information, the relevant features should be selected from the tables below and the ordered in sequence (starting with the basic model): "Feature A" + "Feature B" + "Feature C" + "Feature D" + "Feature E" + "Feature F" + "Feature G"


Example: DT722 + SX + A + T0 + 03 + CA + F02

Relative humidity and temperature transmitter without digital display. Output signals for absolute humidity and temperature (0...100 °C). Probe length is 300 mm. Without mating connector and without cable. 19 mm open protective cap in black.

| | | DT722 | SX | A | T0 | 03 | CA | F02 |
|--|-------|-------|----|---|----|----|----|-----|
| Base Unit {Feature A} | | | | | | | | |
| Relative humidity and temperature | DT722 | | | | | | | |
| Display {Feature B} | | | | | | | | |
| Display | SD | | | | | | | |
| No display | SX | | | | | | | |
| Moisture Signal {Feature C} | | | | | | | | |
| Relative humidity | H | | | | | | | |
| Calculated dp temp (range (Td)) -40...60 °C (-40...140 °F) | D | | | | | | | |
| Calculated absolute humidity (Abs) (range Abs from 0...200 g/m ³) | A | | | | | | | |
| Calculated wetbulb temp (range (Tw)) -40...60 °C (-40...140 °F) | W | | | | | | | |
| Temperature {Feature D} | | | | | | | | |
| 0...100 °C (32...212 °F) | T0 | | | | | | | |
| -40...150 °C (-40...302 °F) | TS | | | | | | | |
| Other output scaling available on request | TX | | | | | | | |
| Length {Feature E} | | | | | | | | |
| 200 mm (7.87") probe | 02 | | | | | | | |
| 300 mm (11.81") probe | 03 | | | | | | | |
| 500 mm (19.69") probe | 05 | | | | | | | |
| 900 mm (35.43") probe | 09 | | | | | | | |
| Filter {Feature G} | | | | | | | | |
| 19 mm (0.75") slotted protection cap black | F02 | | | | | | | |
| 19 mm (0.75") PVDF filter with protection cap | F15 | | | | | | | |
| 19 mm (0.75") mesh filter with protection cap | F21 | | | | | | | |
| 19 mm (0.75") arrow SS sintered filter 5 µm | F25 | | | | | | | |
| 19 mm (0.75") arrow SS sintered filter 20 µm | F27 | | | | | | | |
| 19 mm (0.75") foil filter 2 µm with protection cap, black | F40 | | | | | | | |
| Oleophobic foil filter 0.7 µm with protection cap, black | F42 | | | | | | | |
| Cable {Feature F} | | | | | | | | |
| No Cable | CA | | | | | | | |
| 19 mm (0.75") connector, no cable, w/screw terminal | CB | | | | | | | |
| 19 mm (0.75") connector with 2 m (6.5') cable | CC | | | | | | | |
| 19 mm (0.75") connector with 5 m (16') cable | CD | | | | | | | |

COMPATIBILITY



- DT722 Transmitters are **not** compatible with Rotronic HC2A probes
- The only compatible accessories and spare parts like filters, protection caps, mounting clips etc. are listed here.
- In case of insecurity, please contact your local Rotronic partner.

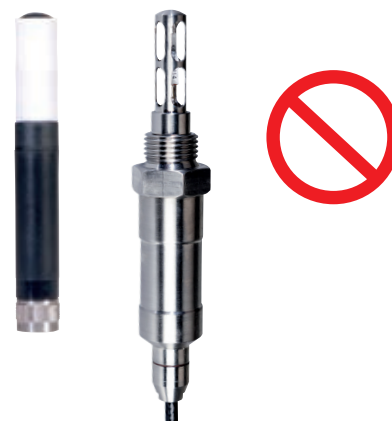

TECHNICAL INFORMATION

| Performance | |
|--|---|
| Measurement range (RH) | 0...100 %rh |
| Measurement range (T) | -40...150 °C (-40...302 °F) |
| Accuracy @ 25 °C (77 °F) humidity | < ±2 %rh (5...95 %rh) |
| Accuracy @ 25 °C (77 °F) temperature | ±0.2 °C (±0.36 °F) typical |
| Stability – RH sensor | ±1 %rh/year |
| Response time – RH sensor | <10 sec typical (for 90 % of the step change) |
| Electrical specifications | |
| Output signal | 4...20 mA |
| Supply voltage | 8...32 V DC |
| Supply voltage influence | ±0.01 %rh/V typical |
| Operating humidity | |
| Operating humidity probe, housing, storage | 10...95 %rh (non-condensing) |
| Operating temperatures | |
| Probe | -40...150 °C (-40...302 °F) |
| Housing | -20...70 °C (-4...158 °F) |
| Storage | -30...75 °C (-22...167 °F) |
| Mechanical specifications | |
| Ingress protection | IP65 (NEMA 4 level) |
| Housing material | Stainless steel |
| Weight | 200 mm/800 g (7.87"/28.22 oz) 300 mm/900 g (11.81"/31.75 oz) 500 mm/1040 g (19.69"/36.68 oz) 900 mm/1412 g (35.43"/49.80 oz) |
| Electrical connections | 5 pin, M12 |

Subject to technical change without notice. Printing and other errors reserved.

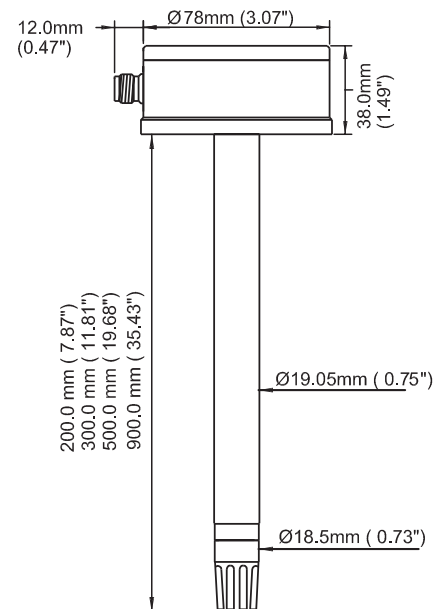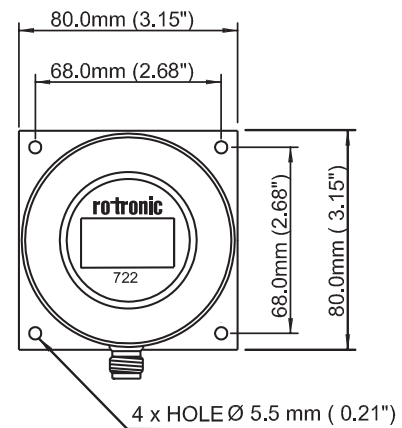

S904

BENEFITS

- Simple operation and maintenance
- Excellent chamber stability and uniformity
- Manual control or optional straightforward automated set point programming
- Optional in-built data-logging for reference probe and probes under calibration

APPLICATIONS

- On-site or in-lab verifications
- Validation of RH probes at pharmaceutical manufacturing facilities, meteorological offices, food manufacturing etc.



Description

GENERAL

The S904 is a completely stand-alone and transportable calibrator for humidity sensors, requiring no external services other than mains power. The calibration chamber features 5 interchangeable ports to accommodate virtually any brand, type or model of sensor. This calibrator is ideal for companies or organizations looking to calibrate large numbers of probes in a laboratory or field setting.

HIGH STABILITY

The environment within the insulated calibration chamber is temperature controlled using a 4-zone fan-assisted Peltier arrangement for maximum stability, and minimum temperature gradient. The humidity of the circulating air is precisely regulated using a closed-loop control system that functions by proportionally mixing flows of dry and saturated air.

FAST RESPONSE TIME

Two highly visible LED panels on the front of the S904 display the current humidity and temperature within the calibration chamber. The response time to a humidity or temperature step change is typically less than 10 minutes, so a simple 3-point calibration can be carried out in under an hour.

MAINTENANCE


The S904 is easy to maintain. The desiccant changes color to indicate when it needs to be recharged and this is visible through a clear window on the front of the unit. Recharging the desiccant is simply a matter of heating it in a conventional oven at +150°C (+302°F) for 3 hours. The water reservoir at the front of the unit shows the current saturator fill level and makes it easy to top-up with distilled water when required.

ACCESSOIRES & SPARE PARTS

| Order Codes | Product / Description |
|-----------------------------|--|
| Doors and Door Ports | |
| A000266 | Door with clear window - no ports |
| A000268 | Door without ports |
| A000263 | Door with 5 ports – please order adaptors separately |
| A000264 | Door kit with 5 ports and 25 adapters - 5 x Ø19 mm (0.75"), 4 x Ø12 mm (0.47"), 4 x Ø13.5 mm (0.53"), 4 x Ø15 mm (0.59"), 4 x Ø18.5 mm (0.73"), 4 x Ø24 mm (0.94") – and 25 blind stops. Adapter tool included |
| A000369 | Door kit for use with MI OptidewOPT401/501. (Optidew dew-point sensor port opening, PRT port adapter plus 3 x Ø standard sized adapters. Adapter tool included) |
| A000279 | Polymer adapter Ø19 mm to Ø6 mm PRT |
| A000290 | Molded polymer port adapter & blind stop (to be modified by customer) (M30x1) |
| A000290X | Polymer port adapter Ø client specific & blind stop (check possibility with factory first) |
| A000291 | Polymer port adapter for Ø12.0 mm (0.47") probe, blind stop (M30x1) |
| A000292 | Polymer port adapter for Ø13.5 mm (0.53") probe, blind stop (M30x1) |
| A000293 | Polymer port adapter for Ø14.0 mm (0.55") probe, blind stop (M30x1) |
| A000294 | Polymer port adapter for Ø15.0 mm (0.59") probe, blind stop (M30x1) |
| A000295 | Polymer port adapter for Ø18.5 mm (0.73") probe, blind stop (M30x1) |
| A000296 | Polymer port adapter for Ø19.0 mm (0.75") probe, blind stop (M30x1) |
| A000297 | Polymer port adapter for Ø24.0 mm (0.95") probe, blind stop (M30x1) |
| A000298 | Polymer port adapter for Ø25.0 mm (0.98") probe, blind stop (M30x1) |
| A000377 | Blind stop for Optidew 2 opening |
| A000378 | Blind stop for Optidew 2 Ø6 mm opening |
| A000265 | Tool for changing the port adapters |
| Miscellaneous | |
| A000240 | Drying module (including desiccant) |
| A000242 | Water bottle |
| A000171 | 0.25 kg (0.55 lbs) desiccant (orange) |
| A000172 | 3 kg (6.6 lbs) desiccant (orange) |
| HT961T00 | Control sensor. (Please add to order of control sensor, which type of calibration is preferred. See calibration RH tab for choice of calibration and prices) |
| OCAL-TC | Transport Case for OptiCal and S904 |
| S8K-REM-TSG | S8000 Remote guard for use in S904 and Optical |



SOFTWARE

An optional integrated digital interface is available only for the S904-D. This allows the humidity and temperature set points of the chamber to be controlled with the supplied PC application software, enabling the operator to create completely automated calibration profiles for unattended laboratory operation. The software also gives the ability to monitor, chart and log data from the connected probes and calibration reference on a PC for later analysis. Alternatively, the set points can be controlled manually with the front panel controls – making the S904 ideal for field calibrations where a PC is not available.

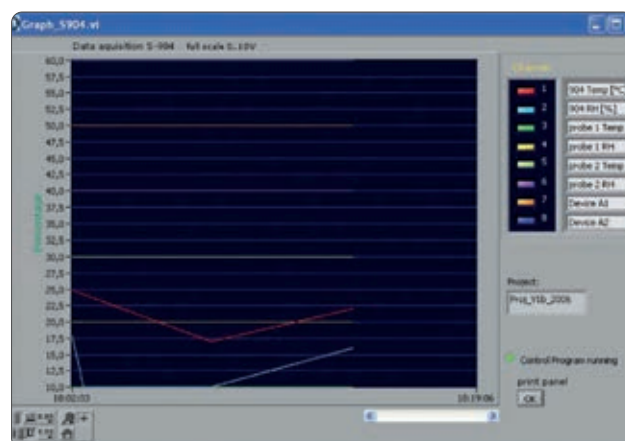


TECHNICAL INFORMATION

Dimensions

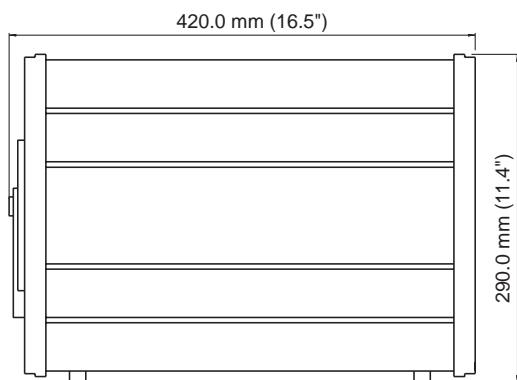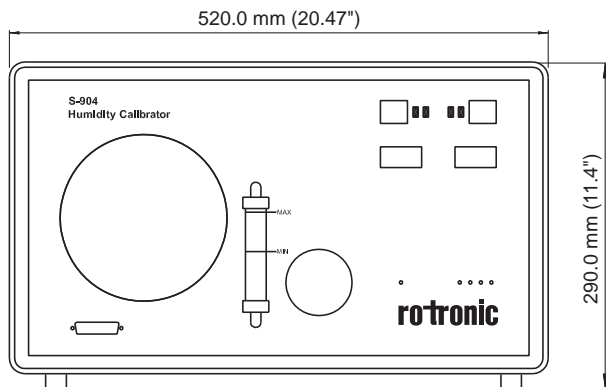

CHAMBER DIMENSIONS

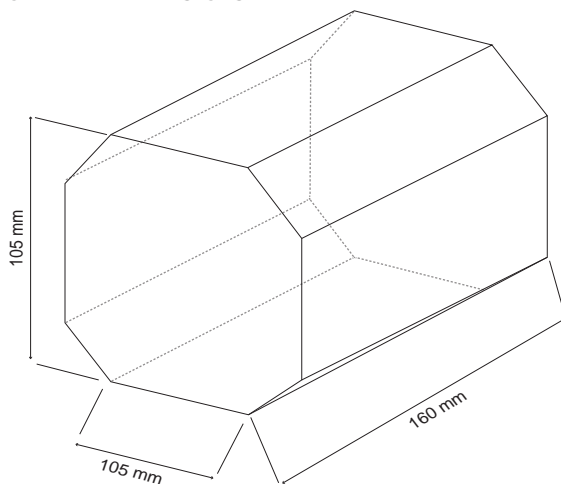

| | |
|--------------------------|---|
| Humidity | |
| Generation range | 10...90 %rh |
| Accuracy | $\leq \pm 1$ %rh (10...70 %rh) |
| Control element | $\leq \pm 1.5$ %rh (70...90 %rh) |
| Stability | ± 0.2 %rh (20...80 %rh) |
| Temperature | |
| Generated range | 10...50 °C (50...122 °F) (lowest T set point = 10 °C (18 °F) below ambient) |
| Accuracy | ± 0.1 °C (± 0.2 °F) |
| Stability | ± 0.1 °C (± 0.2 °F) |
| Chamber | |
| Ramp rate from | |
| 20...40 °C (68...104 °F) | 1.5 °C / minute (2.7 °F / minute) |
| 40...20 °C (104...68 °F) | 0.7 °C / minute (1.2 °F / minute) |
| Control element | Removable relative humidity sensor |
| General | |
| Probe ports | Up to 5 – sensor body diameters 5 to 25 mm (0.2 to 0.98") accommodated by port adapters |
| Chamber volume | 2000 cm ³ (122.1 in ³) |
| Chamber dimensions | 105 x 105 x 160 mm (4.13 x 4.13 x 6.3") (h x w x d) |
| Instrument dimensions | 290 x 520 x 420 mm (11.4 x 20.5 x 16.5") (h x w x d) |
| Set point resolution | 0.1 for humidity and temperature |
| Displays | 3 digit LED, 10 mm (0.39") characters |
| Supply | 85...264 V AC, 47/63 Hz, 150 VA |
| Weight | 20 kg (44 lbs) |

Subject to technical change without notice. Printing and other errors reserved.

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services




Theory



Video HygroGen2

Interested? Then scan the QR code!

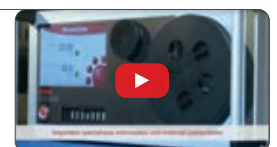

Video mapping

Interested? Then scan the QR code!



GxP consultation

We place our knowledge at your disposal.

With our consulting services in GxP, we support you from project planning (URS) to implementation and testing of your system. This ensures an optimal and efficient design.

The individuality of your application may require a variety of function-specific settings and measurement systems. Rotronic is one of the leading suppliers in the world for humidity and temperature measurement equipment. Benefit from our know-how and let our application engineers design the optimal measuring system for you.



Validation & qualification


FDA CFR 21 Part 11 is not just a title.

Validation is a process for creating documents that show that a procedure, process or activity maintains the desired level of compliance at all stages.

Missing information and poorly specified or inadequately tested systems represent a risk and can lead to high maintenance costs and losses in productivity.

Rotronic supports you in all areas relating to validation:

1. Development of SOP for system validation
2. Preparation of project-related validation plans and risk analyses
3. Preparation of IQ/OQ-PQ documents
4. Preparation of validation reports
5. And others

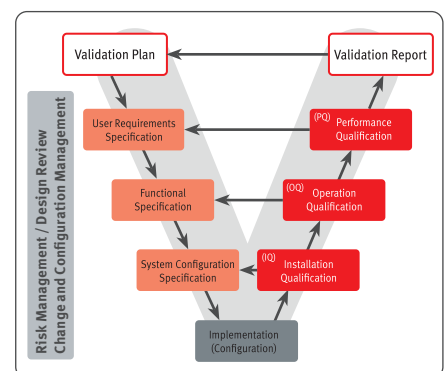

V-model (validation)

Your benefits

- Competence in validation directly from the manufacturer
- FDA/GAMP-compliant systems

Queries

support-rh@rotronic.ch

On-site calibration ISO 9001

Benefit from our mobile calibration facilities.

You do not like long downtimes of your measuring equipment/test equipment? Then why not take advantage of our offer to calibrate your measuring equipment at your premises. Our calibration engineers will come to your production line/facilities/premises with portable humidity & temperature generators and calibrate your measuring equipment with minimum downtime.

If you do not wish to have external work carried out on your production lines/facilities/premises directly due to its disruptive nature, we will park in front of your company and calibrate your measuring and testing equipment in our air-conditioned calibration mobile. For further information, please go to: www.kalibriermobil.com



ISO 9001 calibration (laboratory)

Customers have relied on our know-how in calibration since 1965.

In our factory calibration laboratory, we operate systems according to standardized procedures, documented in accordance with ISO 9001, enabling us to ensure top and consistent calibration quality and to guarantee same to our customers. Ongoing communication between the SCS laboratory (ISO 17025) and the calibration team for factory calibrations increases the knowledge of both teams and benefits the customer!

Further, as manufacturer of the internationally known humidity & temperature generator Hygro-Gen HG2, we are able to offer our experience not only to end customers but also to competitors as users of our know-how and equipment.



ISO 17025 calibration


The Swiss Rotronic ISO 17025 laboratory has existed since 1995 benefit from our experience.

In our SCS 0065 accredited calibration laboratory, we offer the highest and traceable accuracy for your temperature and relative humidity measurement devices. The accuracy of measuring instruments can only be confirmed by regular calibration. Rotronic operates its state-of-the-art calibration laboratory (ISO 17025 accredited) with efficiency and the highest quality.

All our references are traceable to the national standard with excellent measurement uncertainty. We calibrate Rotronic instruments as well as third-party products.

Accredited calibration laboratories worldwide

- Switzerland: SCS 0065 calibration laboratory
ISO 17025 accredited by SAS and traceable to the national standard
- Germany: SCS 0065 calibration laboratory
ISO 17025 accredited by SAS and traceable to the national standard.
- England: UKAS 0766 calibration laboratory
ISO 17025 accredited by UKAS and traceable to NPL
- USA: Cert. no. 5622.01 calibration laboratory
ISO 17025 accredited by A2LA and traceable to NIST

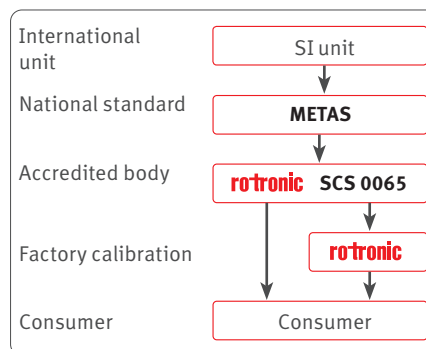

Calibration hierarchy (e.g. Switzerland)

Your benefits

- Higher confidence and recognition of calibration certificates by auditors (ISO 17025)
- Highly accurate SCS calibration (ISO 17025)
- Expedited calibration available

Queries

calibration@rotronic.ch

Mapping of warehouses, climate chambers, rooms, etc.


Incorrect climatic conditions can result in expensive damage to your products.

The protection of the quality of temperature-sensitive products during transport and storage is an important and essential component of the GxP directive. The basis for observance of legal regulations is GxP-compliant qualification of the transport equipment or storage facility. We have specialized in these services and offer you an efficient solution tailored exactly to your requirements for:


- Storage rooms
- GxP clean rooms
- Fridges
- Freezers
- Trucks
- Shipping boxes
- And many more

Take advantage of our all-round service:

- Advice on compliance with official requirements
- Placement/Distribution of the calibrated Rotronic data loggers
- Evaluation and interpretation of the climatic conditions measured
- Preparation of a GxP-compliant report incl. delivery of the calibration certificates for the loggers used
- A Rotronic qualification engineer will explain and substantiate the GxP-compliant data directly on customer request in the case of a possible audit

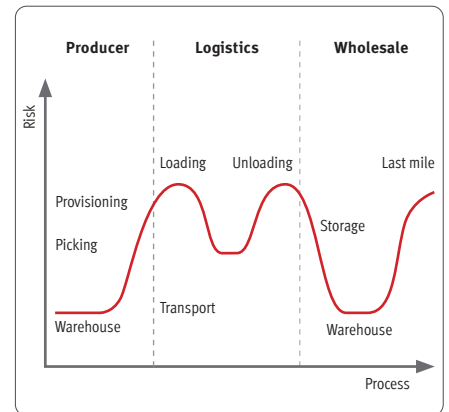

Risk assessment for shipping of pharmaceutical products

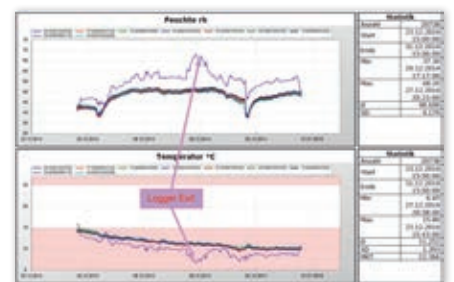

Example view of a temperature and humidity mapping



Temperature mapping warehouses



Temperature mapping production rooms



Temperature mapping climate chambers



Temperature mapping transport chambers

Your benefits

- Exact data on the climate in the room
- Mapping conforming to FDA & GxP
- Knowledge of possible danger zones in the controlled climate

Queries

support-rh@rotronic.ch

Services

- Warehouse qualification and validation (climate mapping)
- Transport qualification
- Climate chamber mapping
- Maintenance and installation of measuring systems
- On-site calibrations

Calibration seminar & training

Experience is the best teacher tap into our wealth of experience!

Our seminars are used by customers working in various fields to refresh their knowledge or to learn the basics of, for example, calibration.

They benefit from, for example, calibrations carried out in practice and apply the knowledge they have acquired immediately. A calibration seminar can be held in the Rotronic training room or carried out at your premises.

Topics:

- Principles of humidity and temperature measurement
- Principles of sensor technology and calibration
- How often should/must calibration be performed?
- What are the pitfalls in calibration?
- Open discussion on your application
- Practical exercises



Repair & maintenance

If it makes sense, we will gladly reduce the mountain of equipment to be disposed of.

Once you have opted for a measurement instrument from Rotronic, you will soon discover you are working with a solution that offers an unmatched benefit: long-term stability!

If, however, your instrument becomes damaged, you can rely on a fast, high-quality and customer-orientated after sales service from Rotronic.



Equipment hire to customers

Rent instead of buying – our equipment is waiting for you.

HygroGen2 (HG2-S) humidity and temperature generator

Many customers have their measuring instruments calibrated in our accredited laboratory others prefer to perform the calibration themselves. Rotronic provides the HygroGen2 humidity and temperature generator for on-site calibrations.

Renting the device saves you investment in your own instrument and you receive equipment with outstanding accuracy that is traceable to our SCS (ISO 17025) laboratory at all times. Calibrate your Rotronic or third-party probes with the easy-to-use HygroGen humidity and temperature generator.

If you initially feel a little unsure, simply hire a Rotronic technician as well. He will explain the calibration procedure to you and help you with your first own calibrations/adjustments.

Features of the HG2-S:

- Generates a stable reference environment (humidity and temperature)
- Calibration solution for the laboratory and on-site
- Humidity equilibrium typically in only 5 minutes
- Calibrates up to 6 probes simultaneously
- Integrated touch screen PC with 9 USB ports
- Integrated FDA 21 CFR Part 11-compliant Rotronic HW4 software
- Range 5...95 %rh (2...99 %rh with range extension option) 0...60 °C



HL-1D data logger

We also rent out data loggers for short-term use. The humidity and temperature data are recorded in an interval defined by you.

Typical applications for the HL-1D data logger are:

- Humidity and temperature monitoring in storage and production rooms
- Humidity and temperature mapping in product packaging, cooling systems, shipping processes, etc. for foods and other sensitive products

The HL-1D data logger records your data in a definable interval of time. Please contact your local Rotronic representative if you are interested.



Your benefits

- Low maintenance costs for measuring systems
- High availability of replacements
- Short production downtimes
- Pick-up service by arrangement

Queries

support-rh@rotronic.ch

Humidity and Temperature



Temperature



Differential pressure



CO₂



Applications



Rotronic Monitoring System – RMS



Software



EcoLine – Humidity & Temperature



Services



Theory



Fundamental terms of humidity measurement

Water vapor density (absolute humidity)

This is the amount of water vapor (kg) contained per unit volume (m³) of the gas mixture. In a gas mixture the water vapor generates a certain partial pressure that is part of the total barometric gas pressure. The vapor pressure can only rise to its saturation limit, which is determined by the temperature. Thereafter water is given off in liquid form (dew). The maximum pressure is called saturation pressure and is temperature dependent. The temperature dependency is, however, not included in the term of absolute humidity.

Relative humidity

Relative humidity is the relationship between the actual water vapor pressure and the maximum possible water vapor pressure.

$$\%rh = 100 \cdot \frac{p}{ps}$$

%rh: Relative humidity percentage

p: Water vapor pressure in the gas mixture at ambient temperature

ps: Water vapor saturation pressure at ambient temperature

100 %rh corresponds to the maximum amount of water vapor a gas mixture can contain at constant pressure and constant temperature. At constant water vapor partial pressure and changing ambient temperature, the water vapor saturation pressure changes and consequently the relative humidity also changes (see water vapor saturation pressure).

To obtain useful measurements of relative humidity, it is extremely important that the measurement probe and measured material have the same temperature.

Equilibrium relative humidity (ERH)

A hygroscopic material always tries to reach humidity equilibrium with the surrounding air. Equilibrium relative humidity is the free water content in a hygroscopic material after equilibrium is reached in an environment with constant relative humidity and temperature.

Humidity equilibrium then prevails when the amount of water absorbed and given off is equal.

Response time of Rotronic sensors

Rotronic defines the response time of its sensors as the time taken to complete 63% of a step change in humidity levels. The response time becomes greater at low temperatures and low air movement. It also increases when a filter is used as the water vapor is transported through the filter more slowly due to the reduced air flow and the water exchange takes place with slower diffusion of the water molecules.

Video Humidity

Interested? Then scan the QR code!



Psychrometric parameters

Dew point / Frost point (Dp / Fp)

The dew point is the temperature at which the air over water is saturated with water vapor at a constant air pressure. The water vapor pressure that then prevails is the same as the water vapor saturation pressure.

Wet bulb temperature (Tw)

This is the lowest temperature that can be reached by evaporative cooling. The water given off by a wet surface is then in equilibrium with the water absorption capacity of the surrounding atmosphere.

Enthalpy (H)

To obtain useful measurements of relative humidity, it is extremely important that the measurement probe and measured material have the same temperature. The specific enthalpy of moist air is an energetic property. It is composed of the specific enthalpies of the components in the mixture (dry air, water vapor) and is related to the mass fraction of the dry air. It is given in J/kg.

Specific humidity (Q) in g/kg

This is the ratio of the mass of the water vapor to the mass of the complete gas mixture containing the water vapor.

Vapor concentration (Dv) in g/m³

This is the ratio of the mass of the water vapor to the volume of the complete gas mixture containing the water vapor.

Mixing ratio (R) in g/kg

This is the ratio of the mass of the water vapor to the mass of the dry gas mixture containing the water vapor.

Water vapor partial pressure (E) in hPa

This is the fraction of the total pressure of a gaseous mixture due to water vapor.

Water vapor saturation pressure (Ew) in hPa

This is the maximum pressure that water vapor can reach over a water surface at a given temperature.

Mean kinetic temperature (MKT)

The mean kinetic temperature is the total influence of temperature on an object or product over a certain period of time.

Probe use in practice

As a world-leading manufacturer of humidity measurement instruments, Rotronic is fully aware of its responsibility to offer instruments that can withstand the harshest operating conditions, while remaining user-friendly and requiring minimal maintenance. At the same time we urge our users to ensure excellent performance of the measurement instruments at the expense of little effort. The following checklist is provided as a guide.

1. Analyze the environment in which the humidity probe is used. What suspended substances and/or chemicals exist and in what concentration?
2. Install the probe at a place representative of the measured climate with good airflow across the sensor.
3. Choose the right filter. Measurement is fastest without a filter. For wind velocities higher than 3 m/s, however, a filter must be used. The filter protects the sensor up to airflow velocities of 40 m/s. Suitable filters must also be used in the case of contaminants/pollutants and in harsh environmental conditions.
4. Install the probe correctly to suit the application.
5. Inspect and replace the filter more frequently in harsh operating conditions. Filters can be cleaned in an ultrasonic bath. However, always keep a new filter set in stock.
6. Check that the measurement probe is working correctly by performing a calibration at least every 6 to 12 months.
7. For calibration, use one of our calibration services or the SCS-certified humidity standards. This will ensure your calibration is traceable to national standards.

PT100 temperature sensors

A PT100 sensor changes its electrical resistance with every change in temperature in its environment. Its resistance value is 100 Ohms at 0 °C. This characteristic is used in a bridge circuit to generate a signal suitable for further processing. There are five quality classes with the following tolerances at 0 °C.

| | |
|---------------|---------|
| Class B: | ±0.3 K |
| Class A: | ±0.15 K |
| Class B 1/3: | ±0.1 K |
| Class B 1/5: | ±0.06 K |
| Class B 1/10: | ±0.03 K |

The table below illustrates the tolerances for each PT100 sensor class at different temperatures.

| Temp. °C | Tolerance | | | | | | | | | |
|----------|-----------|------|---------|------|-------------|------|-------------|------|--------------|------|
| | Class A | | Class B | | 1/3 Class B | | 1/5 Class B | | 1/10 Class B | |
| | ± K | ± Ω | ± K | ± Ω | ± K | ± Ω | ± K | ± Ω | ± K | ± Ω |
| -200 | 0.55 | 0.24 | 1.3 | 0.56 | 0.44 | 0.19 | 0.26 | 0.11 | 0.13 | 0.06 |
| -100 | 0.35 | 0.14 | 0.8 | 0.32 | 0.27 | 0.11 | 0.16 | 0.06 | 0.08 | 0.03 |
| 0 | 0.15 | 0.06 | 0.3 | 0.12 | 0.1 | 0.04 | 0.06 | 0.02 | 0.03 | 0.01 |
| 100 | 0.35 | 0.13 | 0.8 | 0.3 | 0.27 | 0.1 | 0.16 | 0.05 | 0.08 | 0.03 |
| 200 | 0.55 | 0.2 | 1.3 | 0.48 | 0.44 | 0.16 | 0.26 | 0.1 | 0.13 | 0.05 |
| 300 | 0.75 | 0.27 | 1.8 | 0.64 | 0.6 | 0.21 | 0.36 | 0.13 | 0.18 | 0.06 |
| 400 | 0.95 | 0.33 | 2.3 | 0.79 | 0.77 | 0.26 | 0.46 | 0.16 | 0.23 | 0.08 |
| 500 | 1.15 | 0.38 | 2.8 | 0.93 | 0.94 | 0.31 | 0.56 | 0.19 | 0.28 | 0.09 |
| 600 | 1.35 | 0.43 | 3.3 | 1.06 | 1.1 | 0.35 | 0.66 | 0.21 | 0.33 | 0.1 |
| 650 | 1.45 | 0.46 | 3.6 | 1.13 | 1.2 | 0.38 | 0.72 | 0.23 | 0.36 | 0.11 |

New standard

The manufacturing tolerances were formerly sub-divided into the accuracy Classes A and B (see above). The new standard contains the additional classes AA and C. Within the validity range of every class for wire-wound resistors and film resistors, the limit deviations (tl) are given in dependence on the temperature (t) in Celsius:

| | |
|-----------|---------------------------------------|
| Class AA: | $tl = 0.1 \text{ K} + 0.0017 \cdot t$ |
| Class A: | $tl = 0.15 \text{ K} + 0.002 \cdot t$ |
| Class B: | $tl = 0.30 \text{ K} + 0.005 \cdot t$ |
| Class C: | $tl = 0.6 \text{ K} + 0.01 \cdot t$ |

Example for Class B: At 200 °C deviations in the measured value of up to ± 1.3 K are allowed.

Accuracy of HC2A probes

ACCURACY SPECIFICATION FOR HUMIDITY AND TEMPERATURE

With its accuracy specification, Rotronic states the maximum permissible deviation of the HygroClip probe from the Rotronic SCS reference. The accuracy specification applies at the adjusted humidity and temperature values.

A validated and permanently monitored process guarantees that all HygroClip probes undergoing production match the Rotronic references used. In addition to this, samples are taken from every production batch and checked for accuracy against SCS references.

Humidity

ACCURACY OF HUMIDITY MEASUREMENTS OVER THE MEASURING RANGE

HygroClip2 industrial probes
HC2A-IC / HC2A-IM / HC2A-IE


HygroClip2 probes
HC2A-S(3) / HC2A-SM

Continuous load

Rotronic HC2A industrial probes are designed for continuous loads of up to 190 °C. Rotronic standard probes up to 100 °C.

¹ Peak load:

The peak load at 200 °C is 100 h. See the sensor data sheet for detailed information on the pollution loads for the sensor.

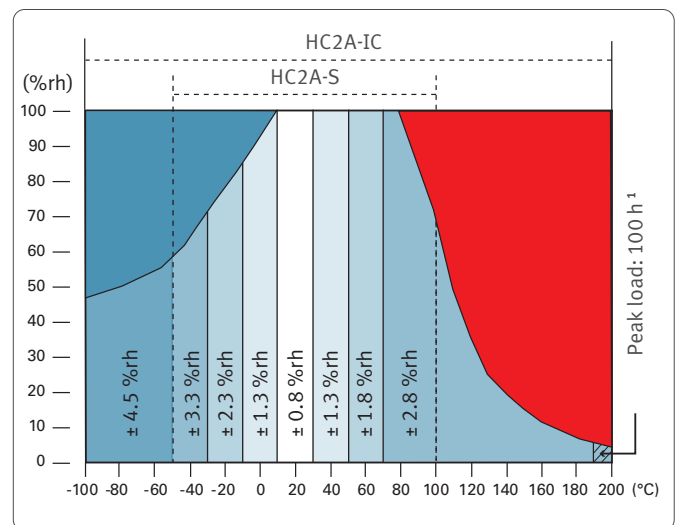


Temperature

ACCURACY OF TEMPERATURE MEASUREMENTS OVER THE MEASURING RANGE

HygroClip2 industrial probes
HC2A-IC / HC2A-IM / HC2A-IE

HygroClip2 probes
HC2A-S(3) / HC2A-SM

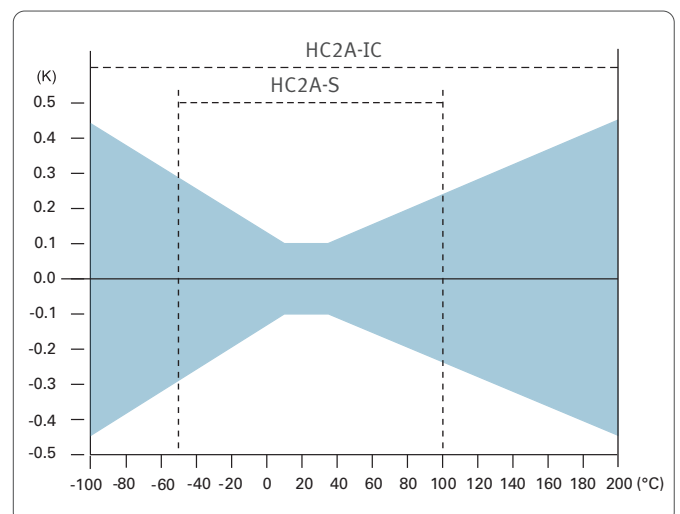

Contaminants/Pollutants

Some gases and contaminants/pollutants can damage Rotronic humidity sensors. The contaminants/pollutants can be divided into two categories: gases without influence and gases with an influence on the humidity sensors.

For contaminants/pollutants with an influence on the sensors and therefore with an influence on the measurement result, the maximum constant concentration must be known (see table below).

Contaminants/Pollutants with an influence

| Contaminant/Pollutant | Formula | MAC value | | Permissible constant concentration | | | | | |
|-----------------------|---|-----------|-------------------|------------------------------------|-------------------|------|-------------------|------|-------------------|
| | | | | IN-1 | | HH-1 | | HT-1 | |
| | | ppm | mg/m ³ | ppm | mg/m ³ | ppm | mg/m ³ | ppm | mg/m ³ |
| Acetone | CH ₃ COCH ₃ | 1000 | 2400 | 3300 | 8000 | 3700 | 9000 | 3300 | 8000 |
| Ammonia | NH ₃ | 25 | 18 | 5500 | 4000 | 5500 | 4000 | 5500 | 4000 |
| Petrol | | 300 | 1200 | | 150000 | | 150000 | | 150000 |
| Chlorine | Cl ₂ | 0.5 | 1.5 | 0.7 | 2 | 1.5 | 4.5 | 0.7 | 2 |
| Acetic acid | CH ₃ COOH | 10 | 25 | 800 | 2000 | 1000 | 2500 | 800 | 2000 |
| Ethyl acetate | CH ₃ COOC ₂ H ₅ | 400 | 1400 | 4000 | 15000 | 4000 | 15000 | 4000 | 15000 |
| Ethanol | C ₂ H ₅ OH | 1000 | 1900 | 3500 | 6000 | 5800 | 10000 | 3500 | 6000 |
| Ethylene glycol | HOCH ₂ CH ₂ OH | 100 | 260 | 1200 | 3000 | 1200 | 3000 | 1200 | 3000 |
| Formaldehyde | HCHO | 1 | 1.2 | 2400 | 3000 | 2400 | 3000 | 2400 | 3000 |
| Isopropanol | (CH ₃) ₂ CHOH | 400 | 980 | 4800 | 12000 | 6000 | 15000 | 4800 | 12000 |
| Methanol | CH ₃ OH | 200 | 260 | 3500 | 6000 | 6000 | 8000 | 3500 | 6000 |
| Methyl ethyl keton | C ₂ H ₅ COCH ₃ | 200 | 590 | 3300 | 8000 | 3300 | 8000 | 3300 | 8000 |
| Ozone | O ₃ | 0.1 | 0.2 | 1 | 2 | 1.5 | 3 | 1 | 2 |
| Hydrochloric acid | HCl | 5 | 7 | 300 | 500 | 300 | 500 | 300 | 500 |
| Sulfur dioxide | SO ₂ | 5 | 13 | 5 | 13 | 5 | 13 | 5 | 13 |
| Hydrogen sulfide | H ₂ S | 10 | 15 | 350 | 500 | 350 | 500 | 350 | 500 |
| Nitrous gases | NO _x | 5 | 9 | 5 | 9 | 5 | 9 | 5 | 9 |
| Toluene | C ₆ H ₅ CH ₃ | 100 | 380 | 1300 | 5000 | 1800 | 7000 | 1300 | 5000 |
| Hydrogen peroxide | H ₂ O ₂ | 1 | 1.4 | 90 | 130 | 880 | 1200 | 90 | 130 |
| Xylene | C ₆ H ₅ (CH ₃) ₂ | 100 | 440 | 1300 | 5000 | 1800 | 7000 | 1300 | 5000 |

Contaminants/Pollutants without influence

Note that the common sealing material silicone damages the sensor! When probes are installed, silicone must not be used!

| Contaminant/Pollutant | Formula |
|-----------------------|--------------------------------|
| Argon | Ar |
| Butane | C ₄ H ₁₀ |
| Natural gas | |
| Ethane | C ₂ H ₆ |
| Helium | He |
| Methane | CH ₄ |
| Neon | Ne |
| Propane | C ₃ H ₈ |
| Oxygen | O ₂ |
| Nitrogen | N ₂ |
| Hydrogen | H ₂ |

Water activity

The measurement of water activity or equilibrium relative humidity (ERH) is a key parameter in the quality control of moisture sensitive products or materials. Water activity is by definition the free or non-chemically bound water in foods and other products. The bound water cannot be measured with this method.

WHY IS WATER ACTIVITY MEASURED?

The free water in a product influences its microbiological, chemical and enzymatic stability. This is especially important in the case of perishable products such as foodstuffs, grain, seeds, as well as for many products in the pharmaceutical and cosmetic industries. If there is too much free water available, the products spoil, and if there is too little water available, other product properties can be influenced negatively.

The table shows typical growth thresholds below which the specified organism cannot reproduce and therefore spoil the product. Control of water activity therefore has a significant impact on the shelf life of a product.

The measurement of water activity also provides useful information on properties such as the cohesion, storage life, agglomeration or pourability of powders, tablet stability, and the adherence of coatings.

| Water activity | Contaminant |
|-----------------|--------------------|
| aw = 0.91..0.95 | Many bacteria |
| aw = 0.88 | Many yeasts |
| aw = 0.80 | Many mildews |
| aw = 0.75 | Halophile bacteria |
| aw = 0.70 | Osmiophile yeasts |
| aw = 0.65 | Xerophile mildew |

The Rotronic water-activity probes work with digital HygroClip technology, which ensures their high performance and simple, digital calibration. They can therefore be used in practically all fields of application.

All water activity stations and probes incorporate temperature measurement as a standard feature. The water activity measurement stations measure in a range of 0...1 aw, which equates to 0...100 %rh, and supply a digital output signal, which can be displayed directly on a PC (HC2-AW-USB) or the HygroLab C1 and HP23-AW-A display units.

Digital calibration can be performed with these instruments or with HW4 software running on a PC. The HC2-AW probes have a large thermal mass. This means they react very slowly to temperature changes so that virtually no variations arise during measurement – especially when using the AW Quick function. The extremely small internal volume of the sensor chamber ensures humidity equilibrium is reached very quickly for all products.

Video water activity

Interested? Then scan the QR code!



CO₂

Principles

Carbon dioxide (CO₂) is a colorless and odorless gas that exists in the earth's atmosphere and which is dangerous in high concentrations. The proportion of CO₂ in natural ambient air is about 0.04 % or 400 ppm. When humans and animals exhale this gas, it is quickly mixed with the ambient air, including in rooms that are well ventilated.



A high CO₂ content becomes apparent in humans through rapid fatigue and loss of concentration. The negative effects become noticeable more quickly in small rooms in which there are many people (e.g. conference rooms).

In order to initiate suitable countermeasures such as an increase in the supply of fresh air, it is important in modern climate control systems to measure not only parameters such as relative humidity and temperature, but also the CO₂ content. The concentration of CO₂ is regarded as an important indicator for the indoor air quality.

Guidelines

| | | | | | |
|--------------------|-----------------|---|---|-----------------------------------|---|
| 350 – 450 ppm | 400 – 1,200 ppm | > 1,000 ppm | 5,000 ppm (0.5 %) | 38,000 ppm (3.8 %) | > 100,000 ppm (10 %) |
| Fresh air outdoors | Room air | Fatigue and loss of concentration become apparent | Maximum permissible value at the workplace during an 8-hour workday | Breathing air (direct exhalation) | Nausea, vomiting, loss of consciousness and death |

Measurement technique

The measurement technique is based on the principle of NDIR (non-dispersive infrared) sensors. This gas sensor works as a spectroscope and analyzes which wavelengths emitted by a light transmitter reach a receiver.

Calibration

All probes are pre-calibrated and have a lifetime of more than 15 years in normal applications. The automatic baseline correction means the sensors require no further calibration if they are used in indoor air applications.

Video CO₂

Interested? Then scan the QR code!




Differential pressure

What is pressure?

Pressure is the physical measurement of force per unit area and is often given in the SI unit Pascal [Pa]. Other units of measurement are also very widely used in pressure measurement technology. The automatic baseline correction means the sensors require no further calibration if they are used in indoor air applications.

Conversion table

| | | | |
|-------------------------|---------------------------|-------------|---------------|
| bar | mbar | psi | atm |
| 1.00 | 1,000.00 | 14.50 | 0.987 |
| Pa | hPa | kPa | MPa |
| 100,000.00 | 1,000.00 | 100.00 | 0.10 |
| mmH₂O | inchH₂O | mmHg | inchHg |
| 10,197.16 | 401.46 | 750.06 | 29.53 |

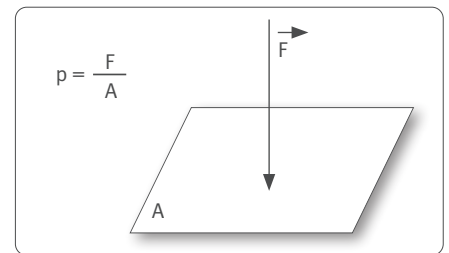


What is differential pressure?

Three different types of pressure are generally considered in pressure measurement technology: absolute pressure, relative pressure and differential pressure. Differential pressure is the drop in pressure between two spaces with different absolute pressures.


Where does Rotronic measure differential pressure?

Cleanrooms, i.e. environments in which a very low level of contamination may prevail, are pressurized slightly. This positive pressure guarantees controlled removal of dirt particles from the room. To monitor this positive pressure, one needs pressure transmitters with a very high measuring accuracy and a very low pressure measurement range. Rotronic offers such instruments.

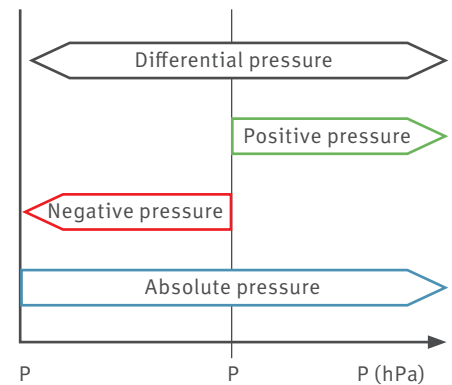

How does Rotronic measure differential pressure?

- Thermal mass flow principle
In this measurement technique, a heating element is placed between two temperature sensitive resistors. Due to a gas flow, the temperature profile is moved towards one of the resistors, which can be measured and evaluated.
- Strain gauge principle
In this technique the pressure is converted into a force, which stretches a diaphragm and is measured by a piezo-resistive MEMS diaphragm sensor.

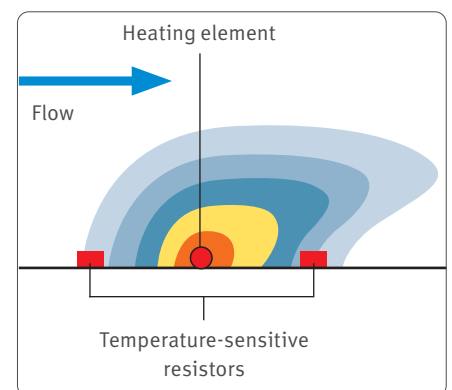

Pressure measurement technology – Glossary

| | |
|--------------------|--|
| Measurement range: | Pressure range in which the sensor can measure |
| Full scale: | Difference between the maximum and minimum measured pressure |
| % Full scale: | Measurement deviation in relation to full scale |
| System pressure: | Ambient pressure (often given as relative pressure, e.g. air pressure: 1013 hPa) |

Dew point

What is dew point?

As the term implies, it is the climate point at which the relative air humidity equals 100% and begins to condense. The dew point is given in °C Td. The dew point temperature is a measurement of the water vapor content in a gas. If air is compressed or expanded, its dew point temperature changes. If air is compressed, it is able to absorb less water and the dew point rises until the air is saturated and begins to condense. In this connection, the term pressure dew point measurement is also used to describe measurement of the dew point in gases above the ambient temperature.

What does low dew point measurement mean?

A low dew point is usually when the dew point temperature falls below -30 °C Td. This means that the air is extremely dry and contains almost no water molecules. A dew point of -38 °C Td corresponds at 23 °C to a humidity value of 0.8 %rh, which corresponds to the accuracy of a Rotronic HygroClip2 probe. This shows why low dew point measurement is very demanding. Very complex electronics and a highly sensitive sensor are needed to deliver high-quality results in the measurement of residual moisture.

What is important in low dew point measurement?

The measurement of such small numbers of water molecules places high demands on the measuring point. For example, it is important that there is always good airflow across the sensor so that representative measured values can be obtained. Rotronic offers a special measurement chamber for this that was developed specifically for the mechanical design of the dew point probe. Excessive flow can lead to a local pressure drop, which influences the measurement, while insufficient flow can result in measurement of a local microclimate. The constant airflow of the measurement chamber of 1 l/min. thus guarantees stable and reliable measurement results.

The equilibrium times in dew point measurements can be considerably longer than those for humidity measurements. All the materials in the system and around the sensor must be dried out. Under certain circumstances it can take hours before a low dew point system has balanced out and the residual moisture has escaped from all the materials.

Why is low dew point measured?

There can be many reasons for monitoring the dew point. Compressed air systems with an excessively high dew point can condense, thereby causing valves to become blocked or corroded. In addition to this, dry compressed air systems require less maintenance, which saves costs. Equipment connected to the system places high demands on dryness and require a low dew point of the compressed air. Further, there are sensitive processes such as the drying of injection molding granulate and the compressed air for spray painting systems, which place particularly high demands on the dew point of the system. Compressed air systems can further be classified according to ISO 8573. Depending on the classification of the system, there are different dew points that need to be monitored and controlled.

Video dew point measurement

Interested? Then scan the QR code!



What does ATEX mean?

ATEX comes from French and stands for Atmosphères Explosibles. The aim of this directive is to protect people when working in potentially explosive environments. It comprises two directives that define explosion protection for operation and products in risk environments. Rotronic ATEX devices are based on the ATEX Product Directive 94/19/EC.

How are ATEX devices specified?

There are two device groups. Device group I is suitable for use in mining/above ground and underground. Device group II is suitable for use in other potentially explosive atmospheres. Rotronic offers devices falling in device group II. Potentially explosive environments are subdivided into zones. A distinction is drawn between whether the explosion hazard exists because of dust or gas present in the environment.

| Gas zone | Dust zone | Hazard |
|----------|-----------|--|
| 0 | 20 | Constantly, frequently or over a longer period of time |
| 1 | 21 | Occasionally |
| 2 | 22 | Rarely and briefly |

Temperature classes define by how much the surface of the device may heat up in the case of a fault. This temperature is stated in the case of dust versions. Gas versions, by contrast, are subdivided into the following classes:

| Class | T1 | T2 | T3 | T4 | T5 | T6 |
|---------------------------------|--------|--------|--------|--------|--------|-------|
| Max. surface temperature | 450 °C | 300 °C | 200 °C | 135 °C | 100 °C | 85 °C |

What does the classification label of ATEX devices mean?

